


UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE#: 30417-1

Carefully unpack all Assembly parts from the carton.

1. Take the lamp carefully out of the Carton, and place it on a flat surface.
2. Place the **Lamp Base** in an upright position on the floor.
3. Position the **Part B** onto the **Lamp Base**, then thread the **Flat Washer** to tighten the **Hex Nut** by using **Wrench** enclosed in the Parts bag.
4. Loose the **Part C**, adjust **Part A** to the required height. Ensure **Part A** is vertical, and then turn **Part C** until tight. (Lowering it requires pulling excess cord where is exits the Base.)
5. Position the round plate on the top of the **Shade** through the **Socket**. Thread the **Metal Sleeve** onto the **Socket**. Then use **Plastic Wrench** to lock the **Socket Collar** to secure the **Shade**. Hand tighten until snug.
7. Install correct **Bulb** (Not Included) referring to fixture markings and /or labels for maximum wattage.

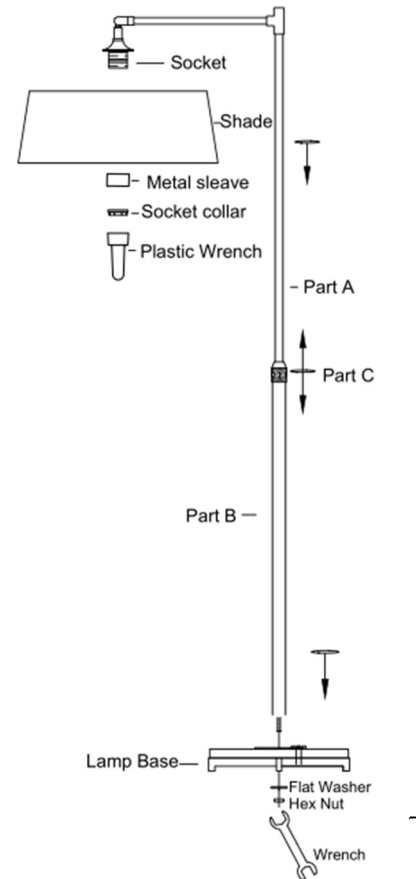

IMPORTANT SAFETY INSTRUCTIONS

This Floor lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.