

# REVELATION


by UTTERMOST

## ASSEMBLY INSTRUCTIONS

STYLE#: **R18948**

**Carefully unpack all Assembly parts from the carton.**

1. Take all parts carefully out of the Carton, and place them on a flat surface.
2. Position the **Nipple** of the **Frame** onto the **Base**, then thread the **Flat Washer** onto the **Nipple** tighten the **Hex Nut** by using **Wrench** enclosed in the parts bag.
3. Place the **Glass** into the **Frame** carefully.

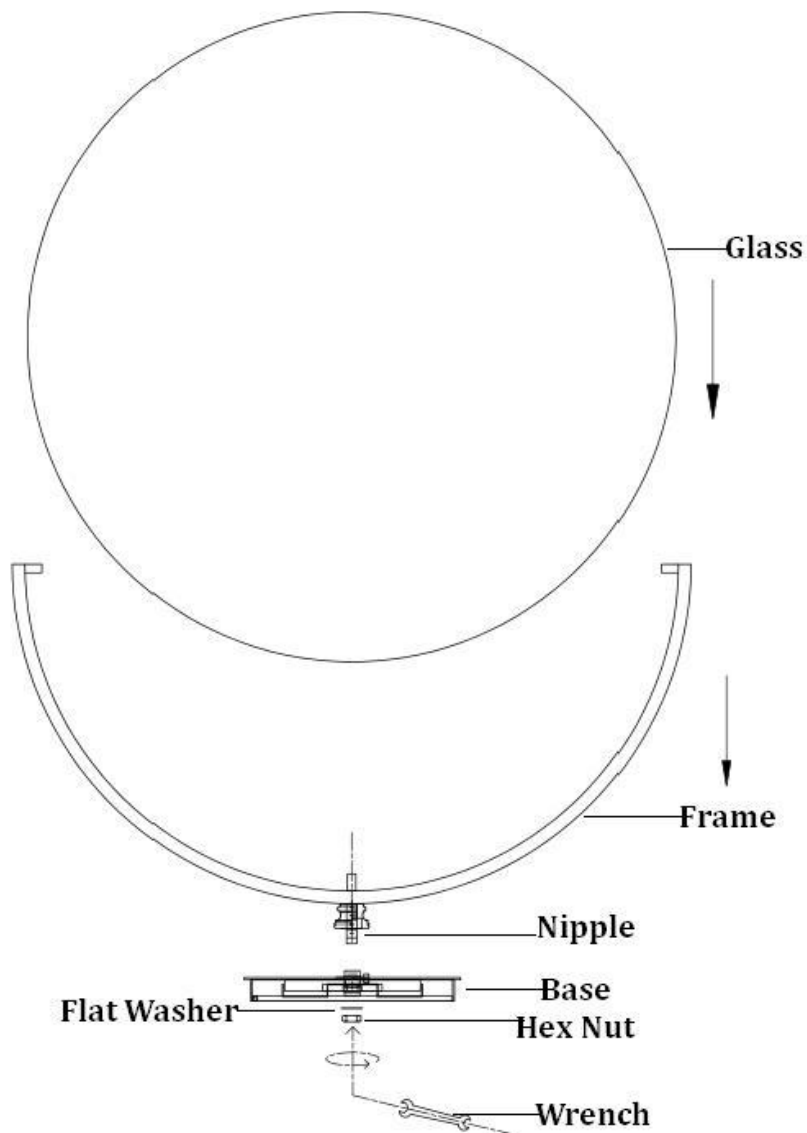

**R18948**

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151

[www.revelationbyuttermost.com](http://www.revelationbyuttermost.com)

