
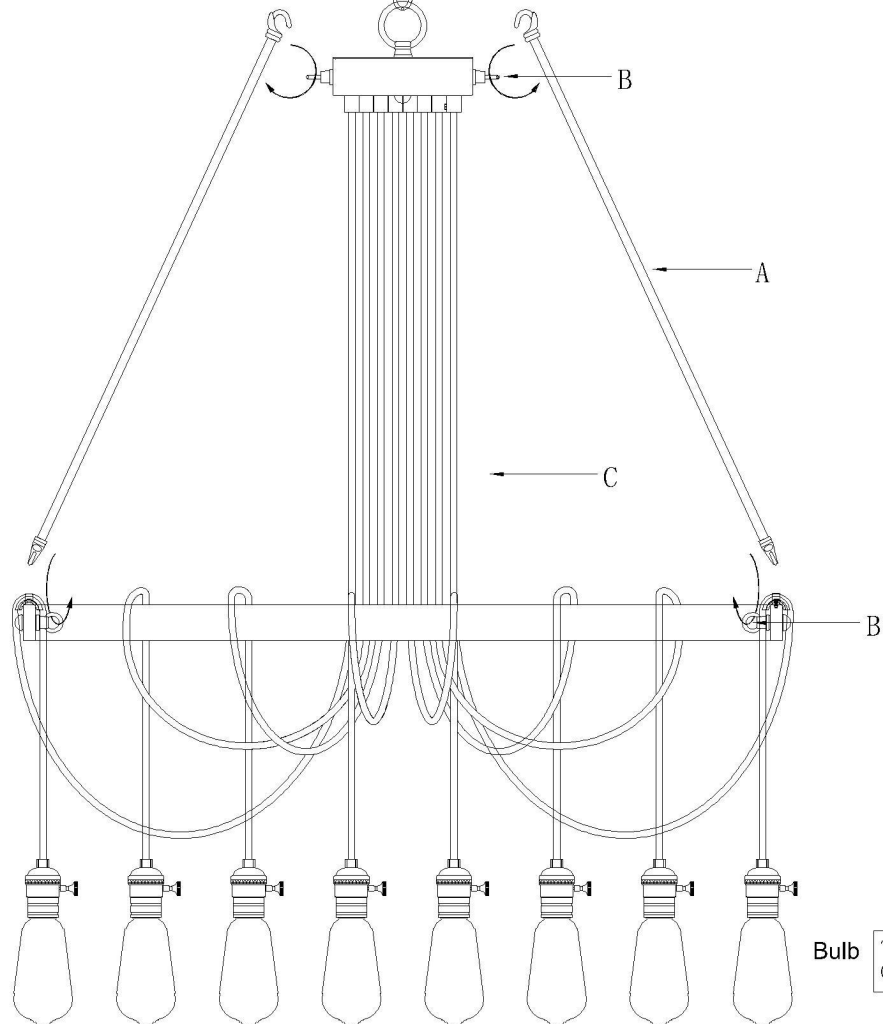
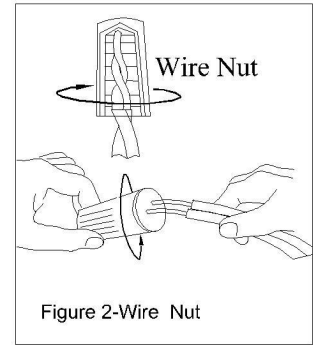
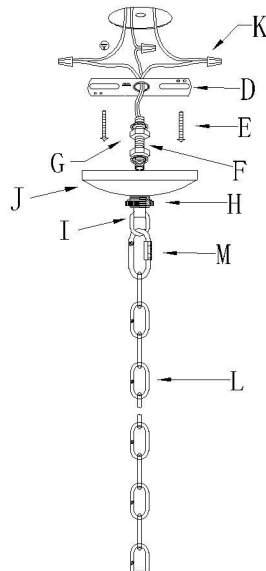


REVELATION

by UTTERMOST

STYLE NO. : R21320

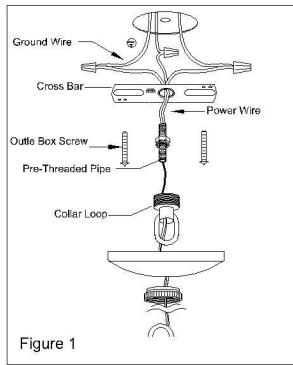

Bulb TYPE ST64 60W (INCLUDED)

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151
www.revelationbyuttermost.com

REVELATION

by UTTERMOST

STYLE NO. :R21320

Parts and Hardware List

A.	Tube with hook	4PC
B.	Metal ring	4PC
C.	Lamp body	1PC
D.	Cross Bar	1PC
E.	Outlet Box Screw	2PCS
F.	Pre-Threaded Pipe	1PC
G.	Hex Nut	2PCS
H.	Pre-Threaded Ring	1PC
I.	Collar Loop	1PC
J.	Canopy	1PC
K.	Wire Nut	3PCS
L.	Chain	1PC
M.	Quick Link	2PC

Please make sure that you have all the parts indicated before you begin assembling this item.

Please read wiring Instructions before you begin assembling and installing your Chandelier.

WARNING: BEFORE INSTALLING, make sure the electricity supply is shut off to avoid a possible electric shock.

1. Take the parts carefully out of the carton, and place them on a flat surface, make sure that the parts will not be damaged.
2. Attach tube with hook (A) to Metal ring (B) in Lamp body(C) .(See illustration)
3. Fasten the Cross Bar (D) to the outlet box by using the Outlet Box Screws.
4. Insert the shorter end of the Pre-Threaded Pipe (F) into the pre-drilled hole in the Cross Bar (D) and secure with the Hex Nut(G). (See illustration)
5. Attach the Collar Loop (I) to the exposed end of the Pre-Threaded Pipe (F) and secure by turning in a clockwise direction.
6. Attach one Quick Link to the Chain, then slip the Pre-Threaded Ring (H) first and then the Canopy (J) over the other end of the Chain (L) to Collar Loop (I).
7. Attach the other Quick Link (M) on other end of the Chain (L) to the Loop on the top of the Chandelier Assembly.
8. Adjust fixture wire length for your ceiling height. Lace the wire through other between every link of the Chain, through the Collar and up through the Pre-Threaded Pipe(F). (See illustration)
9. Connect the fixture ground wire with building's ground wire by using wire nut.
10. Place the white, ribbed or tinted wire evenly against the white wire from the outlet box and place the black, smooth or un-tinted wire evenly against the black wire from the outlet box (Connecting the Wires - See Figure 2)
11. After the wires are connected, tuck them carefully inside the outlet box. Place the Canopy (J) over the outlet box and secure with Pre-Threaded Ring (H).
12. Install 60 Watt, Type T bulbs (included) into the sockets of the fixture.

To clean, wipe with soft dry cloth.

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151

www.uttermost.com