

REVELATION

by UTTERMOST

ASSEMBLY INSTRUCTIONS

R21390

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF WHILE POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.

We suggest a licensed professional electrician for installation


Installation Steps

1. Turn power off at fuse or circuit box before starting installation process.
2. Carefully unpack your new fixture and lay out all the parts on a clear surface.
3. Fasten the universal bar to the outlet box, Secure the Nipple onto the Canopy .
4. Rotate F into G tightly, Choose the suitable number of Metal Rods, thread wire through rods and install the Metal Rod A,B,C,D into the Coupling. Remove excess wire.

Screw swivel on the Canopy as needed, and another end of swivel to screw on one end of the metal tube D.

If you don't need swivel, you can screw the metal tube D on canopy directly.

5. Slip Collar ring and Glass/Steel Canopy over the Rod assembly.
6. Rotate the Metal Rod into E.
7. Spread the Arms so that the Arms are at equal distance from each other.
8. Place Shade(H) on to Socket(J), secure with Ring(I) .
9. Raise fixture up and attach the Universal Bar to the Outlet Box by using two Outlet Box Screws .(See Figure1)
10. Install the Ground Wire in the Universal Bar with the supplied Green Ground Screw.
11. Place the null wire ,ribbed wire evenly against the ribbed wire from the Outlet Box and place the live wire, smooth wire evenly against the smooth wire from the Outlet Box,(Connecting the Wire--- See Figure 2)
12. Carefully tuck wires back into the Outlet Box.
13. Install 8*60W E12 bulbs (Not Supplied), in accordance with the fixture's specifications.

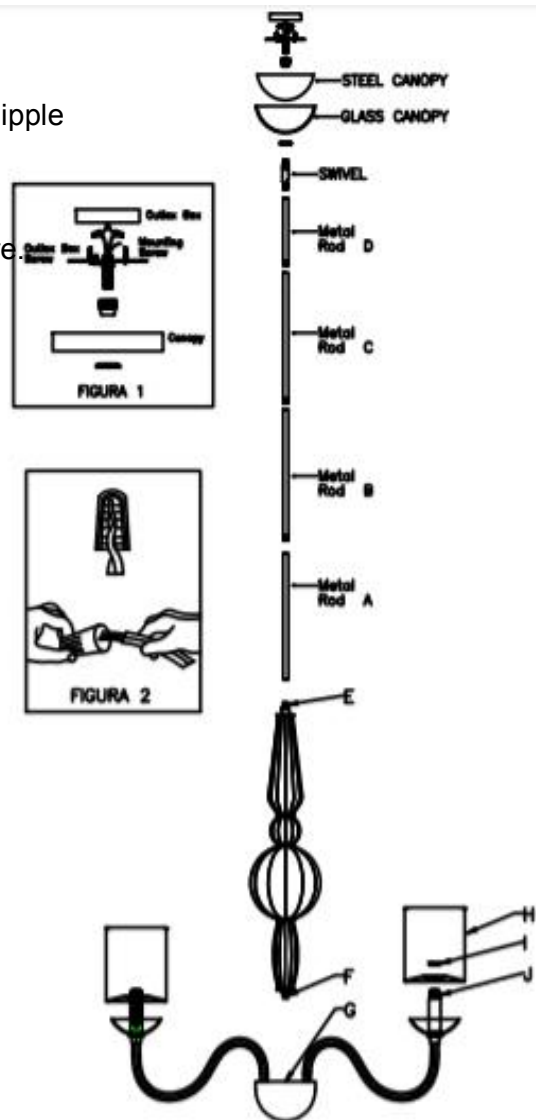

DO NOT EXCEED THE MAXIMUM WATTAGE RATING!

Swivel is included in hardware pack so you can use it if needed only.