

REVELATION

by UTTERMOST

ASSEMBLY INSTRUCTIONS

Illustration

STYLE NO. : R21601

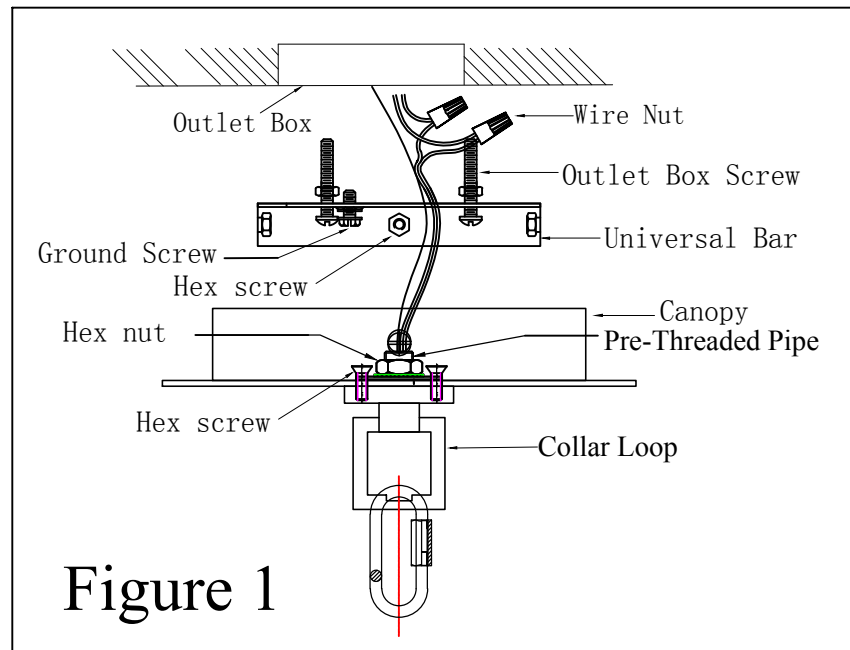


Figure 1


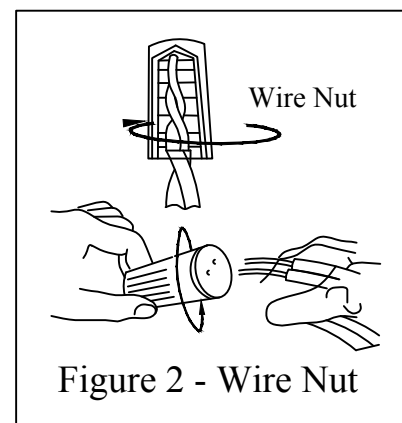


Figure 2 - Wire Nut

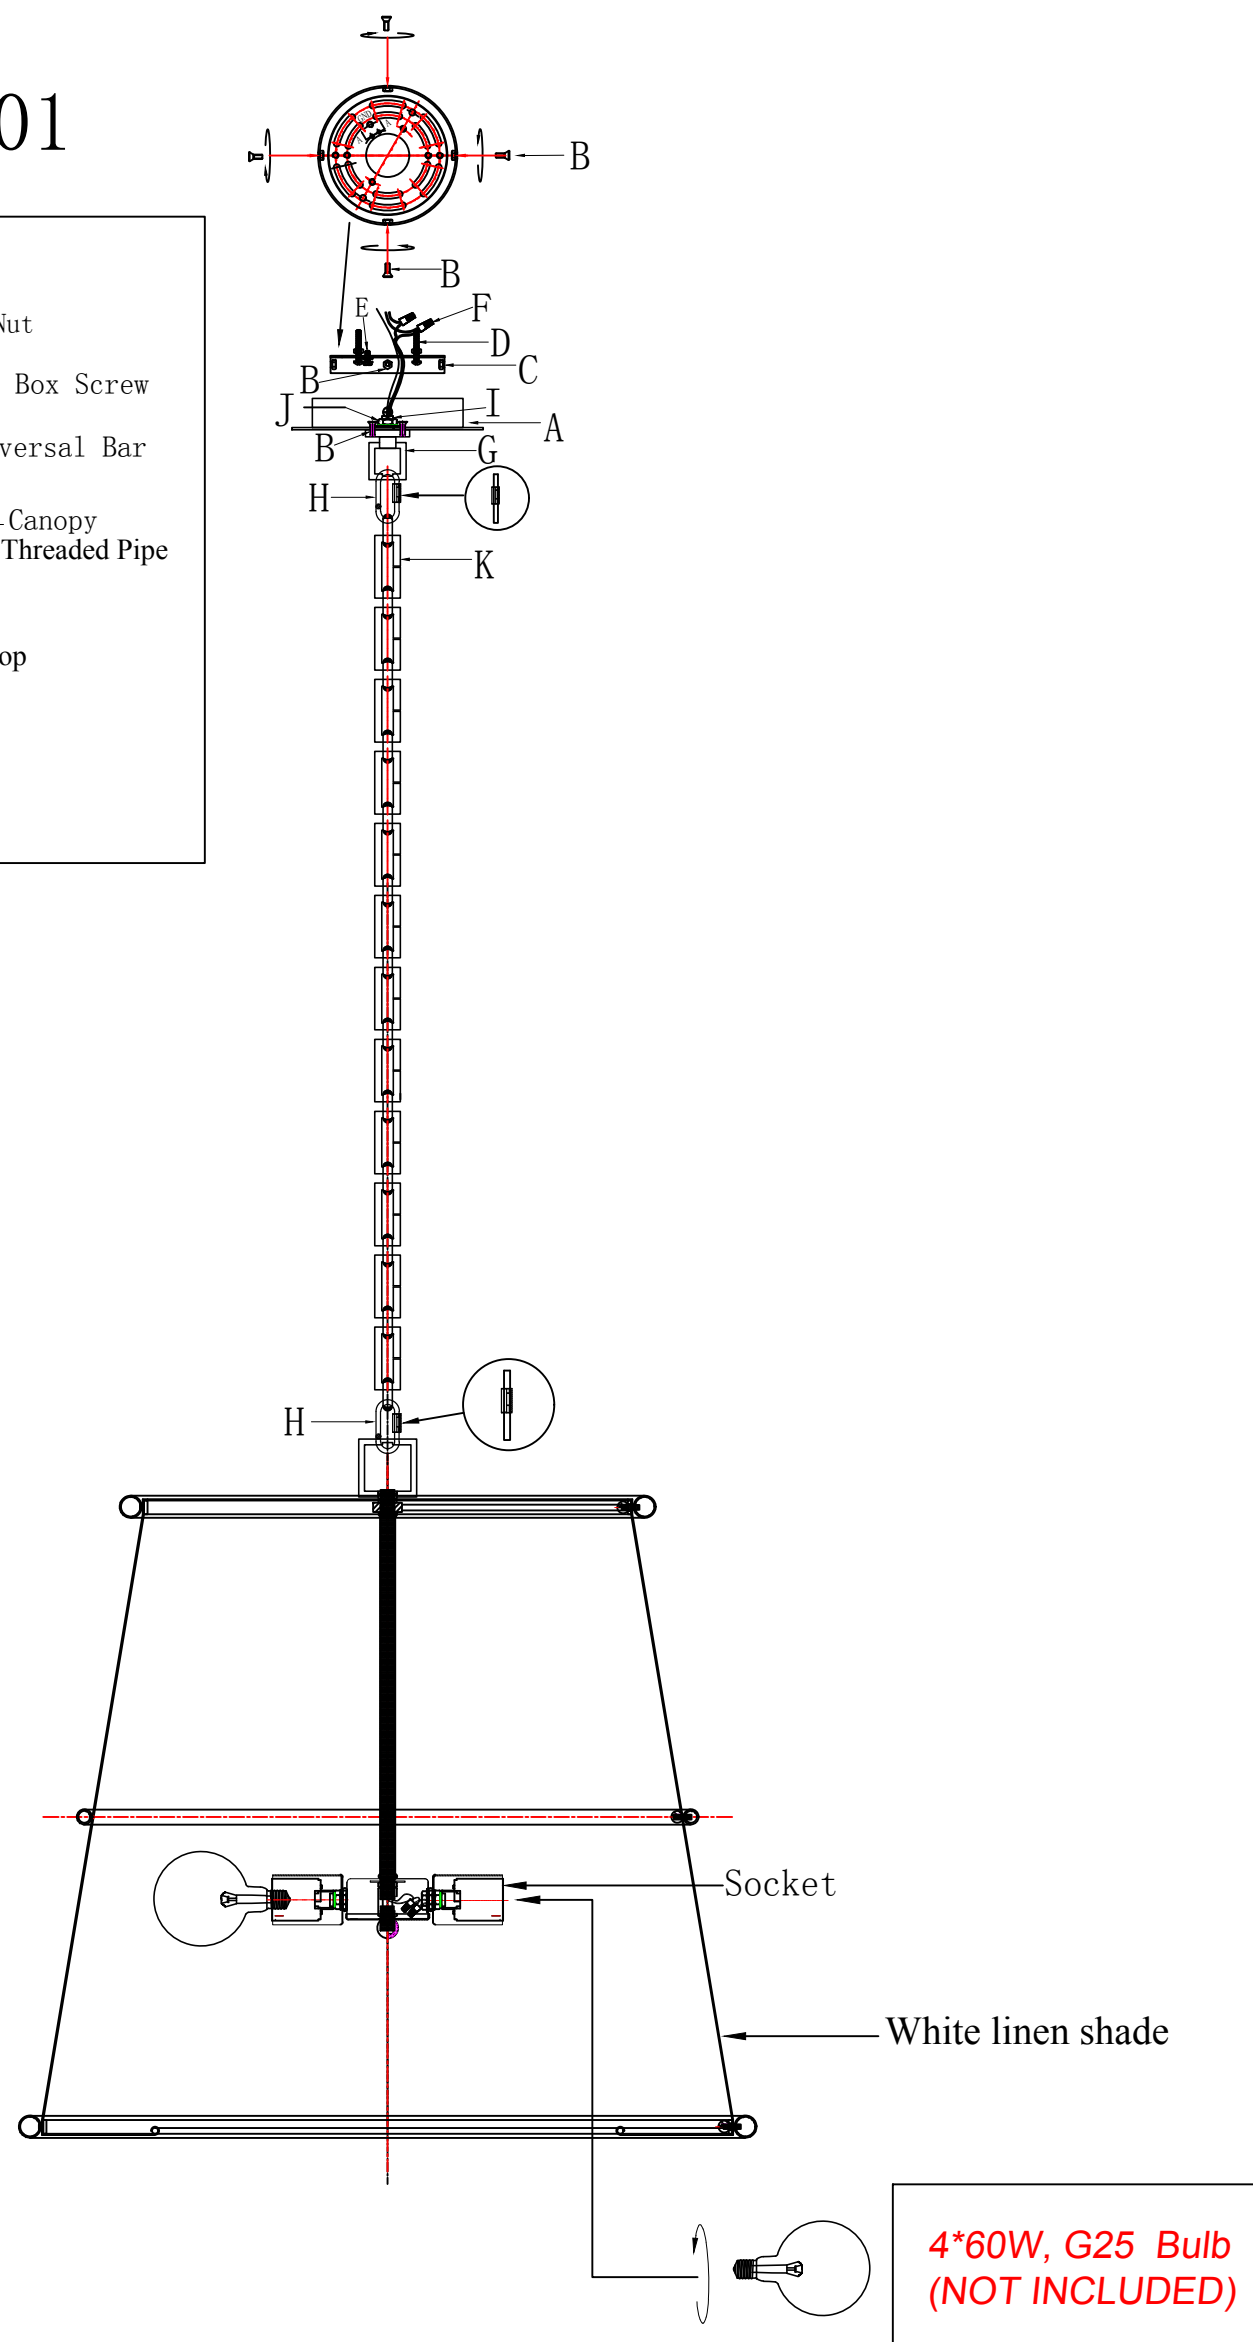

REVELATION

by UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE NO. : R21601

Parts and Hardware List

A.	Canopy	1PC
B.	Hex screw	2PCS
C.	Universal bar	1PC
D.	Outlet Box Screw	2PCS
E.	Green Ground Screw	1PC
F.	Wire Nut	3PCS
G.	Collar Loop	1PC
H.	Quick Link	2PCS
I.	Pre-Threaded Pipe	1PC
J.	Hex Nut	2PCS
K.	Chain	1PC

Please make sure that you have all the parts indicated before you begin assembling this item.

Please read Wiring Instructions before you begin assembling and installing your Ceiling Lamp.

WARNING: BEFORE INSTALLING, make sure the electricity supply is shut off to avoid a possible electric shock. We suggest a licensed electrician for all lighting fixture installations.

Assembly Instruction

- Carefully remove the parts and hardware from the carton.
- Fasten the Universal bar (C) onto the Outlet Box by using the Outlet Box Screws (D).
- Insert the shorter end of the Pre-Threaded Pipe (I) into the pre-drilled hole in the Universal bar (C) and secure with the Hex Nuts (J). (See illustration)
- Attach the Collar Loop (G) to the Canopy (A) with Hex screw (B).
- Attach one Quick Link (H) on one end of the Chain (K) to the Loop on the top of the Top Cover .
- The Canopy (A) over the other end of the Chain (K). Then attach the other Quick Link (H) on the other end of the Chain to the Collar Loop (G).
- The total chain length for this pendant lamp is only 3 feet, adjust chain length as needed for installation.** Place the wire through every other link of the Chain, through the Collar Loop and up through the Pre-Threaded Pipe (I). (See illustration)
Adjust wire length as needed for your installation, remove excess.
- Install both ground wires in the Universal bar (C) with the Green Ground Screw (E) supplied.
- Place the white wire, ribbed or tinted wire evenly against the white wire from the outlet box and place the black, smooth or un-tinted wire evenly against the black wire from the outlet box. (Connecting the Wires - See Figure 2)
- After the wires are connected, tuck them carefully inside the outlet box. Place the Canopy (A) over the Universal bar (C) and secure with Hex screw (B).
- Install 60 Watt, **G25 Bulb (NOT INCLUDED)** into the sockets of the fixture.