
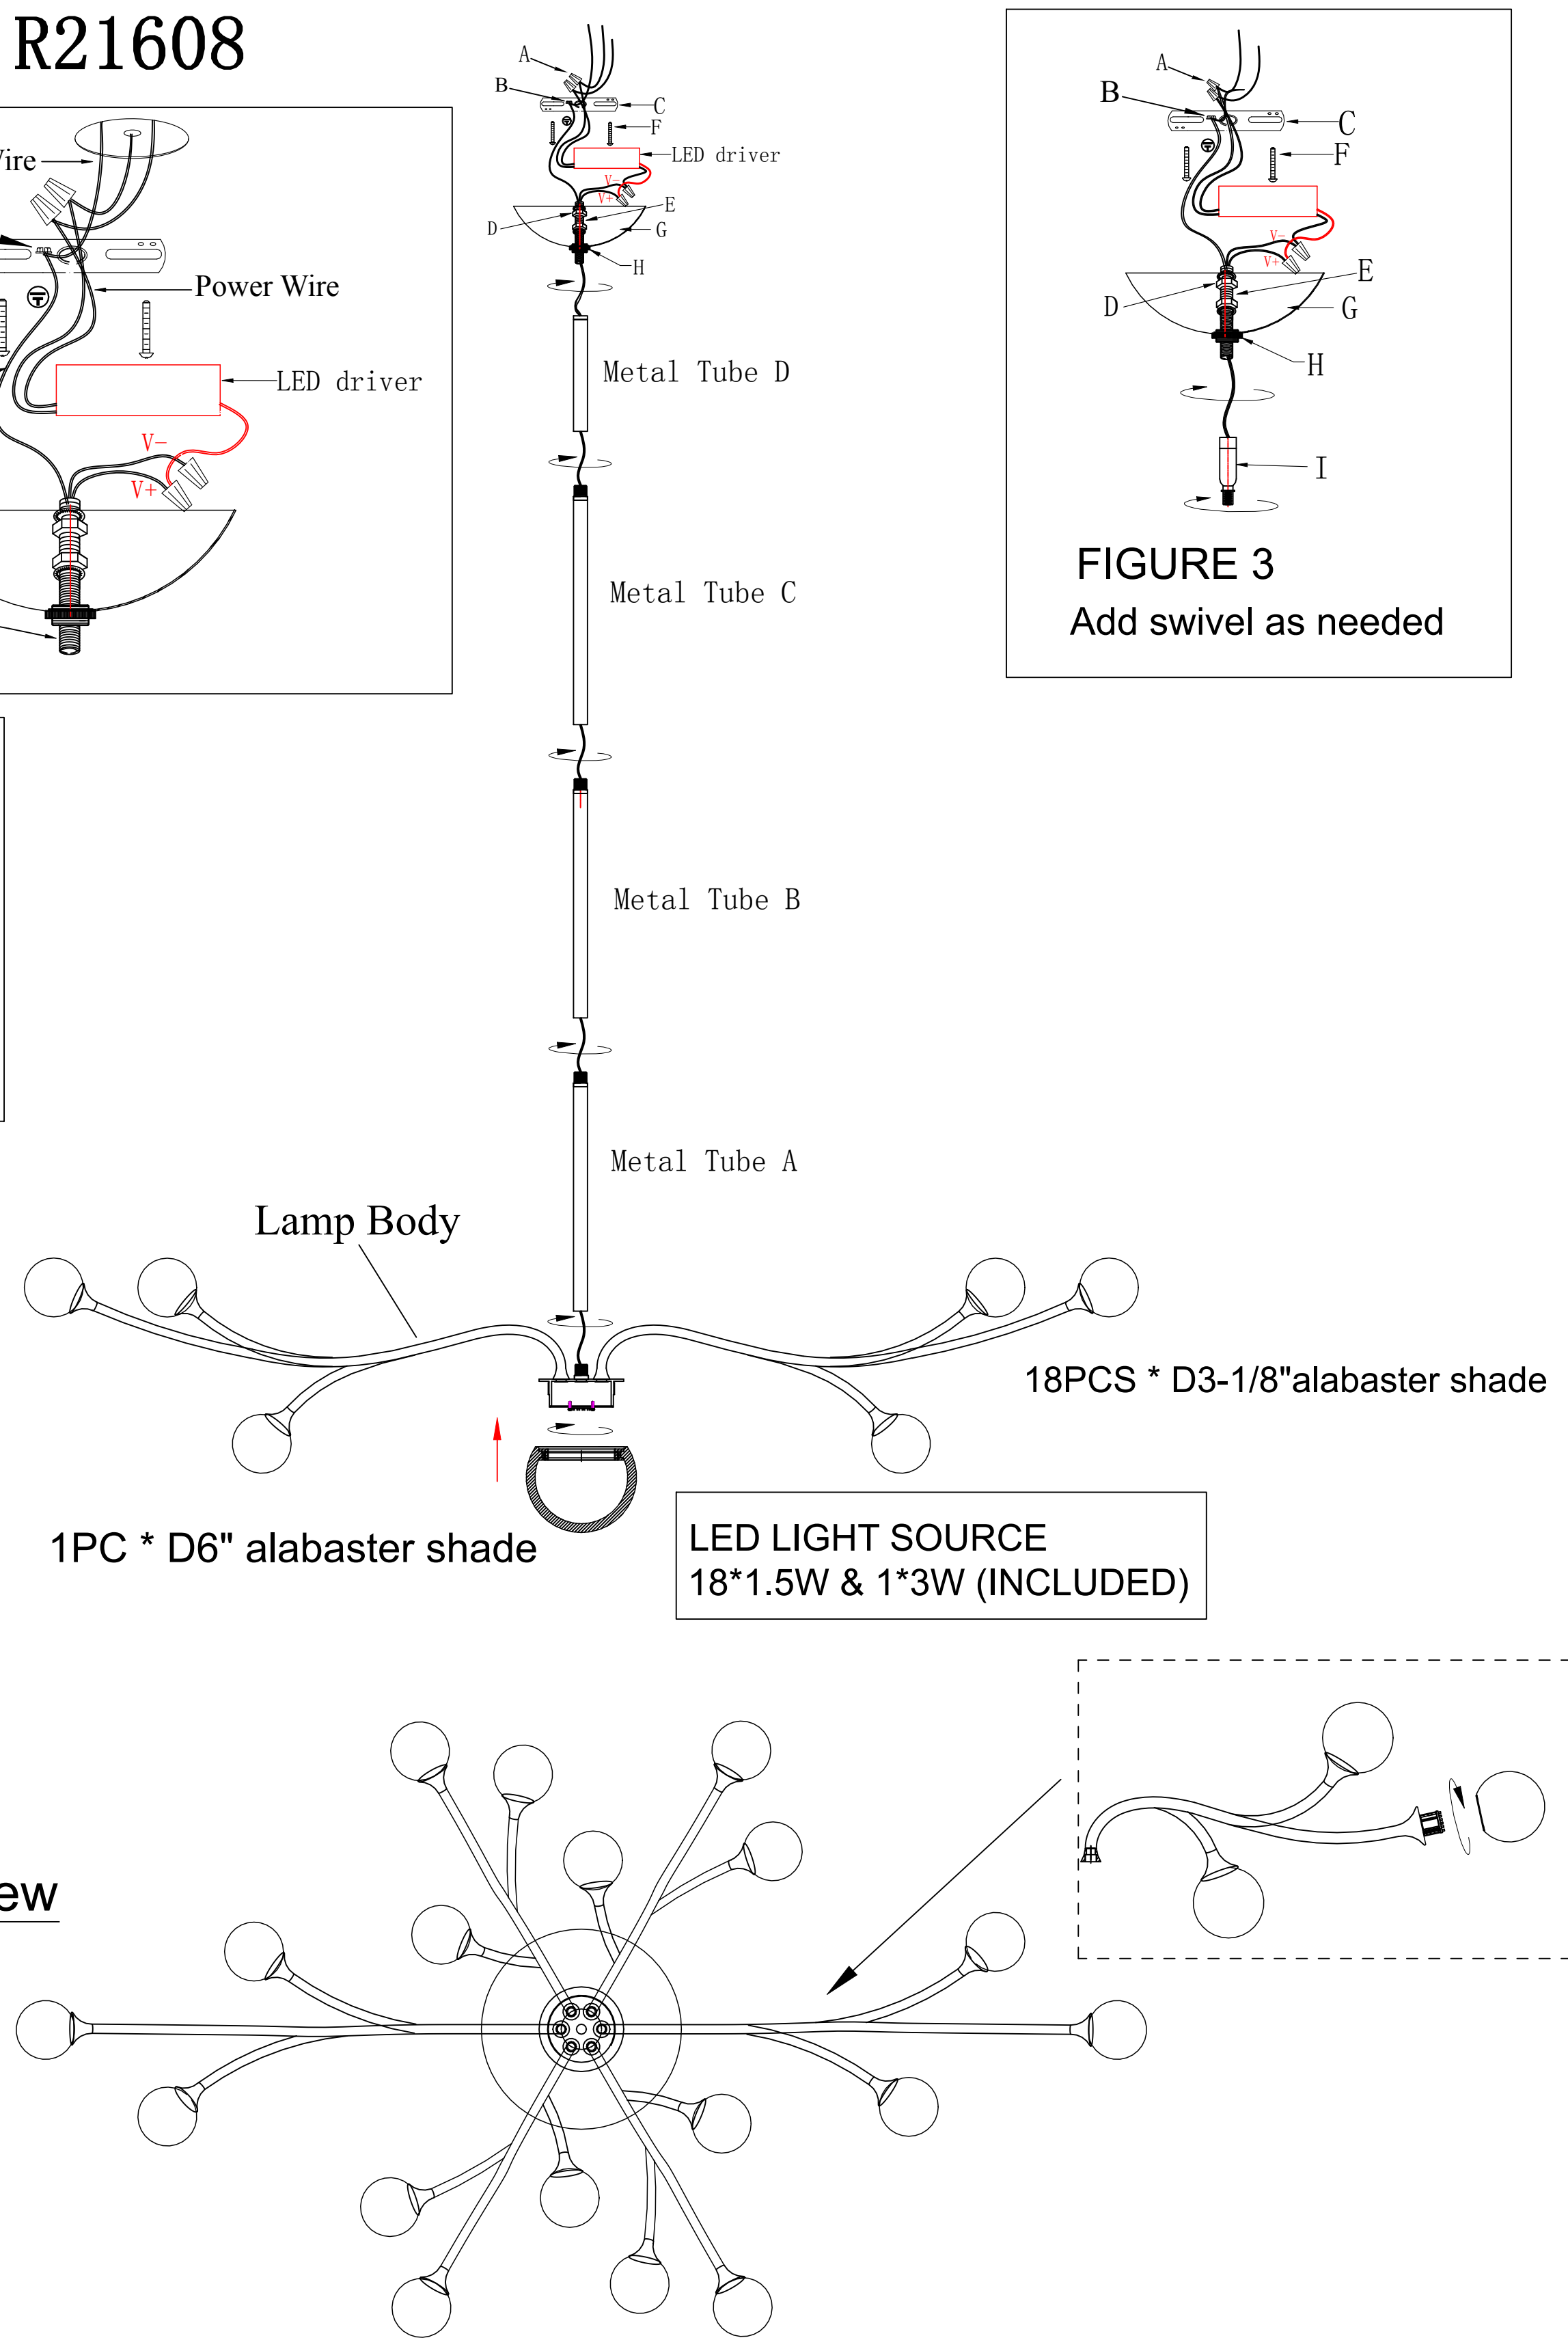
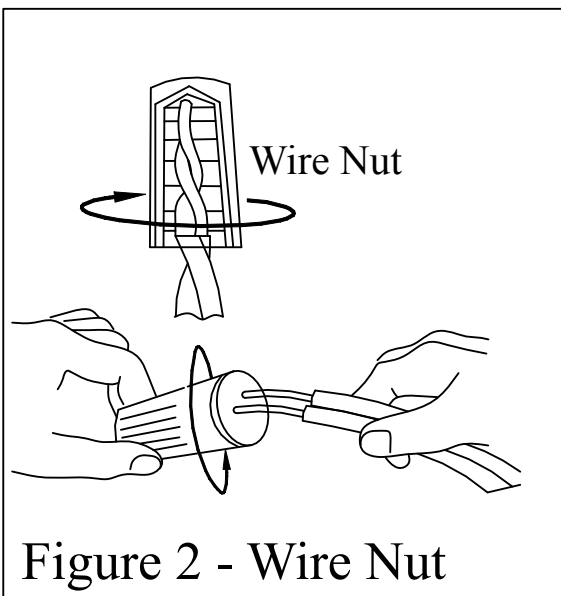


REVELATION  
by UTTERMOST  
ASSEMBLY INSTRUCTIONS

Illustration

STYLE NO. :R21608

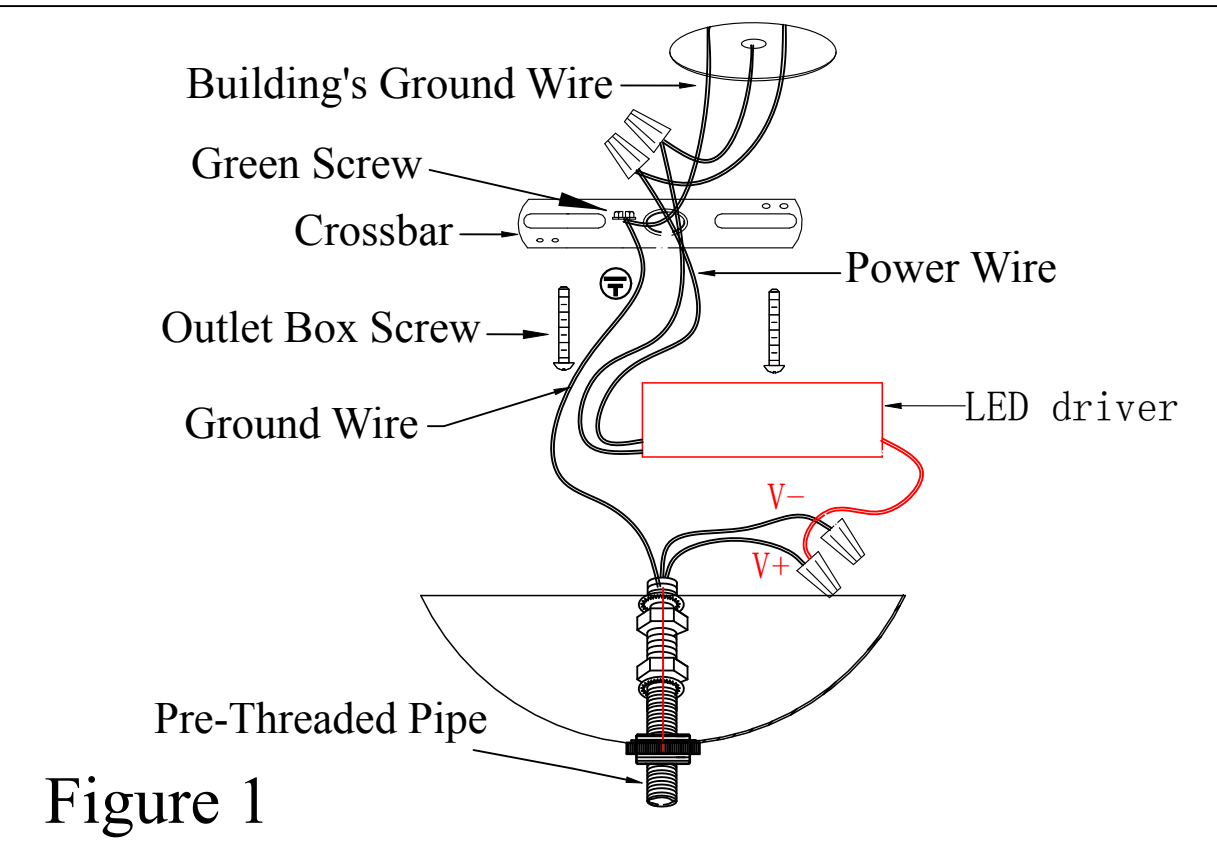

REVELATION  
by UTTERMOST  
ASSEMBLY INSTRUCTIONS

STYLE NO. : R21608

Parts and Hardware List

A.	Wire Nut	5PCS
B.	Green Ground Screw	1PC
C.	Crossbar	1PC
D.	Hex Nut	2PCS
E.	Pre-Threaded Pipe	1PC
F.	Outlet Box Screw	2PCS
G.	Canopy	1PC
H.	Pre-threaded Ring	1PC
I.	Swivel	1PC

WARNING: BEFORE INSTALLING, make sure the electricity supply is shut off to avoid a possible electric shock. We suggest a licensed electrician for all lighting fixture installations.

Please make sure that you have all the parts indicated before you begin assembling this item. Please read Wiring Instructions before you begin assembling and installing your lamp.

Assembly Instruction

1. Carefully remove the parts and hardware from the carton.
2. Insert the shorter end of the Pre-Threaded Pipe (E) into the pre-drilled hole in the Crossbar (C) and secure with the Hex Nuts (D). (See illustration)
3. Attach the Pre-threaded Ring (H) to the exposed end of the Pre-Threaded Pipe (E) and secure by turning in a clockwise direction.
4. Screw swivel (I) on the Canopy as needed, attach the other end of swivel to screw on one end of the metal tube D (See Figure 3). Loosen the wires before installing the swivel, please connect driver wires after installing swivel well, connect V+ to red (+); connect V- to black(-). If you don't need swivel, you can screw the metal tube D on canopy directly.
5. Adjust the length of the wire needed for your installation, remove excess, determine the number of Rods to be assembled to the Fixture Body as needed for your hanging height, then screw the Lamp body onto the Metal Tube A until tight.
6. Repeat the Step 6 with the Metal Tube B, C and D as needed for your installation height.
7. Install both ground wires in the Crossbar (C) with the Green Ground Screw (B) supplied.
8. Fasten the Crossbar (C) onto the Outlet Box by using the Outlet Box Screws (F).
9. Place the white wire, ribbed or tinted wire evenly against the white wire from the outlet box and place the black, smooth or un-tinted wire evenly against the black wire from the outlet box. (Connecting the Wires - See Figure 2) After connecting the wires well, wrap the wire nuts with black electrical tape.
10. After the wires are connected, tuck them carefully inside the outlet box. Place the Canopy (G) over the outlet box and secure with Pre-Threaded Ring (H).
11. 18\*1.5W and 1\*3W, LED light source (Built in) . Screw the alabaster shades onto the socket until tight. Please refer to the drawing to assemble 18PCS of D3-1/8"alabaster shade and 1PC of D6" alabaster shade.

Dimming control compatibility: DIMMABLE WHEN USED WITH A LUTRON DVCL-153P-WH DIMMER