

REVELATION

by UTTERMOST

ASSEMBLY INSTRUCTIONS

Illustration

STYLE NO. : R21619

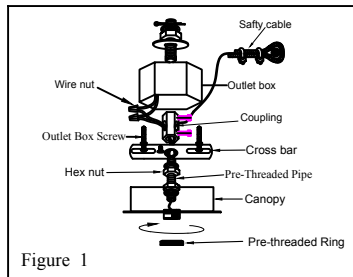


Figure 1

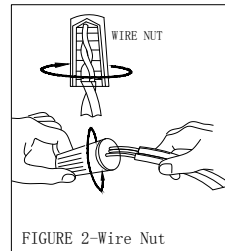


FIGURE 2-Wire Nut



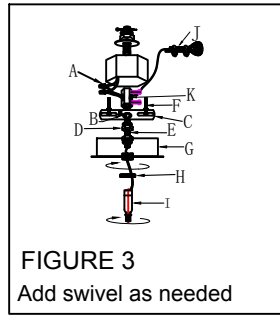


FIGURE 3
Add swivel as needed

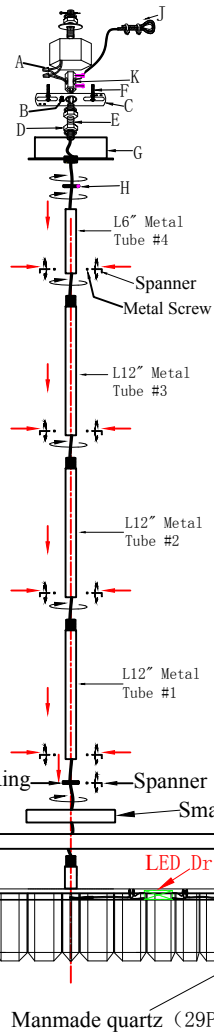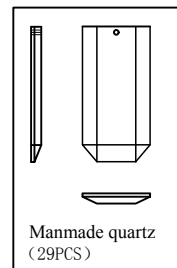

LED LIGHT SOURCE
27W (INCLUDED)

REVELATION

by UTTERMOST

ASSEMBLY INSTRUCTIONS

ITEM NO. :R21619

Parts and Hardware List

A.	Wire Nut	3PCS
B.	Green Ground Screw	1PC
C.	Crossbar	1PC
D.	Hex Nut	2PCS
E.	Pre-Threaded Pipe	1PC
F.	Outlet Box Screw	2PCS
G.	Canopy	1PC
H.	Pre-threaded Ring	1PC
I.	Swivel	1PC

J.	Saftey cable	1PC
K.	Coupling	1PC
L.	L6" metal tube	1PC
M.	L12" metal tube	3PCS
N.	Spanner	1PC
Q.	M4 screw	29 PCS

Please read Wiring Instructions before you begin assembling and installing your Ceiling Fixture. Please make sure that you have all the parts indicated before you begin assembling this item.

WARNING: BEFORE INSTALLING, make sure the electricity supply is shut off to avoid a possible electric shock. We suggest a licensed electrician for all lighting fixture installations.

HEAVY WEIGHT FIXTURE OVER 50 LBS., MUST FOLLOW NEC ARTICLE 314.27 (2) for heavy weight installation; Fixtures that weigh more than 50 lbs. shall be supported independently of the outlet box, unless the outlet box is listed for not less than the weight to be supported, and the box shall be marked by box manufacturer to indicate the maximum weight it shall support.

1. Take the parts carefully out of the carton, place them on a flat surface, and make sure that the parts will not be damaged.
2. The weight of this fixture will require a means of support independent of the outlet box. This fixture must be supported by Pre-Threaded Pipe. The Pre-Threaded Pipe should be positioned so that 3/4" protrudes into the outlet box cavity.
3. With the Pre-Threaded Pipe properly situated, locate the Coupling (K) and proceed to thread onto the end of the Pre-Threaded Pipe protruding into the outlet box. Thread the Coupling (K) onto the pipe until tight.
4. Insert the shorter end of the Pre-Threaded Pipe (E) into the pre-drilled hole in the Crossbar (C) and secure with the Hex Nuts (D). (See illustration)
5. Attach the Pre-threaded Ring (H) to the exposed end of the Pre-Threaded Pipe (E) and secure by turning in a clockwise direction.
6. Adjust the length of the wire needed for your installation, remove excess, determine the number of Rods to be assembled to the lamp body as needed for your hanging height.
7. Use M4 screw to fasten the manmade quartz onto the big metal ring.
8. Place the small metal cap and big metal cap onto the lamp body, then the metal tube #1 passes through the wire and screw the Metal Tube #1 onto the Lamp body with metal ring until tight, then use spanner to fasten the metal screws.
9. Repeat Step 7 with the Metal Tube #2, #3 and #4 as needed for your installation height.
10. Screw swivel (I) on the Canopy as needed, and another end of swivel to screw on one end of the metal tube #4. (See Figure 3) If you don't need swivel, you can screw the metal tube #4 on canopy directly.
11. Install both ground wires in the Crossbar (C) with the Green Ground Screw (B) supplied.
12. Place the white wire, ribbed or tinted wire evenly against the white wire from the outlet box and place the black, smooth or un-tinted wire evenly against the black wire from the outlet box. (Connecting the Wires - See Figure 2)
13. After the wires are connected, tuck them carefully inside the outlet box. Place the Canopy (G) over the outlet box and secure with Pre-Threaded Ring (H).
14. 27W LED light source (Built in).

Dimming control compatibility: DIMMABLE WHEN USED WITH A LUTRON DVCL-153P-WH DIMMER

REVELATION

by UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE NO.: R21619

IMPORTANT: FOR A SAFE AND SECURE INSTALLATION, THESE FIXTURES MUST BE INSTALLED BY MEANS OF SUPPORTS THAT ARE INDEPENDENT OF THE OUTLET BOX. YOU SHOULD USE A QUALIFIED ELECTRICIAN TO INSTALL THIS FIXTURE.

NOTE: ALWAYS TURN POWER OFF BEFORE INSTALLING LIGHTING FIXTURES!

Installation (see Figure 1)

1. Disconnect power at main electrical panel before installation.
2. This fixture must be supported by Pre-Threaded Pipe. The Pre-Threaded Pipe should be positioned so that 3/4" protrudes into the outlet box cavity.
3. With the Pre-Threaded Pipe properly situated, locate the Coupling and proceed to thread onto the end of the Pre-Threaded Pipe protruding into the outlet box. Thread the Coupling onto the pipe until tight.
4. Insert the shorter end of the Pre-Threaded Pipe into the pre-drilled hole in the Crossbar and secure with the Hex Nuts.
5. Attach the Pre-threaded Ring to the exposed end of the Pre-Threaded Pipe and secure by turning in a clockwise direction.
6. Assemble the fixture as shown in reference diagram.
7. Raise the fixture to ceiling and place the safety cable through the cross bar and secure with lock and screws.

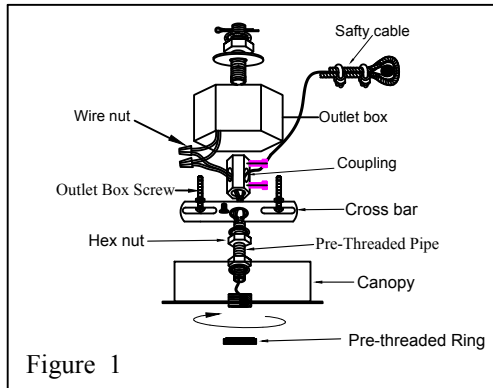


Figure 1

Wiring (see Figure 2)

6. Attach the fixture's wires to the powder supply wires from the ceiling. Connect black to black (or smooth); white to white (or ribbed); ground to ground (green or copper). Twist the ends of the wire pairs together, then twist on a wire nut. Make sure all twists are in the same direction.
7. Place the canopy on the fixture over the universal bar and onto the mounting screws, and secure into place using the column nut.

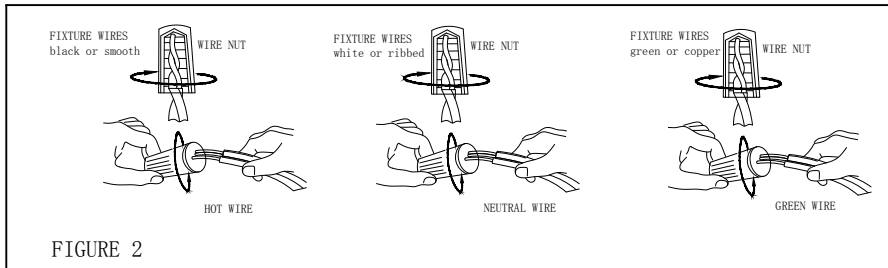


FIGURE 2

INSTALLATION INSTRUCTION FOR SAFETY CABLE INSTALLATION

IN INSTRUCTION:

THIS FIXTURE IS PROVIDED WITH A SAFETY CABLE. THE SAFETY CABLE PROVIDES A BACK UP SYSTEM OF THE FIXTURE'S FRAME AND THE INSTALLATION HARDWARE. IT IS ESSENTIAL THAT THE SAFETY CABLE BE PROPERLY INSTALLED. THE CABLE MUST BE SECURED TO A STRUCTURAL MEMBER OF THE BUILDING, AND NOT TO THE OUTLET BOX. THE CABLE MUST BE TERMINATED WITH CLAMPS SPECIFICALLY SIZED FOR THE CABLE. IF THE U-CLAMPS ARE USED, THEY MUST BE ORIENTATED AS PER THE DRAWING BELOW. IF THE CABLE HAS A PLASTIC COVERING, IT MUST BE REMOVED FROM THE AREA WHERE THE CLAMPS ARE MOUNTED. MAKE SURE ALL HARD WARE IS PROPERLY TIGHTENED AND THE CABLE IS POSITIONED CLEAR OF ANY OBSTRUCTIONS.

CORRECT APPLICATION

