
# REVELATION

### **ASSEMBLY INSTRUCTIONS**

## Illustration

STYLE NO.: R21649

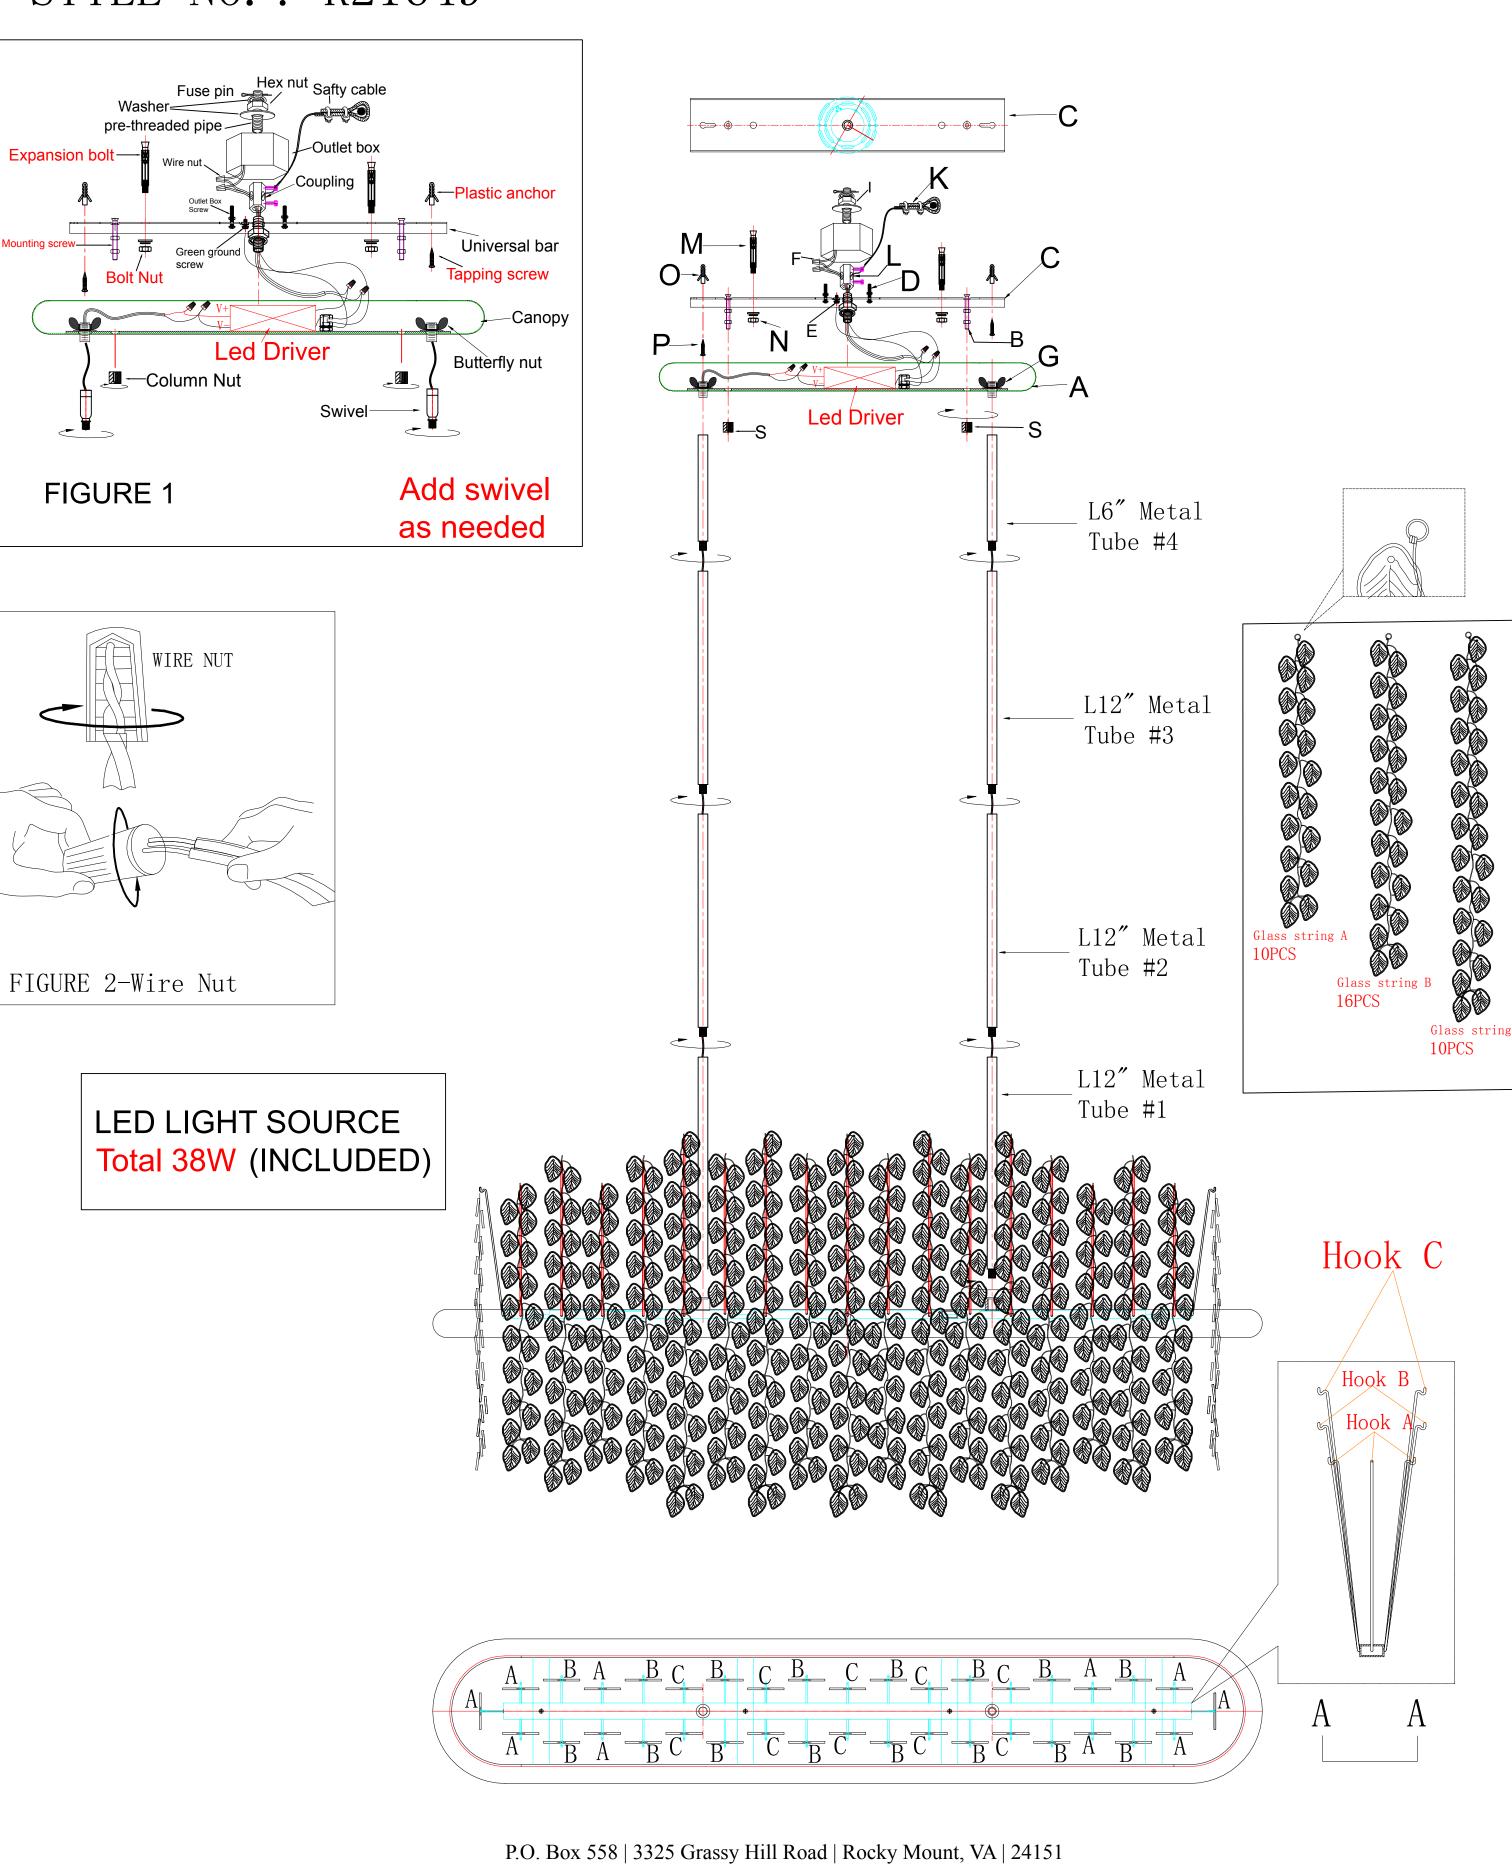

www.uttermost.com/Revelation



#### ITEM NO.: R21649

### Parts and Hardware List

Α.	Canopy	1PC
В.	Mounting Screw	2PCS
С.	Universal Bar	1PC
D.	Outlet Box Screw	2PCS
Ε.	Green Ground Screw	1PC
F.	Wire Nut	5PCS
G.	Butterfly Nut	2PCS
Н.	Swivel	2PCS
I.	Hex Nut	2PCS
J.	Pre-Threaded Pipe	2PCS
К.	Safty Cable	1PC

L.	Coupling	1PC
M.	Expansion Bolt	2PCS
N.	Bolt Nut	2PCS
0.	Plastic Anchor	2PCS
Р.	Tapping Screw	2PCS
Q.	L12" Metal Tube	6PCS
R.	L6" Metal Tube	2PCS
S.	Column Nut	2PCS

Please make sure that you have all the parts indicated before you begin assembling this item. Please read Wiring Instructions before you begin assembling and installing your Ceiling Fixture.

WARNING: <u>BEFORE INSTALLING</u>, make sure the electricity supply is shut off to avoid a possible electric shock. We suggest a licensed electrician for all lighting fixture installations.

HEAVY WEIGHT FIXTURE OVER 50 LBS., MUST FOLLOW NEC ARTICLE 314.27 (2) for heavy weight installation; Fixtures that weigh more than 50 lbs. shall be supported independently of the outlet box,

unless the outlet box is listed for not less than the weight to be supported, and the box shall be marked by box manufacturer to indicate the maximum weight it shall support.

- 1. Take the parts carefully out of the carton, place them on a flat surface, and make sure that the parts will not be damaged.
- 2. The weight of this fixture will require a means of support independent of the outlet box .This fixture must be supported by Pre-Threaded Pipe(J).The Pre-Threaded Pipe(J) should be positioned so that 3/4" protrudes into the outlet box cavity.
- 3. With the Pre-Threaded Pipe(J) properly situated, locate the Coupling (L) and proceed to thread onto the end of the Pre-Threaded Pipe(J) protruding into the outlet box. Thread the Couping(L) onto the pipe until tight.
- 4. Attach the Universal Bar(C) to the Outlet Box using two Outlet Box Screws(D). (See Figure 1)
- 5. Insert the shorter end of the Pre-Threaded Pipe(J) into the pre-drilled hole in the Universal Bar(C) and secure by turning in a clockwise direction.
- 6. Adjust the length of the wire needed for your installation, remove excess, determine the number of Rods to be assembled to the Fixture Body as needed for your hanging height, then the metal tube #1 passes through the wire and screw the Lamp body onto the Metal Tube #1 until tight.
- 7. Repeat Step 6 with the Metal Tube #2, #3 and #4 as needed for your installation height. Then using Butterfly Nuts (G) to secure Swivels(H) tightly. Please note two swivels need to adjust in same direction. If you don't need swivels, you can screw the metal tube#4 on canopy directly.
- 8.Please connect Led driver wires, connect V+ to red (+); connect V- to black(-), then wrap the wires with electrical tapes. Install the ground wire in the Universal Bar(C) with the supplied Green Ground Screw(E).
- 9. Place the white wire, ribbed or tinted wire evenly against the white wire from the outlet box and place the black, smooth or un-tinted wire evenly against the black wire from the outlet box. (Connecting the Wires See Figure 2) After connecting the wires well, wrap the wire nuts with black electrical tape.
- 10. After the wires are connected, tuck them carefully inside the Outlet Box, attach the Canopy (A) to the Mounting screws(B) and secure with Column Nuts(S). (See Figure 1)
- 11. Hang the Glass strings A to Hooks A. Then hang Glass strings B and C.
- 12. Total wattage 38W LED light source (Built in).

Dimming control compatibility:DIMMABLE WHEN USED WITH A LUTRON DVCL-153P-WH DIMMER

P.O. Box 558 | 3325 Grassy Hill Road | Rocky Mount, VA | 24151 www.uttermost.com/Revelation