

REVELATION

by UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE# R22526

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.

Carefully unpack all lamp parts from carton. We suggest a licensed electrician for all fixture installations.

1. Take the lamp carefully out of the Carton, and place on a flat surface.
2. Be sure power to the installation point is OFF.
3. Pull the power supply wire out from the outlet box and mount the **Universal Bar** to the outlet box with **Mounting Screws**.
4. Connect the wire as shown. (See Figure 2)
 - a. Connect the House Ground Wire to the Fixture Ground Wire, secure with wire nut.
 - b. Connect the House White (or Ribbed) Wire to the Fixture Supply Wire (White or Ribbed Side), secure with wire nut.
 - c. Connect the House Black (or Red) Wire to the Fixture Supply Wire (Black or Smooth Side), secure with wire nut.
 - d. Carefully stuff all of the connected wires into the Outlet Box.

5. Place the **Backplate** over the **Mounting Screws** and secure with **Mounting Balls**. Hand-tighten until snug.

6. Place **Glass Shade** instruction as below. (See Figure 2)

Step 1: Place **Glass shade** into the **Part#1**. Make sure the spider on the part#1 hold the **Glass shade** completely and straightly.

Step 2: Put down the **Part#2** in the **Glass shade**.

Step 3: Thread the **Part #3** into the **Nipple**. Hand-tighten until snug.

Step 4: Assembly **Glass Shade** is Completed

7. Install the correct Bulb (**Edison Bulb** Included) into the **Socket** until snug.

Your installation is complete. Turn electrical power back on.

Figure 1

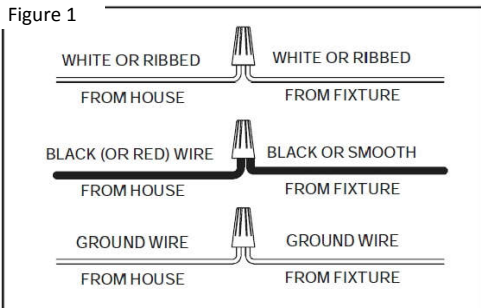


Figure 2

