


REVELATION

by UTTERMOST

ASSEMBLY INSTRUCTIONS

Illustration for Fixture version

ITEM NO.:R22541

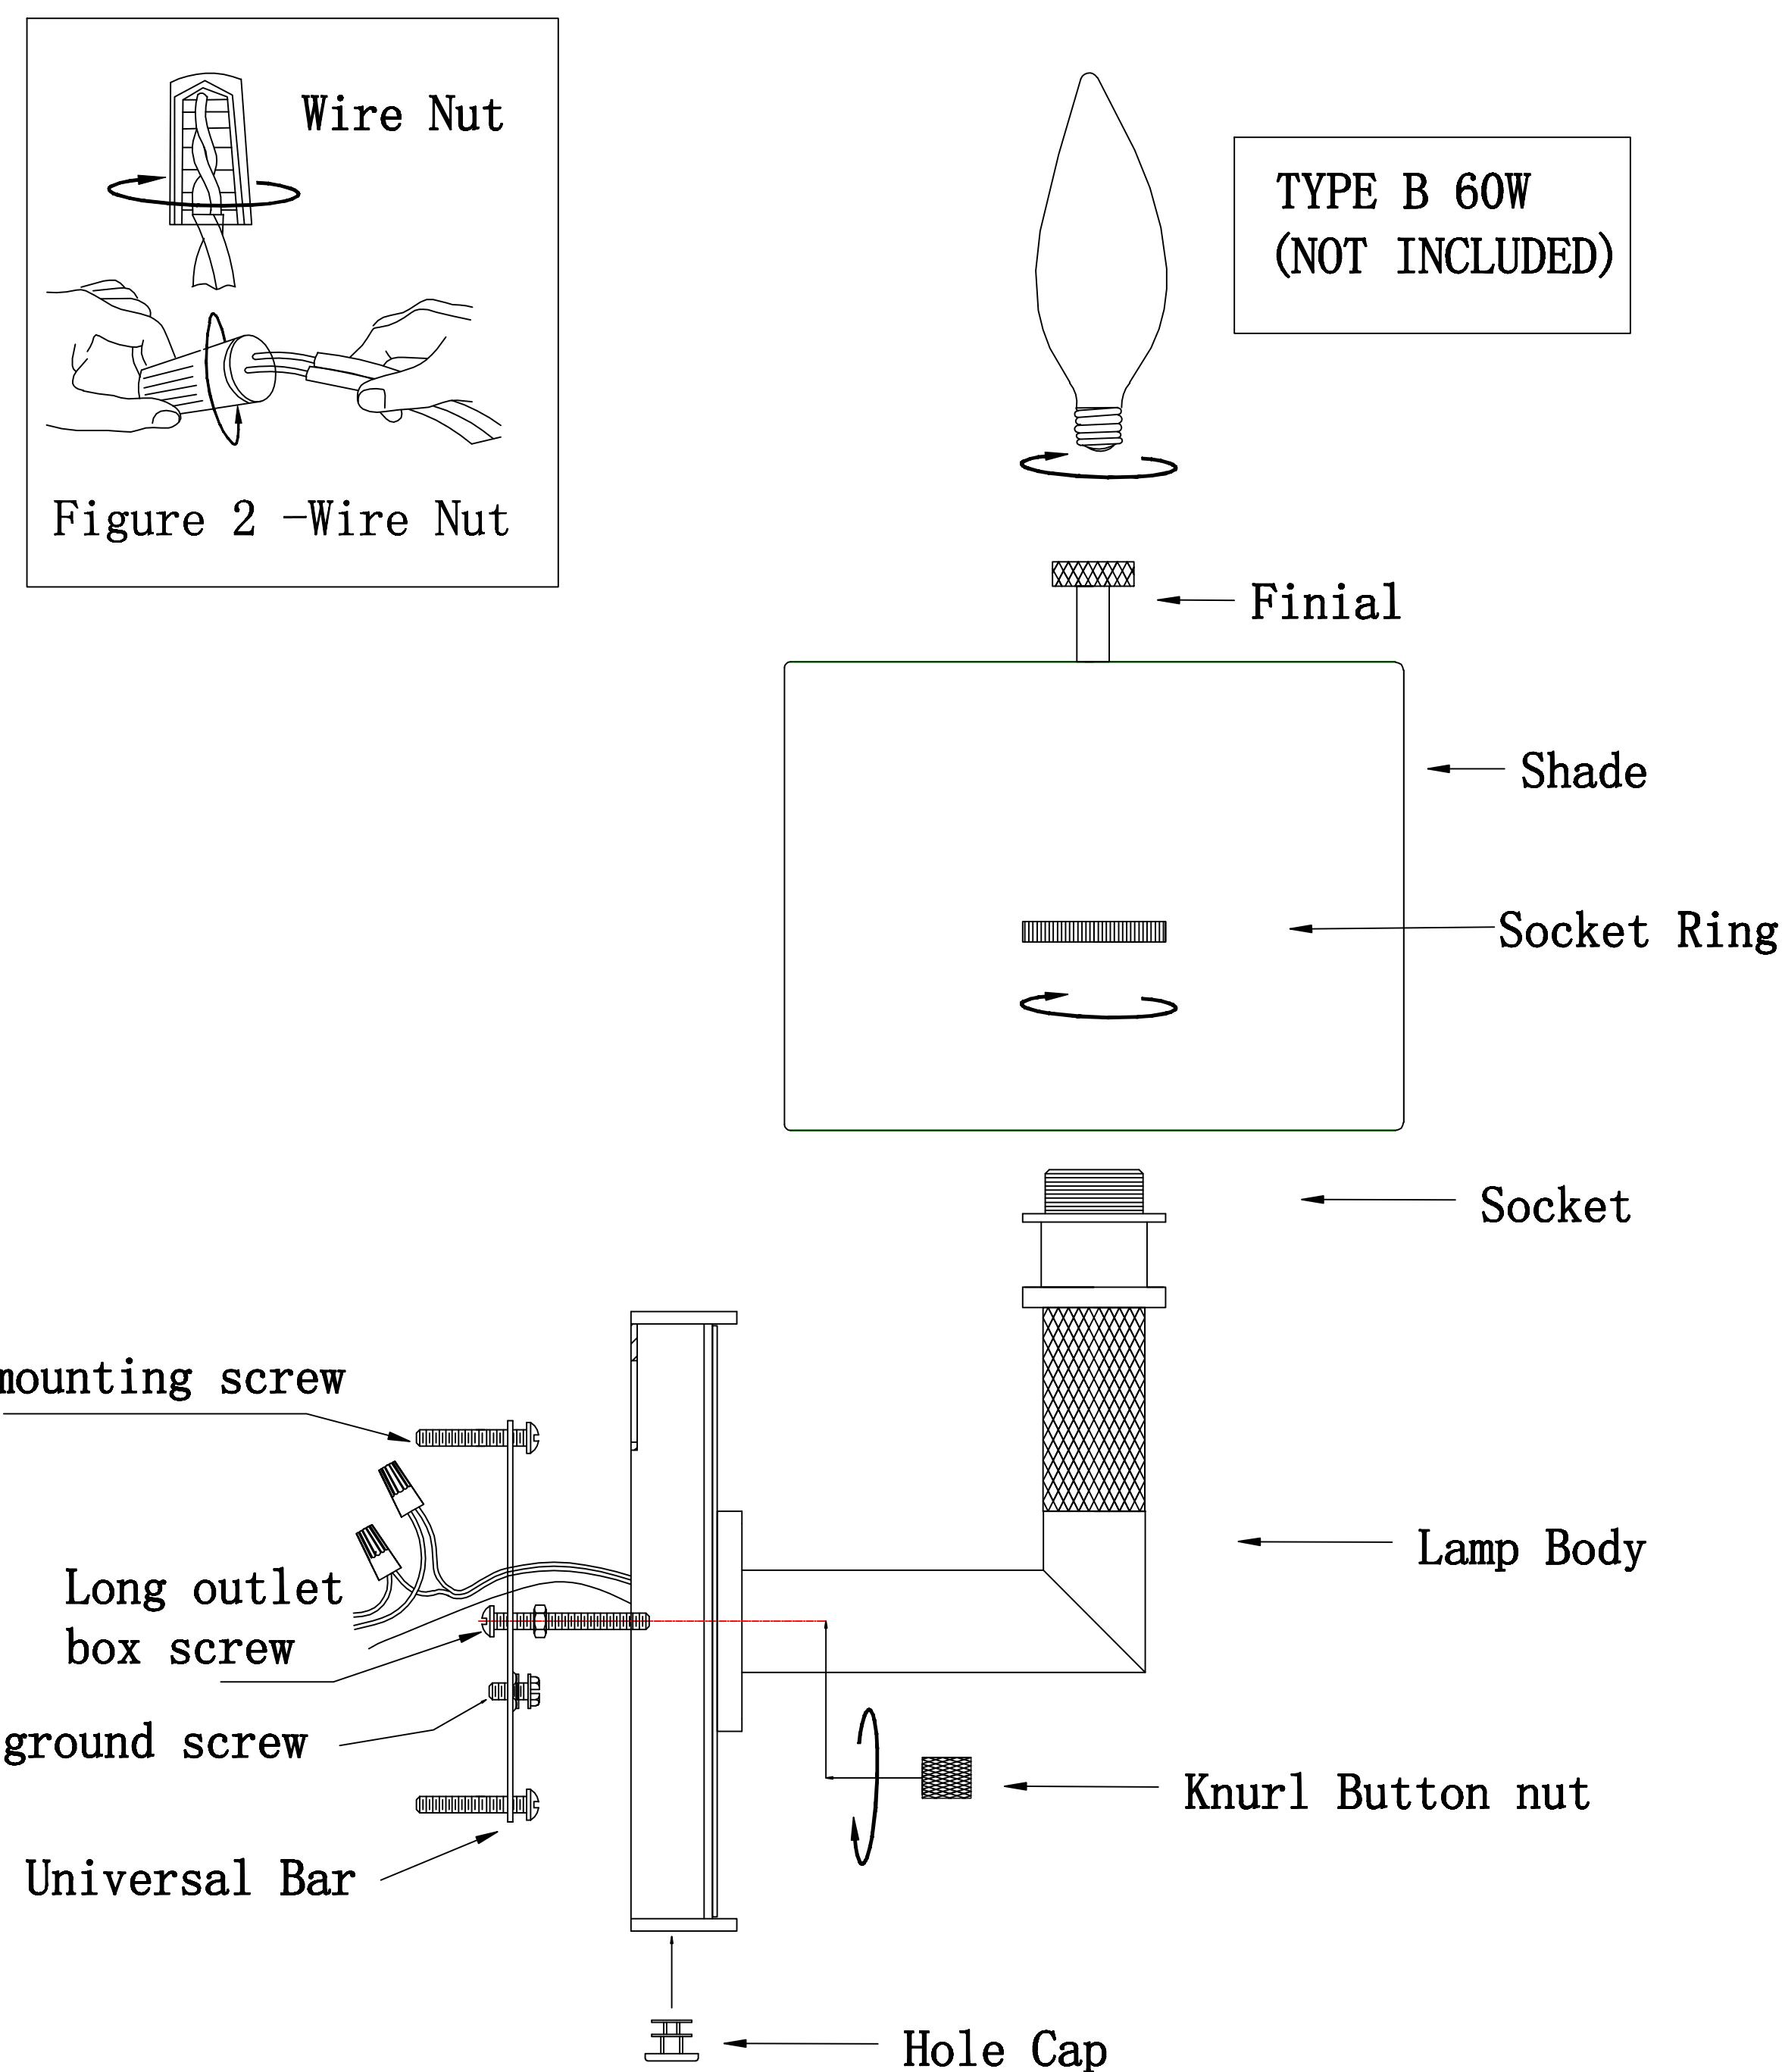

P.O. Box 558 | 3325 Grassy Hill Road | Rocky Mount, VA | 24151
www.uttermost.com/Revelation

REVELATION

by UTTERMOST

ASSEMBLY INSTRUCTIONS

Parts and Hardware List

ITEM NO: R22541

A.	Hole Cap	1PC
B.	Knurl Button Nut	2PCS
C.	Universal Bar	1PC
D.	Mounting Screw	2PCS
E.	Green Ground Screw	1PC
F.	Wire Nut	3PCS
G.	Long Outlet Box Screw L30mm	2PCS

WARNING: BEFORE INSTALLING, make sure the electricity supply is shut off to avoid a possible electric shock. We suggest a licensed electrician for all installations.

1. Carefully remove the parts and hardware from the carton.
2. Fasten the Universal bar onto the Outlet Box using the Outlet Box Screw .
3. Install both ground wires in the Universal bar with the Green Ground Screw supplied.
4. Place the white wire, ribbed or tinted wire evenly against the white wire from the outlet box and place the black, smooth or un-tinted wire evenly against the black wire from the outlet box. (Connecting the Wires - See Figure 2)
5. Use the Mounting Screw to secure the Universal bar and Lamp Body through the Mount hole, and screw Knurl button Nuts until tight.
6. Place the shade on the socket, and use socket ring to lock until tight.
7. Install 60 Watt, Type B bulb (NOT INCLUDED) into the socket of the fixture.
8. Screw the finial clockwise onto the shade until tight.


P.O. Box 558 | 3325 Grassy Hill Road | Rocky Mount, VA | 24151
www.uttermost.com/Revelation

REVELATION

by UTTERMOST

ASSEMBLY INSTRUCTIONS

Illustration for Portable version

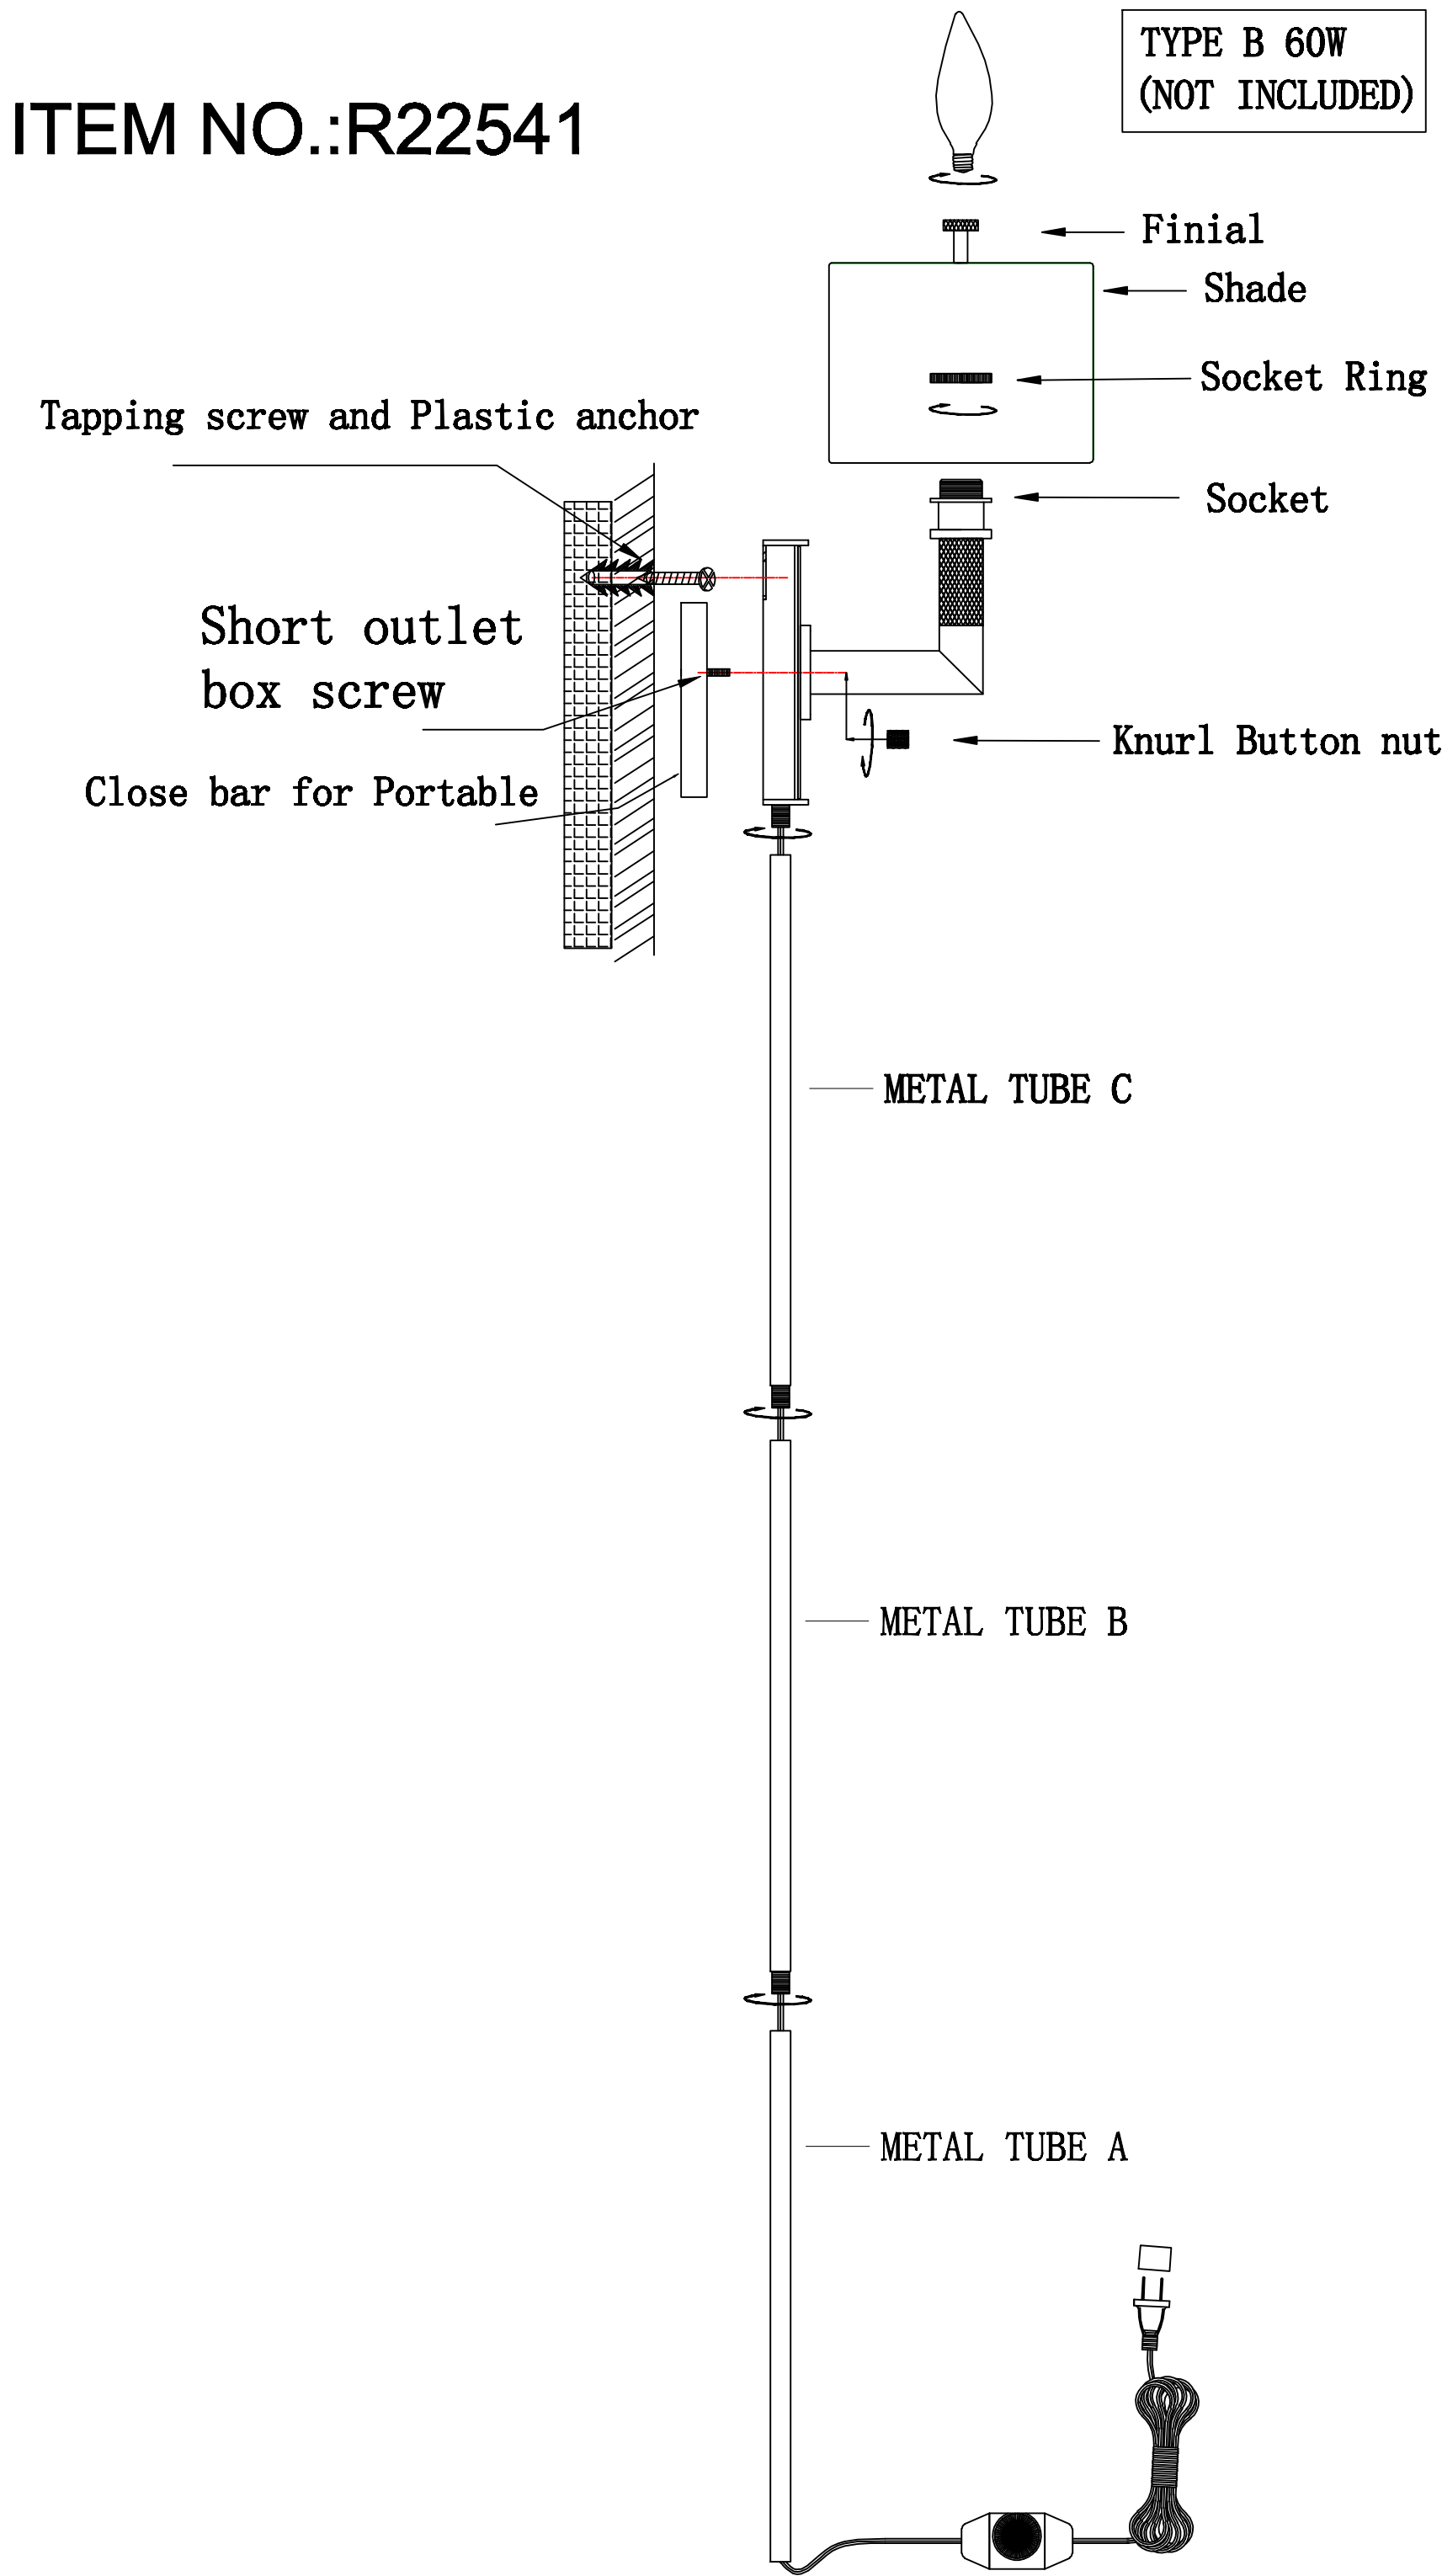

REVELATION

by UTTERMOST

ASSEMBLY INSTRUCTIONS

Parts and Hardware List

ITEM NO: R22541

A.	Knurl Button Nut	2PCS
B.	Close Bar for Portable	1PC
C.	Tapping screw	2PCS
D.	Plastic Anchor	2PCS
E.	Short Outlet Box Screw L23mm	2PCS

WARNING: BEFORE INSTALLING, make sure the electricity supply is shut off to avoid a possible electric shock. We suggest a licensed electrician for all installations.

- Carefully remove the parts and hardware from the carton.
- The screws of close bar go through the mount holes of lamp body , and screw Knurl button Nuts until tight.
- .Screw the metal tube C to the lamp body; screw the metal tube B to the metal tube C; screw the metal tube A to the metal tube B.
- The Plastic Anchors and Tapping screws fasten on the wall, then the wall sconce hang on the Tapping screws.
- Place the shade on the socket, and use socket ring to lock until tight.
- Install 60 Watt, Type B bulb (NOT INCLUDED) into the socket of the fixture.
- Screw the finial clockwise onto the shade until tight.