


REVELATION

by UTTERMOST

ASSEMBLY INSTRUCTIONS

Illustration

ITEM NO.:R22557

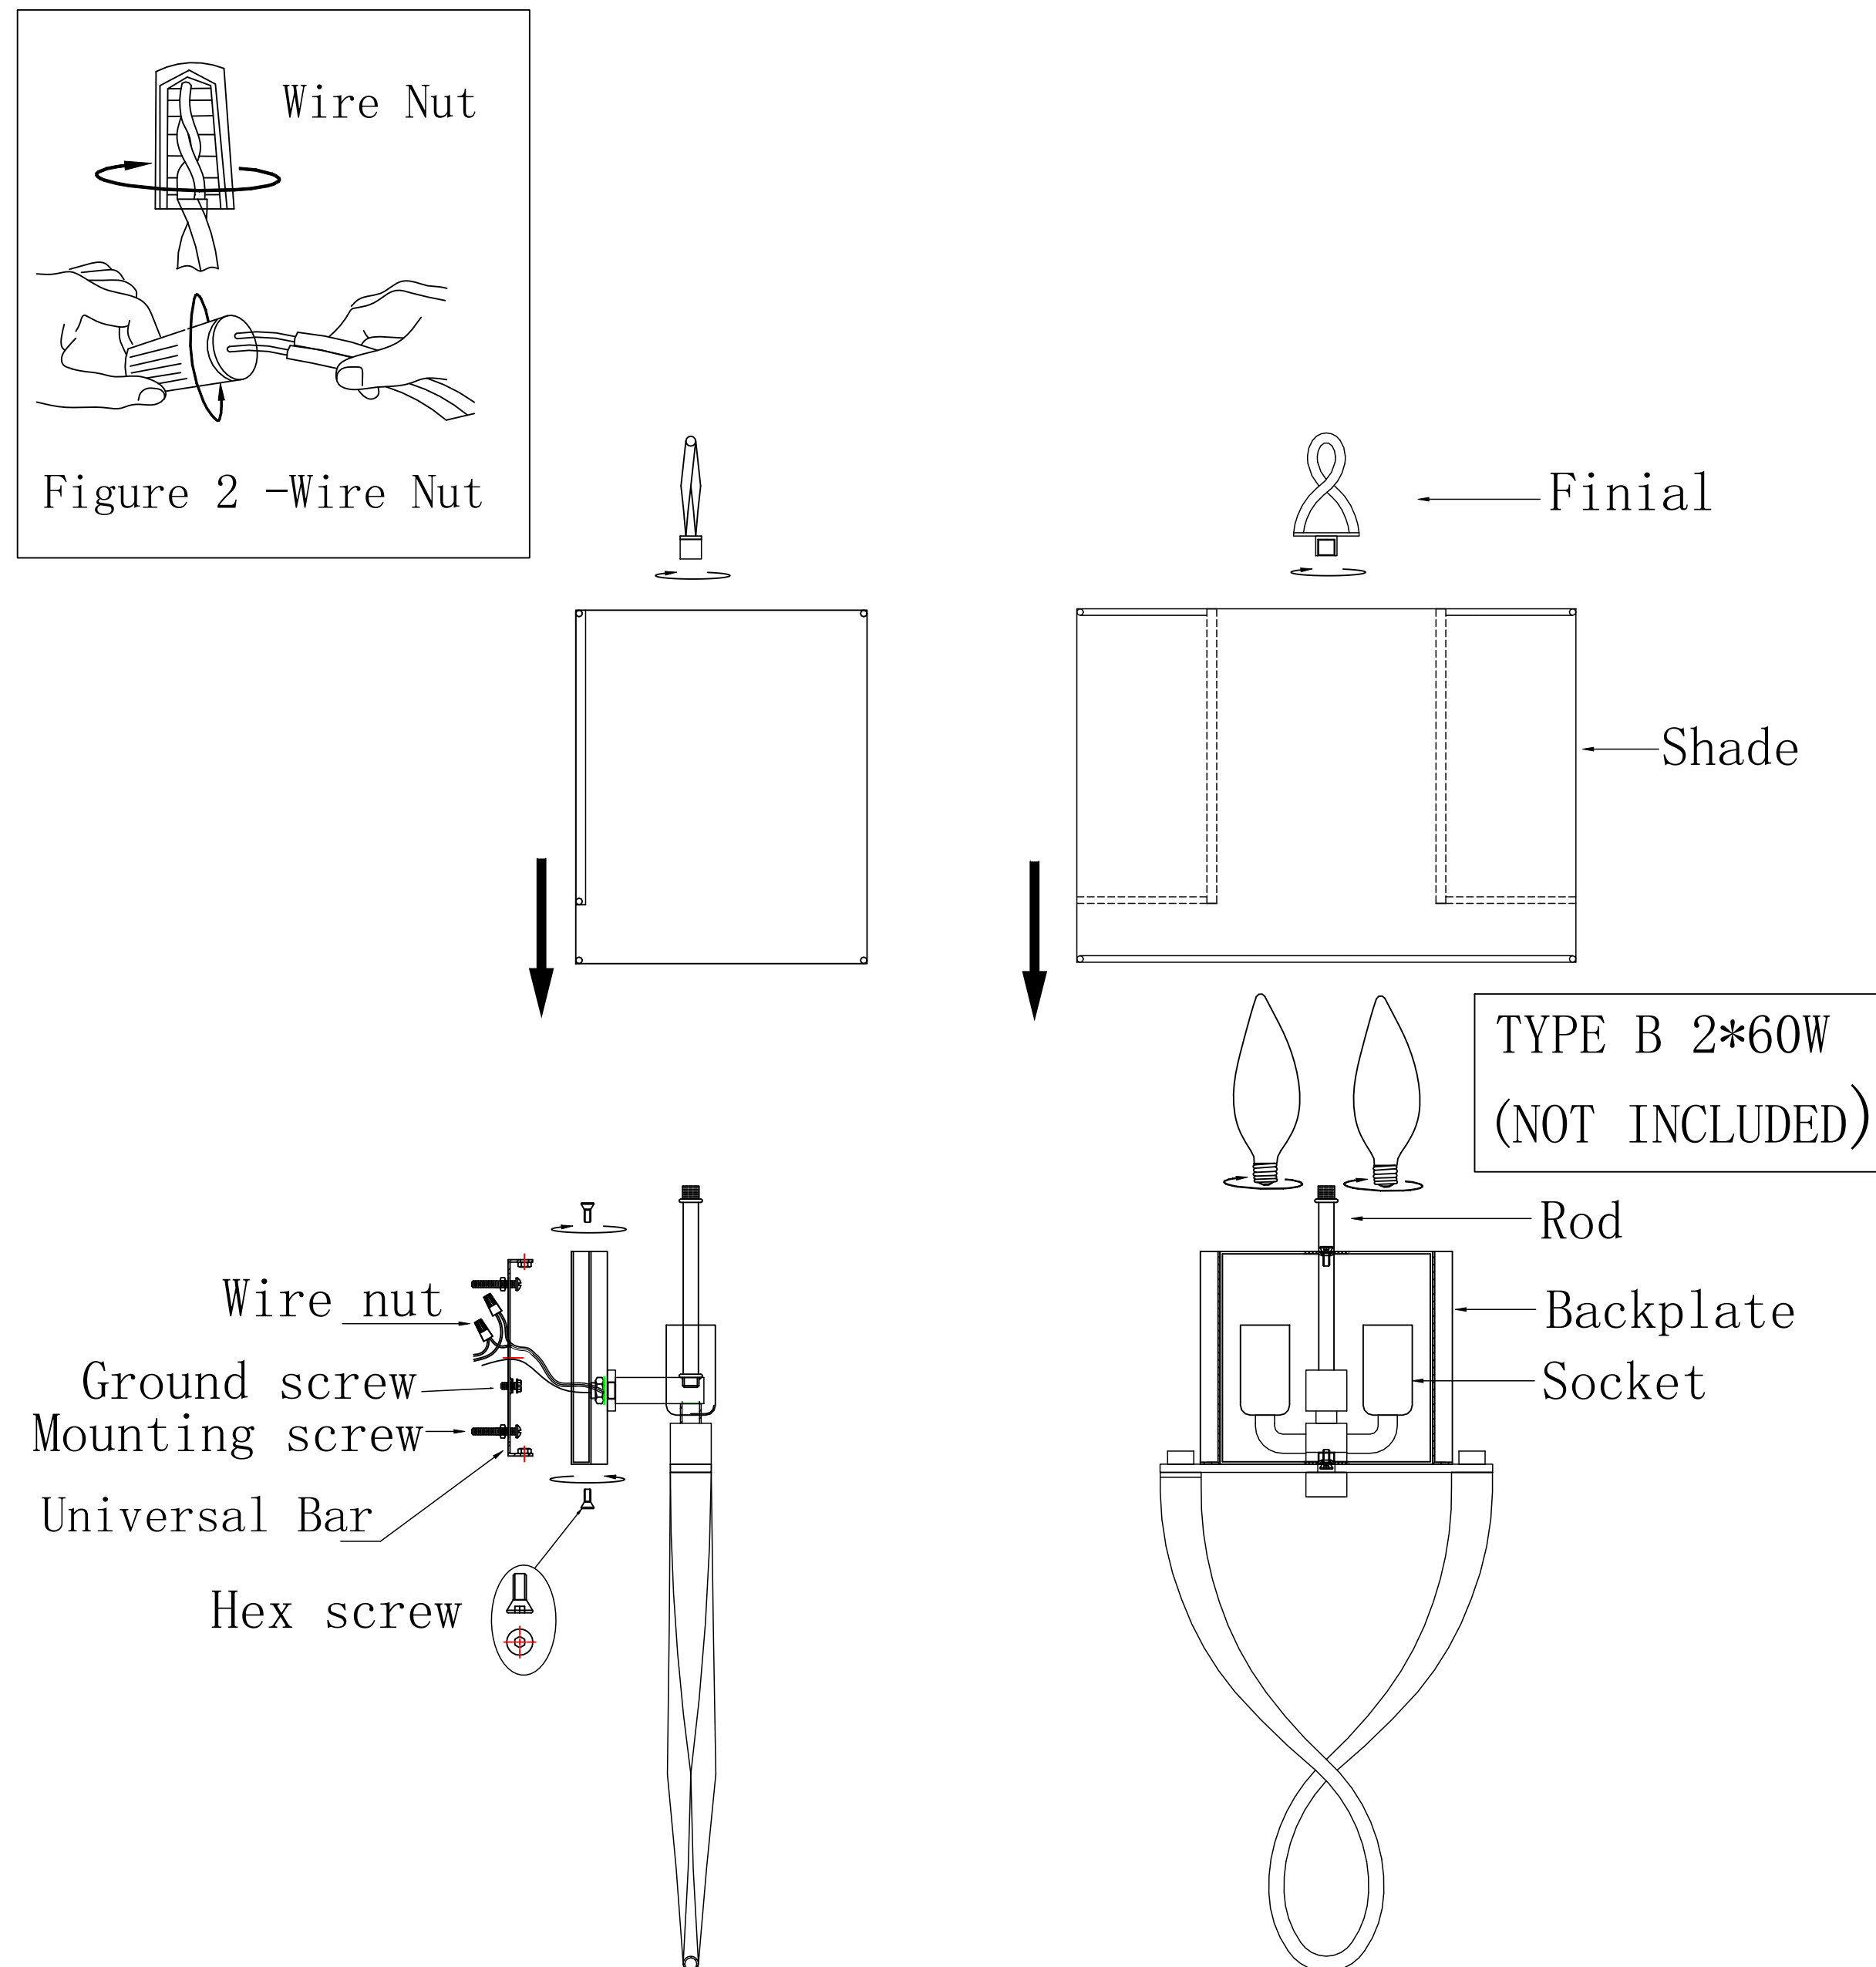

P.O. Box 558 | 3325 Grassy Hill Road | Rocky Mount, VA | 24151
www.uttermost.com/Revelation

REVELATION

by UTTERMOST

ASSEMBLY INSTRUCTIONS

Parts and Hardware List

ITEM NO: R22557

A.	Shade	1PC
B.	Hex screw	2PCS
C.	Universal Bar	1PC
D.	Mounting Screw	2PCS
E.	Green Ground Screw	1PC
F.	Wire Nut	3PCS

WARNING: BEFORE INSTALLING, make sure the electricity supply is shut off to avoid a possible electric shock. We suggest a licensed electrician for all installations.

- Carefully remove the parts and hardware from the carton.
- Fasten the Universal bar onto the Outlet Box using the mounting screw .
- Install both ground wires in the Universal bar with the Green Ground Screw supplied.
- Place the white wire, ribbed or tinted wire evenly against the white wire from the outlet box and place the black, smooth or un-tinted wire evenly against the black wire from the outlet box. (Connecting the Wires - See Figure 2)
- Attach the backplate to fix universal bar, and secure with the hex screw.
- Place the shade onto the rod, then screw the finial clockwise onto the rod until the shade is secured.
- Install 2*60 Watt max, Type B bulb (NOT INCLUDED) into the socket of the fixture.

P.O. Box 558 | 3325 Grassy Hill Road | Rocky Mount, VA | 24151
www.uttermost.com/Revelation