


REVELATION  
by UTTERMOST  
ASSEMBLY INSTRUCTIONS


Illustration

ITEM NO.:R22567

CORD COVER  
MOUNTING OPTION  
(Fig.1)

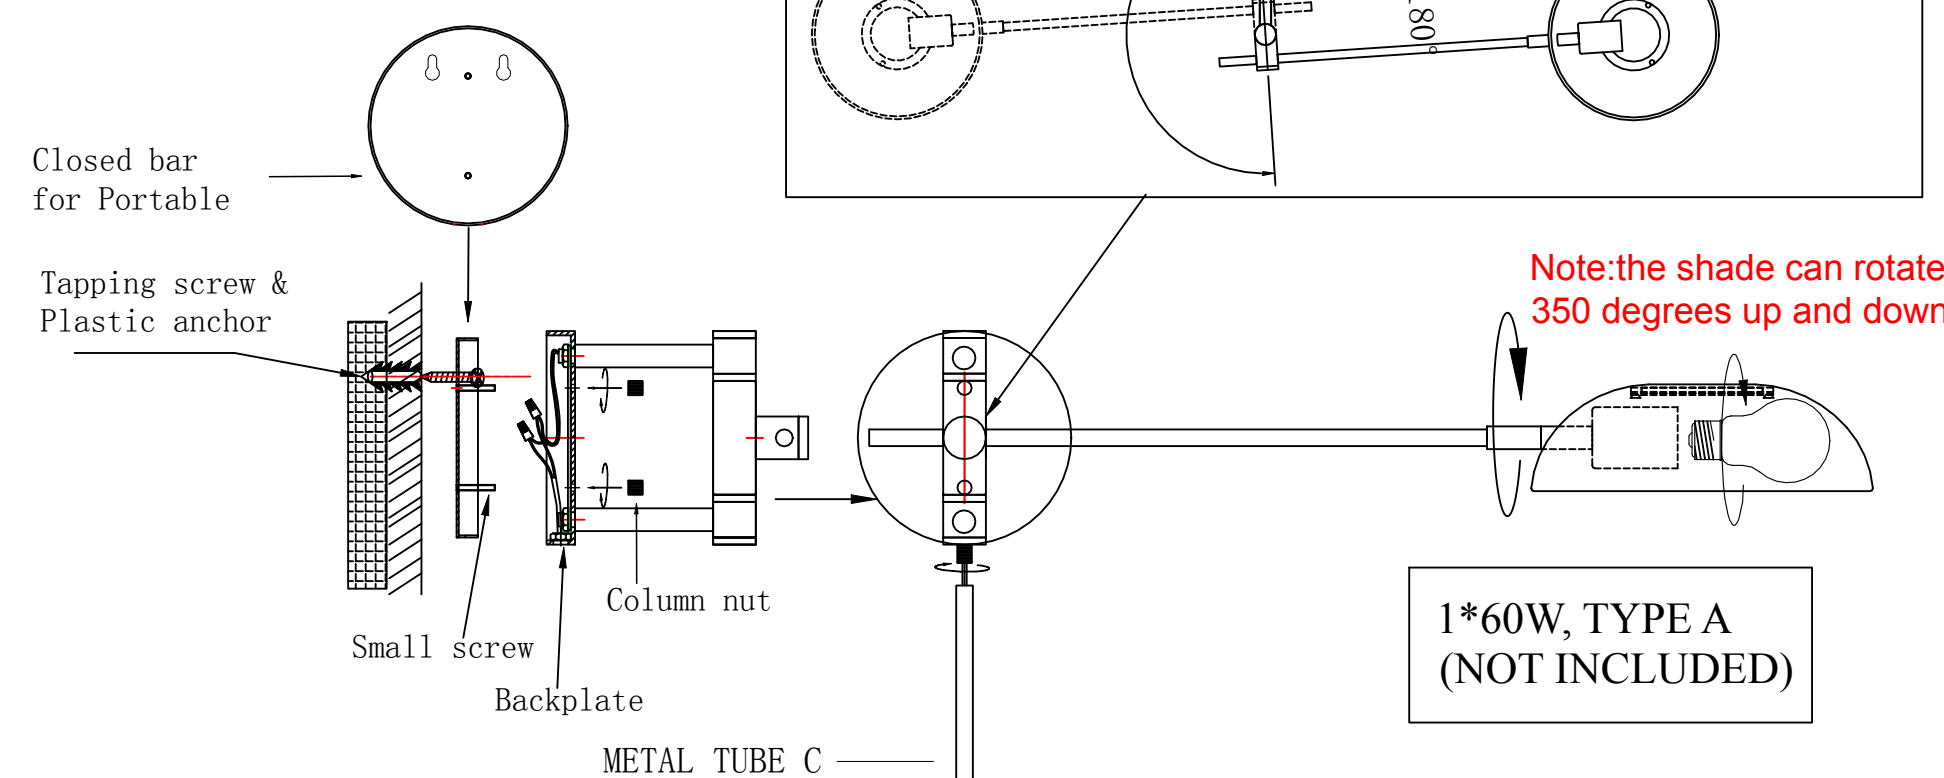

DIRECT WIRE  
MOUNTING PLATE OPTION  
(Fig.2)

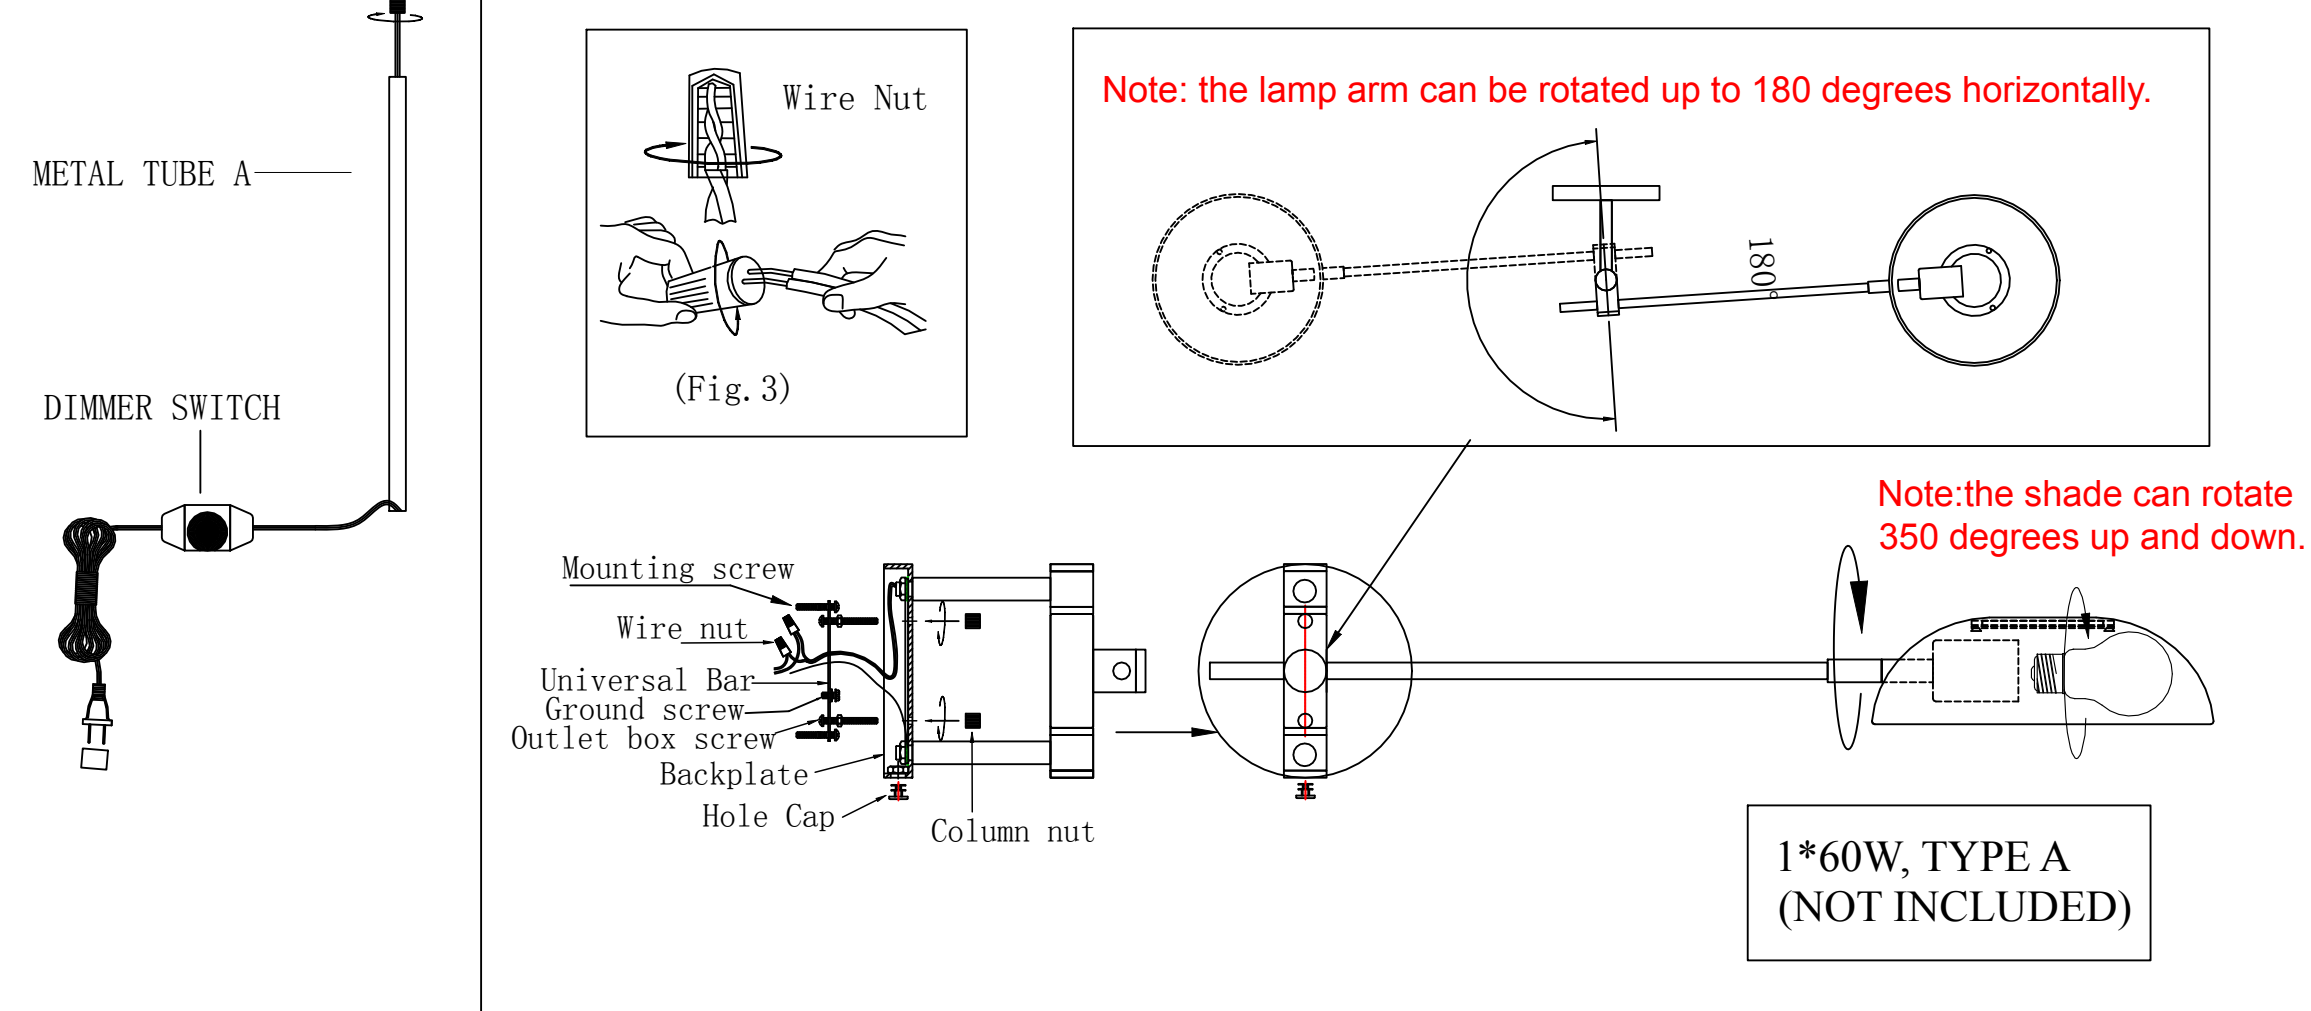

REVELATION  
by UTTERMOST  
ASSEMBLY INSTRUCTIONS

ITEM NO: R22567

Parts and Hardware List

A.	Column Nut	2PCS
B.	Closed Bar for Portable	1PC
C.	Universal Bar	1PC
D.	Mounting Screw	2PCS
E.	Green Ground Screw	1PC
F.	Wire Nut	3PCS
G.	Hole cap	1PC
H.	Knurl Screw	4PCS
I.	Tapping screw	2PCS
K.	Plastic Anchor	2PCS

**WARNING: BEFORE INSTALLING**, make sure the electricity supply is shut off to avoid a possible electric shock. We suggest a licensed electrician for all installations.

**Important Safety Instructions:**

- This sconce can be converted from portables (plug in) into fixture (hardwired).
- These instructions are provided for your safety. It is very important that they are read carefully and completely before beginning the assembly and installation of this lighting fixture.
- This portable luminaire has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.
- The lighting fixture is meant for indoor use. It must be connected only to 3-wire, single-phase electrical supply systems (provided with Ground wire or equivalent protection system).
- We strongly recommend that a professional electrician install all direct wire fixtures.
- THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODES BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

**CORD COVER ASSEMBLY. (See Fig.1)**

1. Carefully remove the parts and hardware from the carton.
2. Attach the backplate to fix closed bar, and secure column nut in small screw.
3. Screw the metal tube C to the backplate; screw the metal tube B to the metal tube C; screw the metal tube A to the metal tube B.
4. The Plastic Anchors and Tapping screws fasten on the wall, then the wall sconce hang on the Tapping screws.
5. Install 1\*60 Watt max, Type A bulb (NOT INCLUDED) into the socket of the fixture.

**DIRECT WIRE INSTALLATION (See Fig.2)**

1. Remove the black tape, and unscrew the wire nut, and take off the metal tubes (A,B&C) and clear wire with plug. Leave twelve inches black, white wires and ground wire.
2. Fasten the Universal bar onto the Outlet Box using the mounting screw .
3. Install both ground wires in the Universal bar with the Green Ground Screw supplied.
4. Place the white wire, ribbed or tinted wire evenly against the white wire from the outlet box and place the black, smooth or un-tinted wire evenly against the black wire from the outlet box. (Connecting the Wires - See Figure 3)
5. Attach the backplate to fix universal bar, and secure the column nut in outlet box screw.
6. Install 1\*60Watt max, Type A bulb (NOT INCLUDED) into the socket of the fixture.