




REVELATION

by UTTERMOST

ASSEMBLY INSTRUCTIONS

Illustration

ITEM NO.:R22575

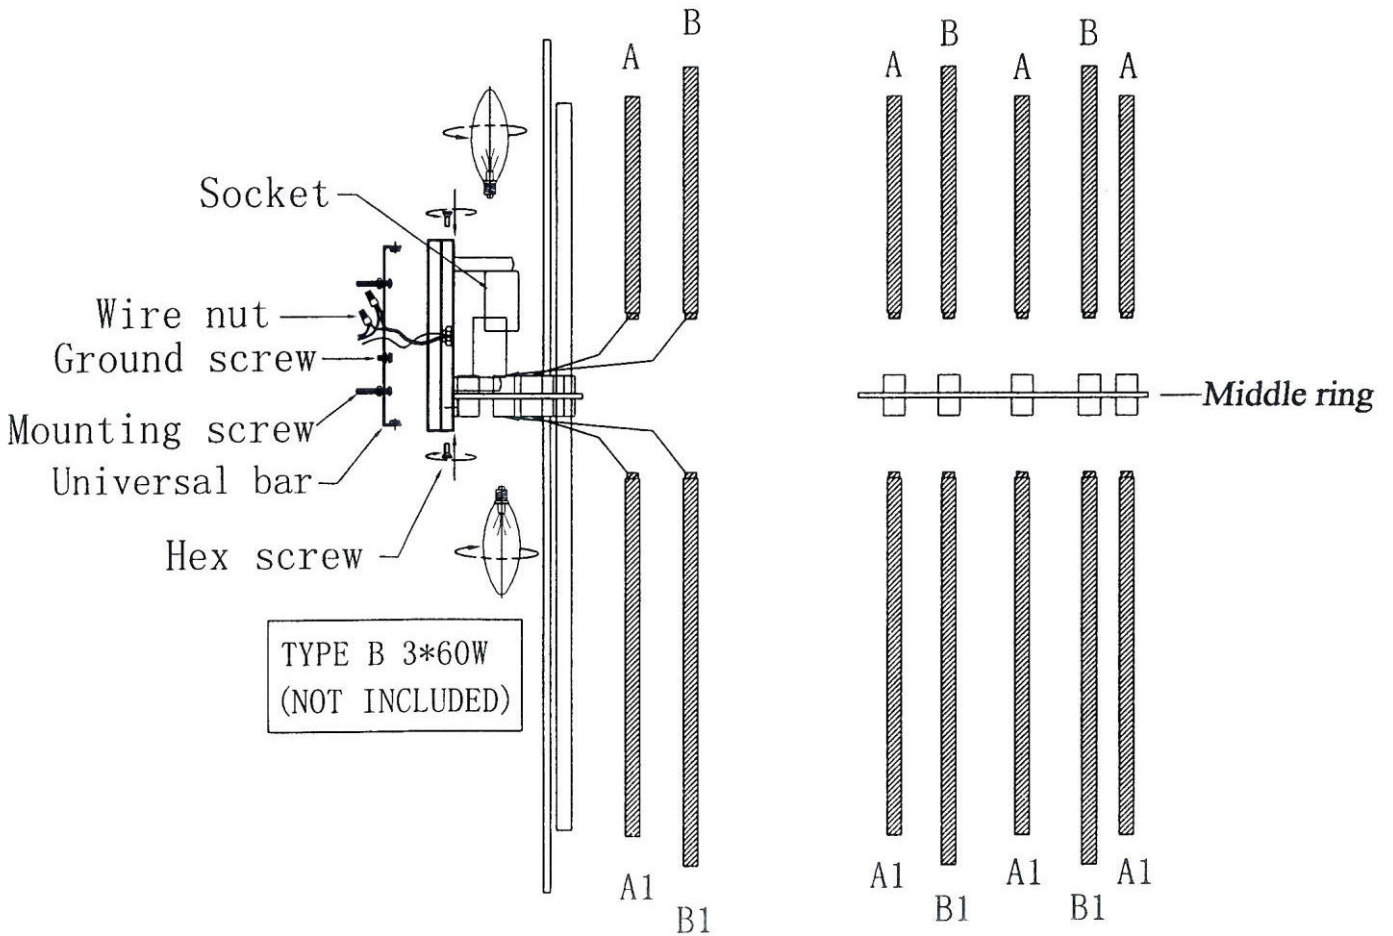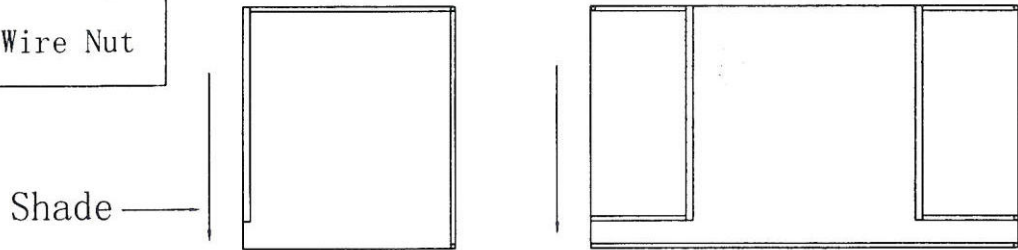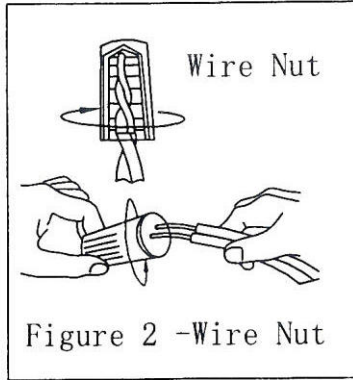

REVELATION

by UTTERMOST

ASSEMBLY INSTRUCTIONS

Parts and Hardware List

ITEM NO: R22575

A.	Hex screw	2PCS
B.	Universal Bar	1PC
C.	Mounting Screw	2PCS
D.	Green Ground Screw	1PC
E.	Wire Nut	3PCS
F.	A acrylic rod	3PCS
G.	B acrylic rod	2PCS
H.	A1 acrylic rod	3PCS
I.	B1 acrylic rod	2PCS

WARNING: BEFORE INSTALLING, make sure the electricity supply is shut off to avoid a possible electric shock. We suggest a licensed electrician for all installations.

1. Carefully remove the parts and hardware from the carton.
2. Fasten the Universal bar onto the Outlet Box using the mounting screw.
3. Install both ground wires in the Universal bar with the Green Ground Screw supplied.
4. Place the white wire, ribbed or tinted wire evenly against the white wire from the outlet box and place the black, smooth or un-tinted wire evenly against the black wire from the outlet box. (Connecting the Wires - See Figure 2)
5. Attach the backplate to fix universal bar, and secure with the hex screw.
6. Insert the shade from top to bottom into the backplate slot.
7. Install 3*60 Watt max, Type B bulb (NOT INCLUDED) into the socket of the fixture.