


Illustration

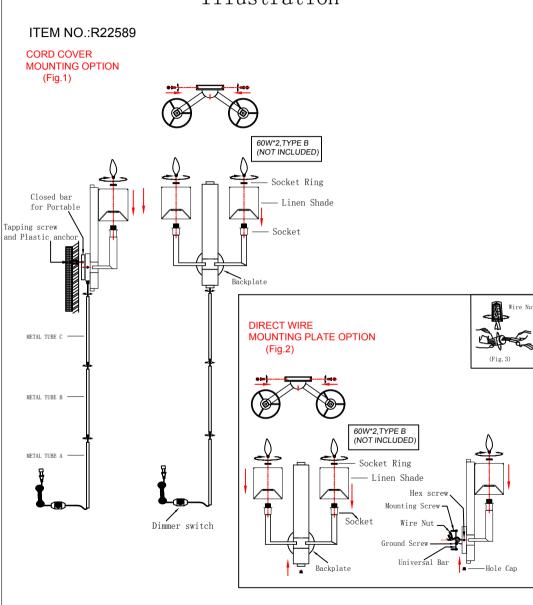

P.O. Box 558 | 3325 Grassy Hill Road | Rocky Mount, VA | 24151

www.uttermost.com/Revelation

REVELATION ASSEMBLY INSTRUCTIONS

ITEM NO: R22589

Parts and Hardware List

A.	Hex screw	2PCS
В.	Closed Bar for Portable	1PC
C.	Tapping screw	2PCS
D.	Plastic Anchor	2PCS
Ε.	Hole cap	1PC
F.	Universal Bar	1PC
G.	Mounting Screw	2PCS
Н.	Green Ground Screw	1PC
I.	Wire Nut	3PCS

WARNING: BEFORE INSTALLING AND USER MAINTENANCE, make sure the electricity supply is shut off to avoid a possible electric shock. We suggest a licensed electrician for all installations.

Important Safety Instructions:

- •This sconce can be converted from portables (plug in) into fixture (hardwired).
- •These instructions are provided for your safety. It is very important that they are read carefully and completely before beginning the assembly and installation of this lighting fixture.
- •This portable luminaire has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit. contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not alter the plug. Do not attempt to defeat this safety feature.
- •The lighting fixture is meant for indoor use. It must be connected only to 3-wire, single-phase electrical supply systems (provided with Ground wire or equivalent protection system).
- •We strongly recommend that a professional electrician install all direct wire fixtures.
- •THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODES BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

CORD COVER ASSEMBLY, (See Fig.1)

- 1. Carefully remove the parts and hardware from the carton.
- 2. Attach the backplate to fix closed bar, and secure with the hex screw.
- 3. Screw the metal tube C to the lamp body; screw the metal tube B to the metal
- tube C: screw the metal tube A to the metal tube B.
- 4. The Plastic Anchors and Tapping screws fasten on the wall, then the wall sconce hang on the Tapping screws.
- 5. Place the linen shades onto the socket .then screw the socket ring closewise onto the socket until the linen shades are secured.

DIRECT WIRE AS SCONCE INSTALLATION (See Fig.2)

- 1. Carefully remove the parts and hardware from the carton.
- 2. Remove cord covers and plug wire. Fasten the Universal bar onto the Outlet Box using the mounting screw.
- 3. Install both ground wires in the Universal bar with the Green Ground Screw supplied.
- 4. Place the white wire, ribbed or tinted wire evenly against the white wire from the outlet box and place the black, smooth or un-tinted wire evenly against the black wire from the outlet box. (Connecting the Wires - See Figure 3)
- 5. Use cap to cover hole of backplate.
- 6.Attach the backplate to fix universal bar, and secure with the hex screw.
- 7. Place the linen shades onto the socket, then screw the socket ring clockwise onto the socket until the linen shades are secured.
- 8.Install 2*60Watt max, Type B bull(NOT INCLUDED) into the socket of the fixture.

P.O. Box 558 | 3325 Grassy Hill Road | Rocky Mount, VA | 24151 www.uttermost.com/Revelation