



REVELATION
by UTTERMOST
ASSEMBLY INSTRUCTIONS

Illustration

ITEM NO.:R22594

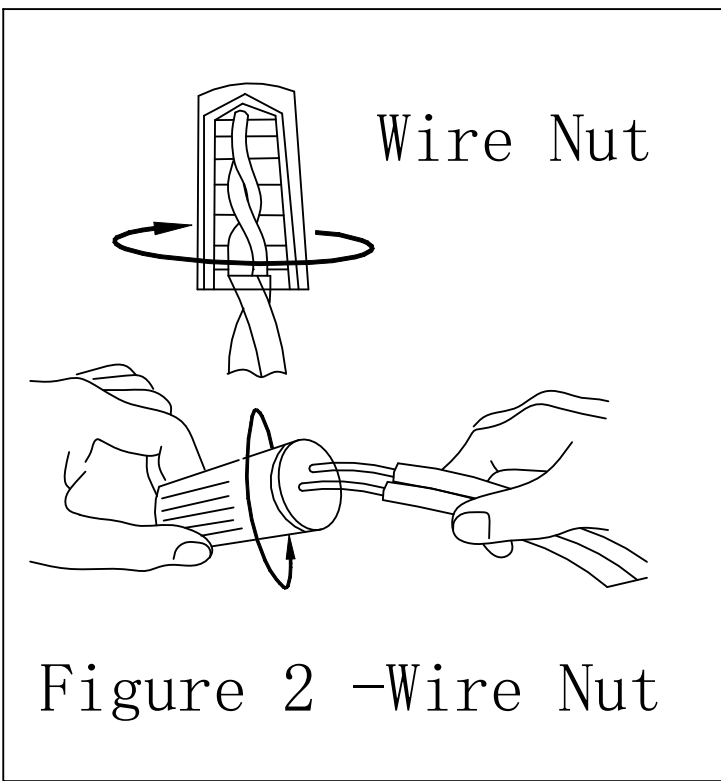

This wall sconce can be mounted horizontal & vertical.

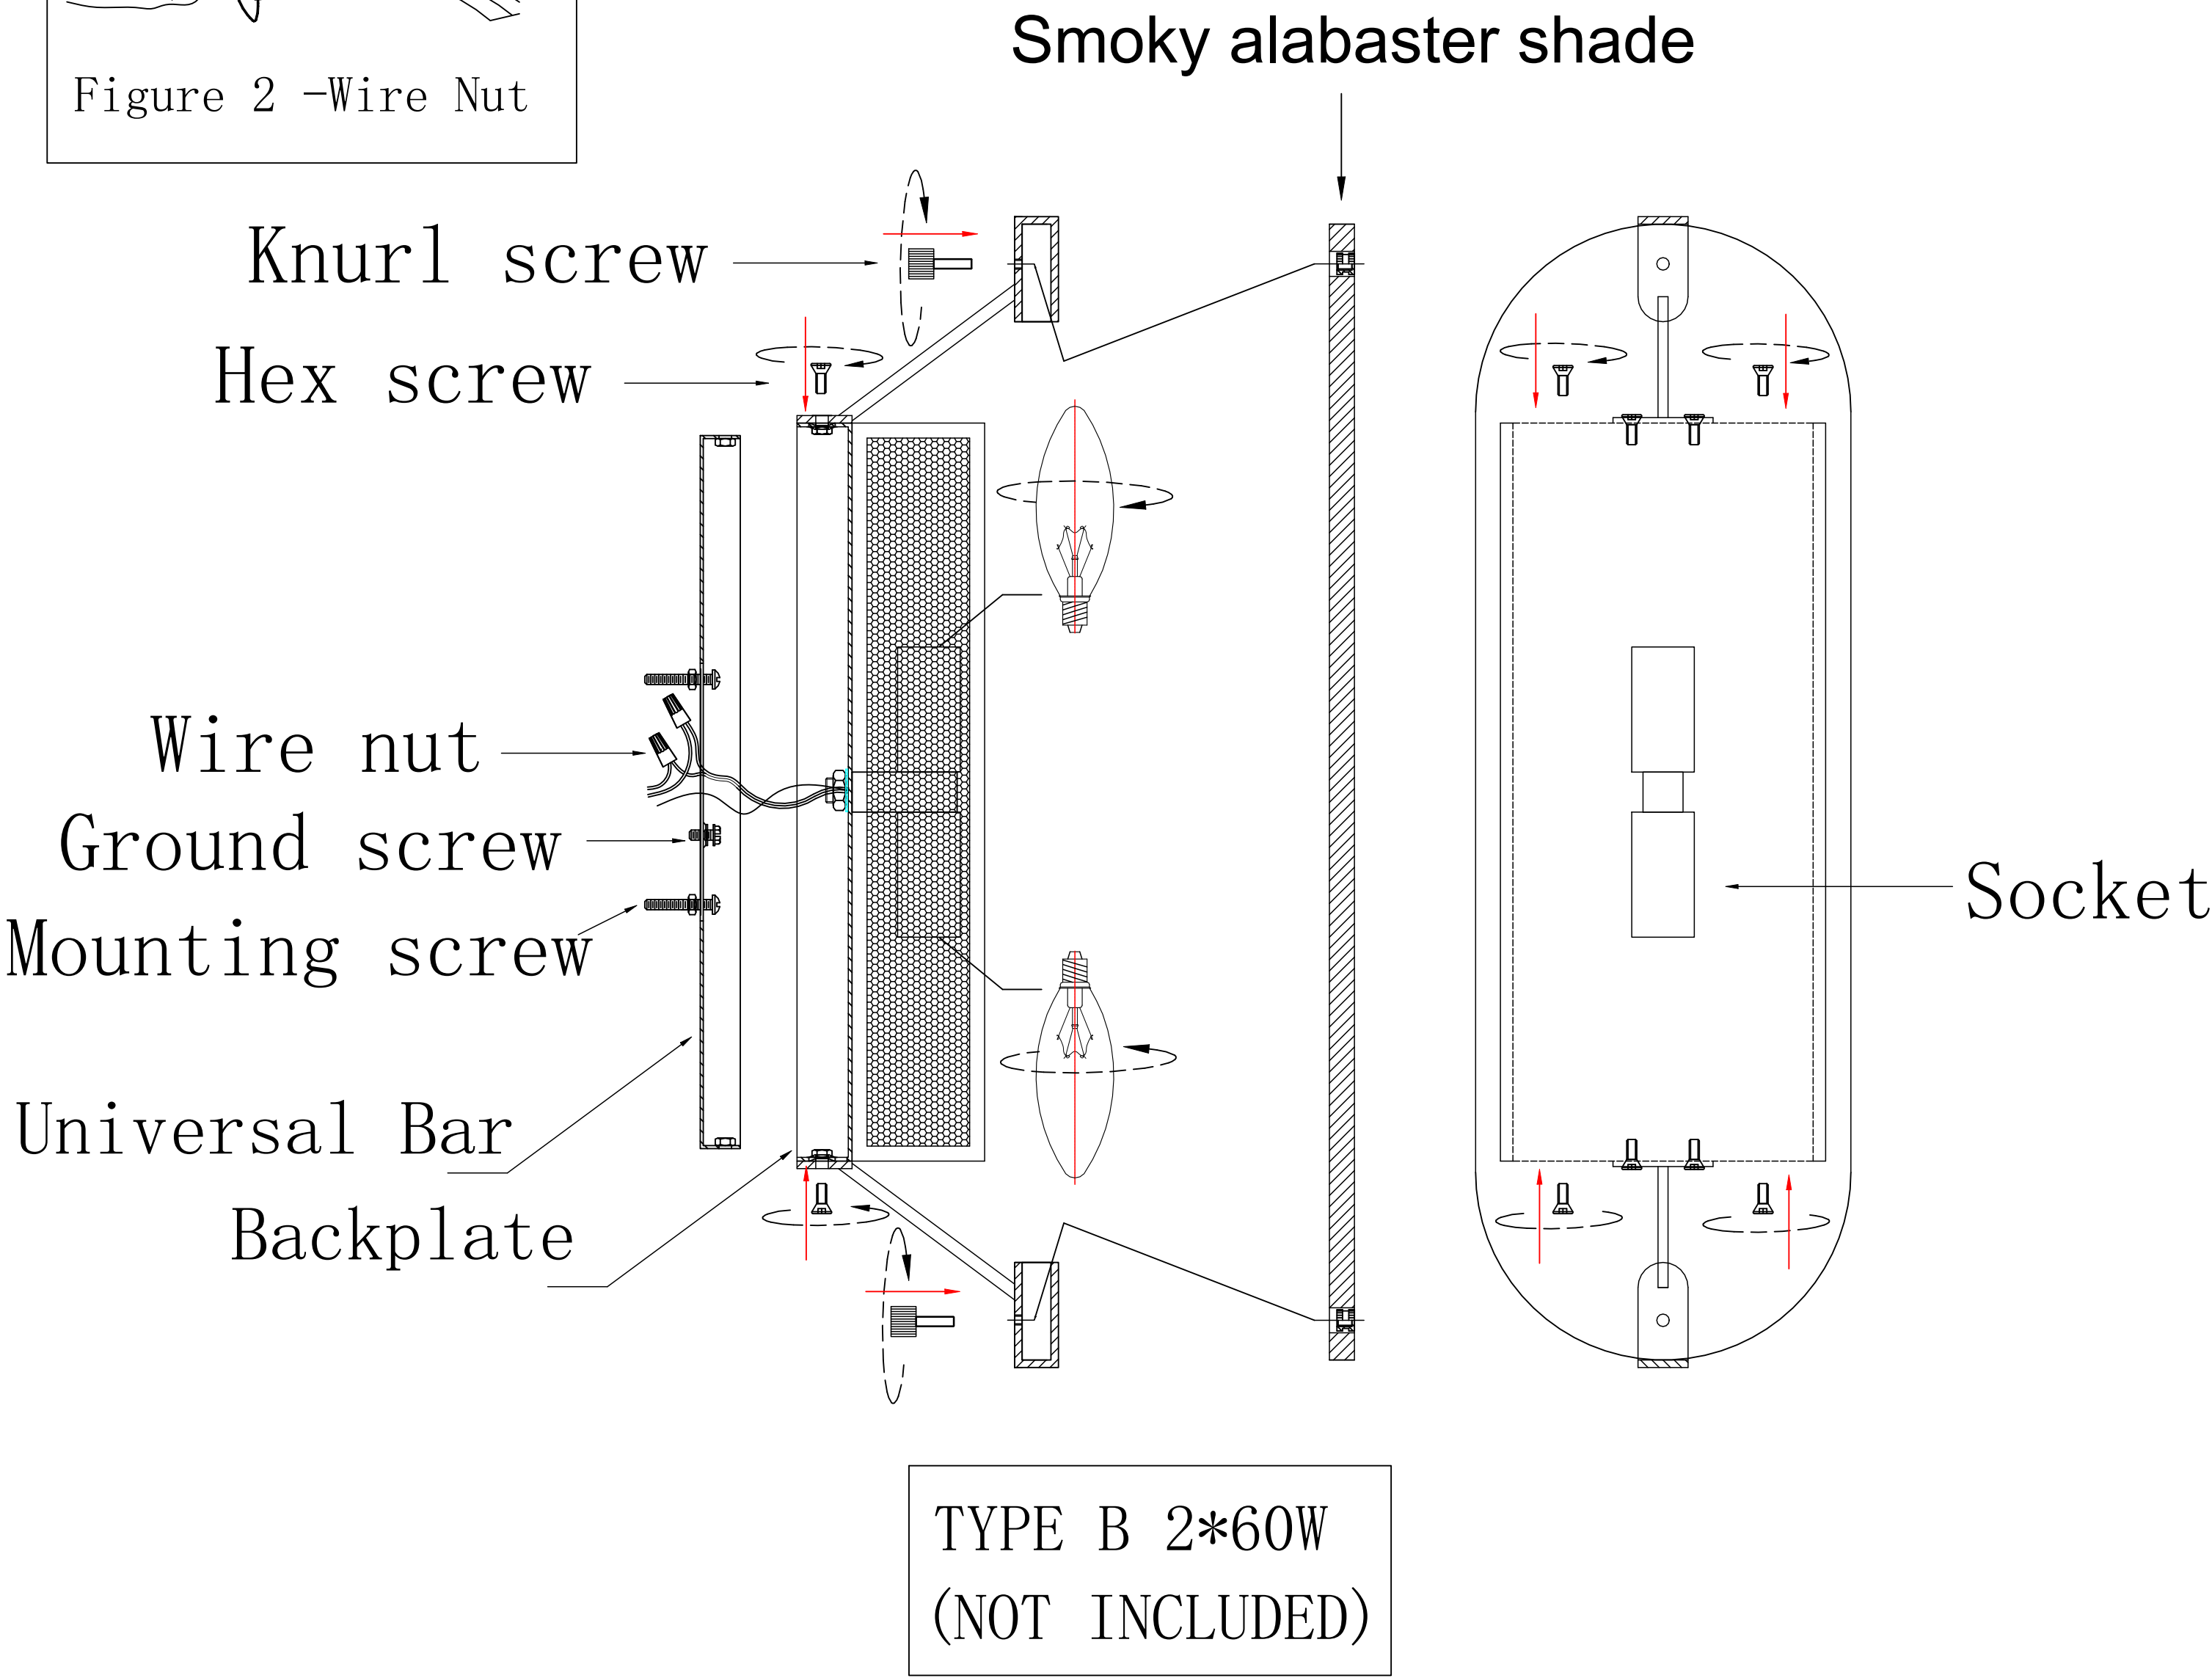

REVELATION
by UTTERMOST
ASSEMBLY INSTRUCTIONS

Parts and Hardware List

ITEM NO: R22594

A.	Hex screw	4PCS
B.	Universal Bar	1PC
C.	Mounting Screw	2PCS
D.	Green Ground Screw	1PC
E.	Wire Nut	3PCS
F.	Knurl Screw	2PCS

WARNING: BEFORE INSTALLING, make sure the electricity supply is shut off to avoid a possible electric shock. We suggest a licensed electrician for all installations.

- Carefully remove the parts and hardware from the carton.
- Fasten the Universal bar onto the Outlet Box using the mounting screw .
- Install both ground wires in the Universal bar with the Green Ground Screw supplied.
- Place the white wire, ribbed or tinted wire evenly against the white wire from the outlet box and place the black, smooth or un-tinted wire evenly against the black wire from the outlet box. (Connecting the Wires - See Figure 2)
- Attach the backplate to fix universal bar, and secure with the hex screw.
- Install 2*60 Watt max, Type B bulb (NOT INCLUDED) into the socket of the fixture.
- Attach the smoky alabaster shade to lamp body and secure with knurl screw.