



REVELATION  
by UTTERMOST  
ASSEMBLY INSTRUCTIONS

Illustration

ITEM NO.:R22604

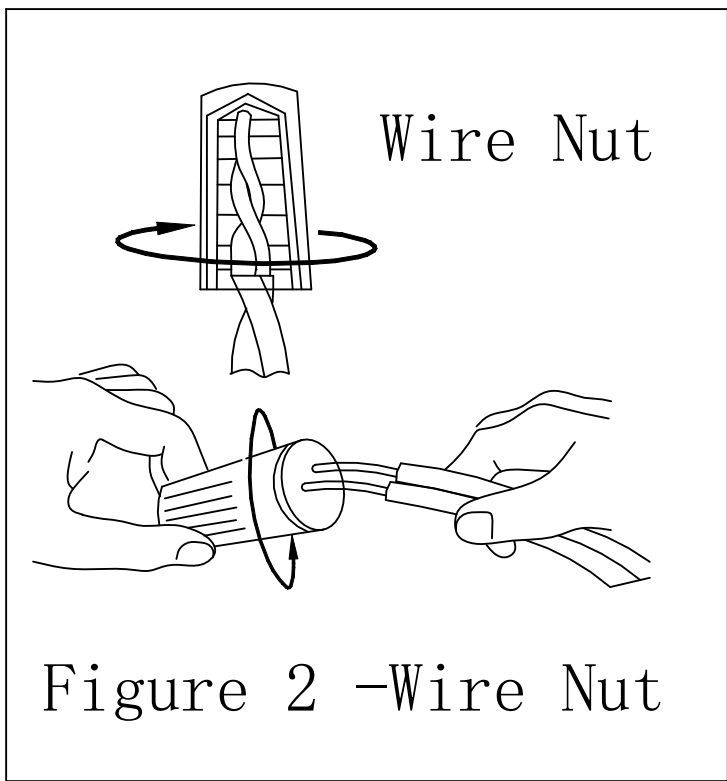

This wall sconce can only be mounted vertical.

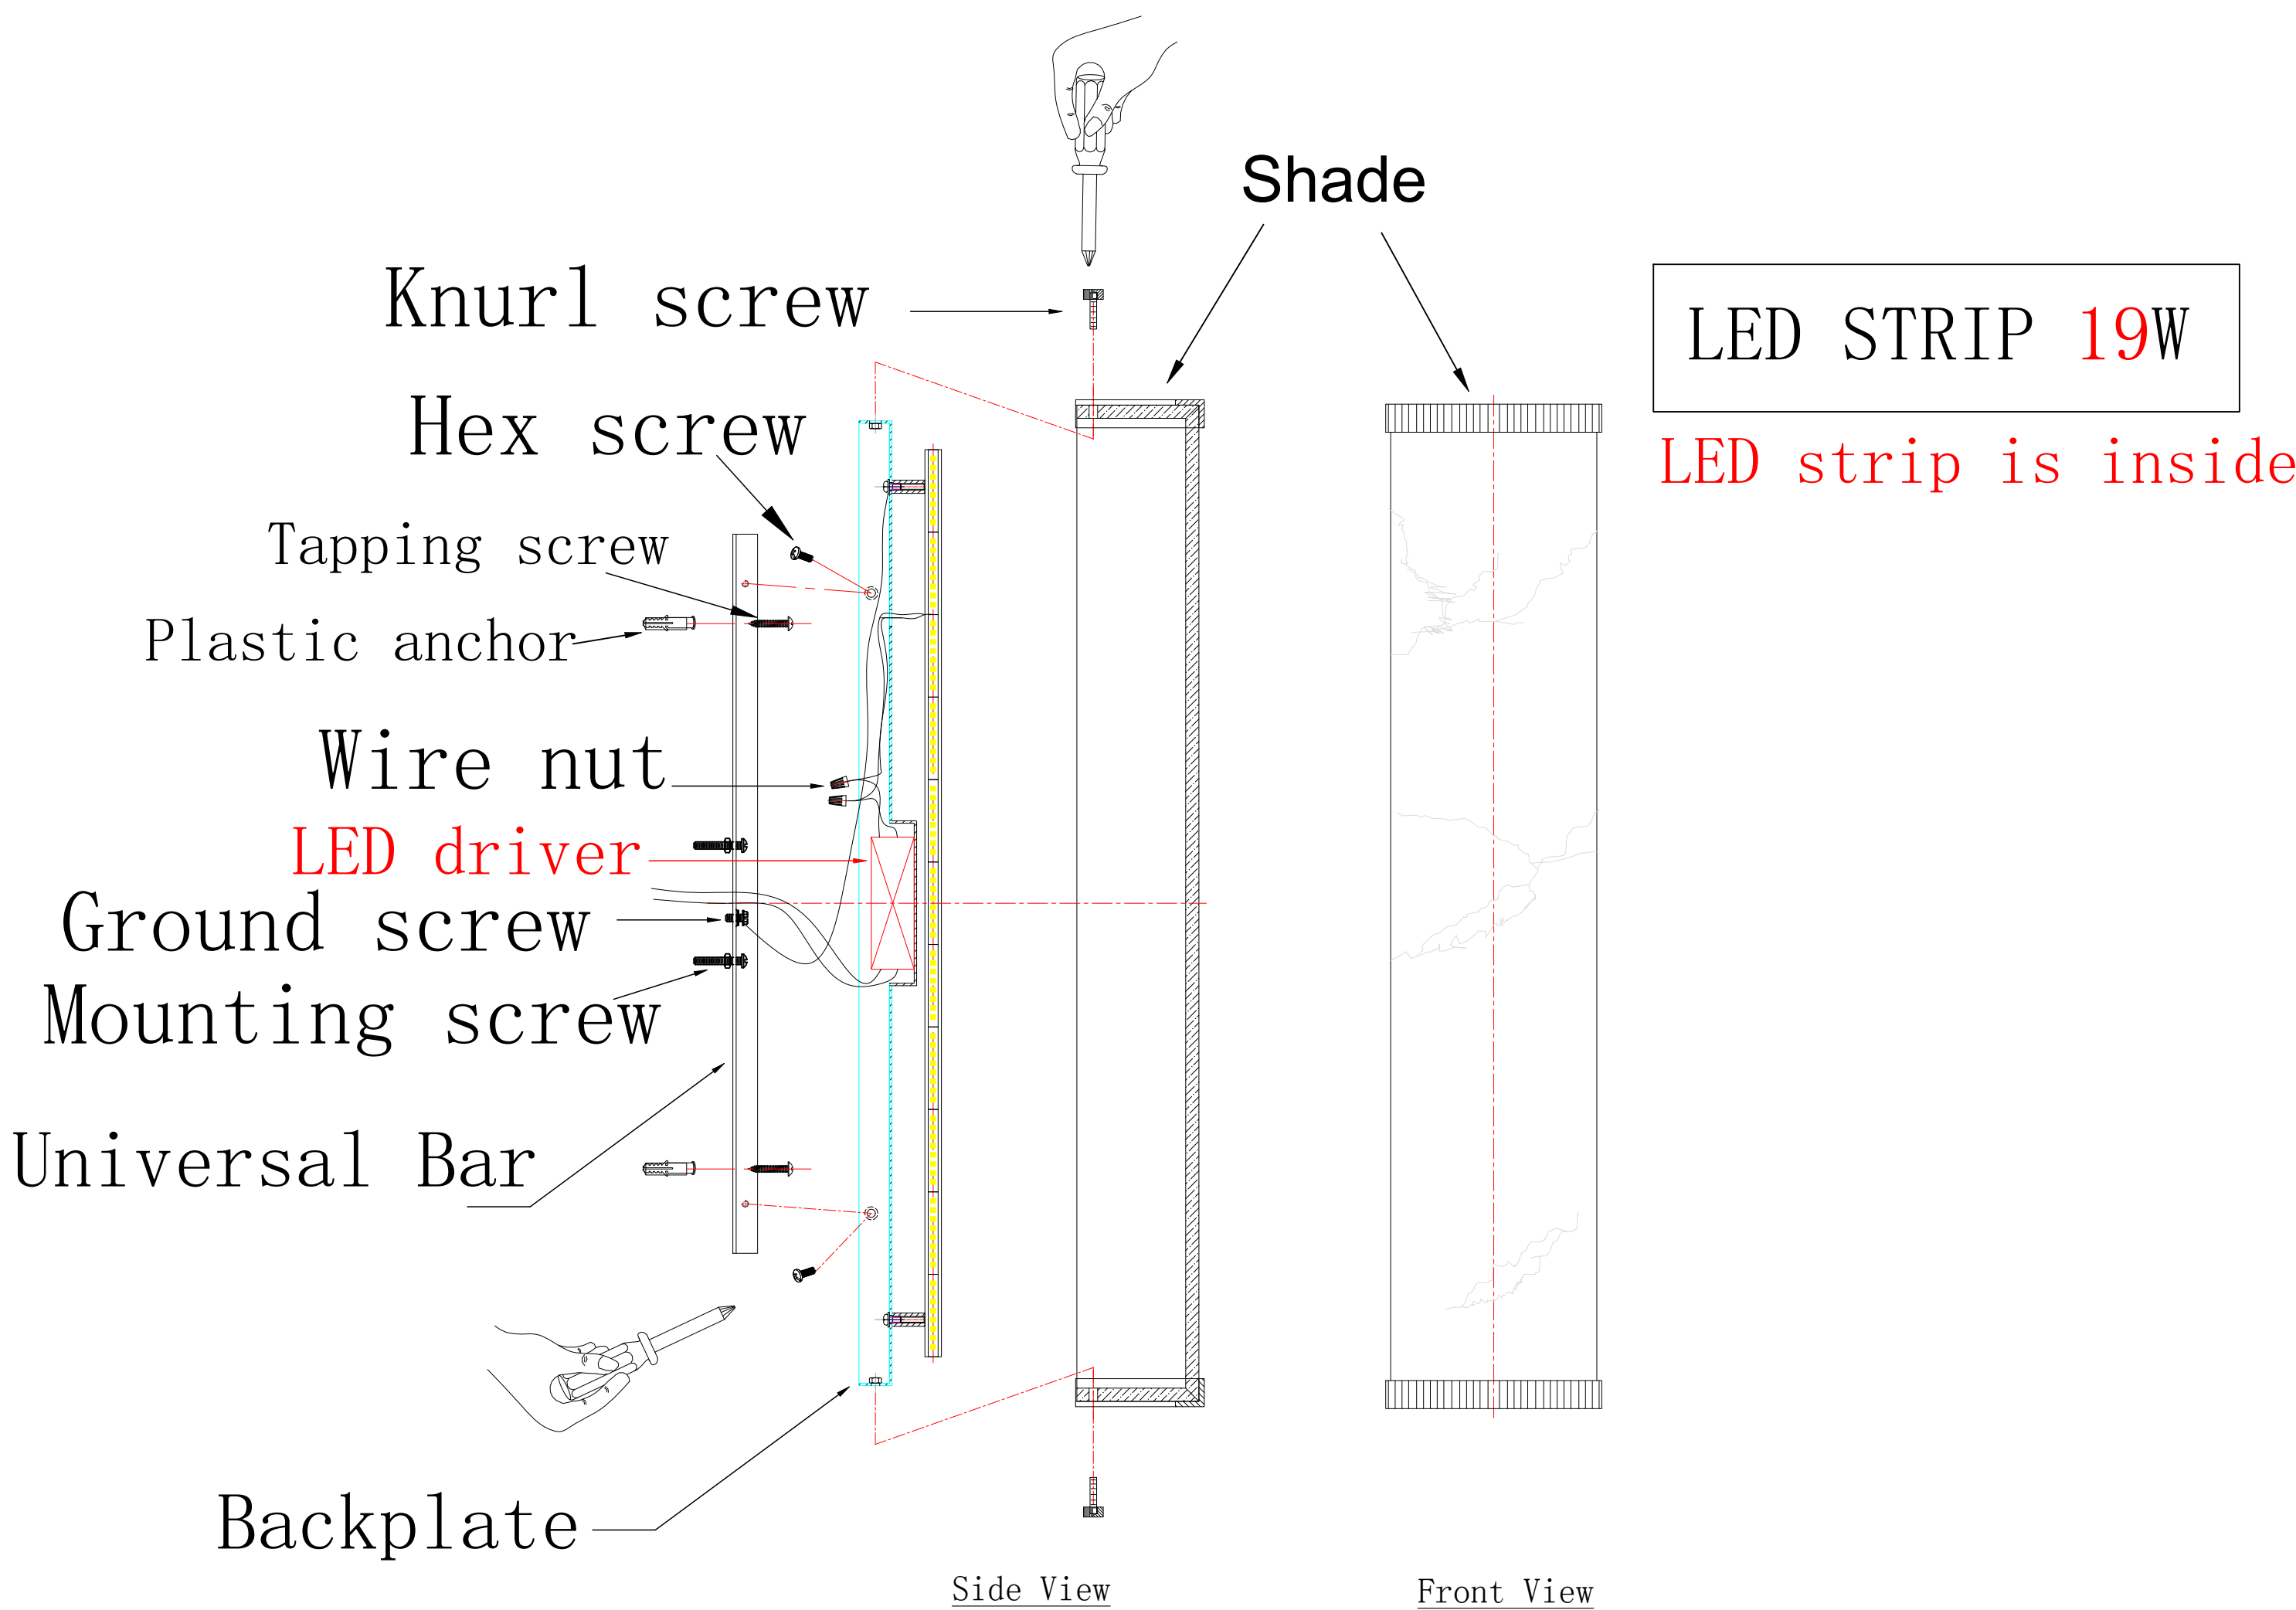

REVELATION  
by UTTERMOST  
ASSEMBLY INSTRUCTIONS

Parts and Hardware List

ITEM NO: R22604

A.	Hex screw	4PCS
B.	Universal Bar	1PC
C.	Mounting Screw	2PCS
D.	Green Ground Screw	1PC
E.	Wire Nut	3PCS
F.	Knurl Screw	2PCS
G.	Tapping screw	2PCS
H.	Plastic Anchor	2PCS

**WARNING: BEFORE INSTALLING**, make sure the electricity supply is shut off to avoid a possible electric shock. We suggest a licensed electrician for all installations.

- Carefully remove the parts and hardware from the carton.
- Fasten the Universal bar onto the Outlet Box using plastic anchors and tapping screws,then secure the mounting screws.
- Install both ground wires in the Universal bar with the Green Ground Screw supplied.
- Place the white wire, ribbed or tinted wire evenly against the white wire from the outlet box and place the black, smooth or un-tinted wire evenly against the black wire from the outlet box. (Connecting the Wires - See Figure 2)
- Attach the backplate to fix universal bar, and secure with the hex screw.
- Attach the shade to lamp body and secure with knurl screw.
- 19W** LED light source (Built in) .

**Dimming control compatibility:**DIMMABLE WHEN USED WITH A LUTRON DVCL-153P-WH DIMMER