


REVELATION by UTTERMOST

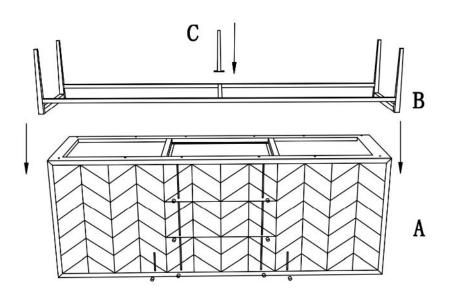

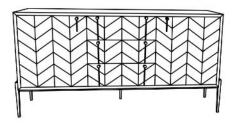



Assembly Instruction R24749

- 1. Take the parts carefully out of the carton, and place it on a flat surface, make sure that the parts will not be damaged.
- 2. Place part A on flat ground conversely.
- 3.Lock part B to the part A with screws.
- 4. Fix the part C to the part B by allen screws.
- 5. Take out the handles out of the hardware bag, and fix them on the doors and drawers.

The product is heavy, multiple people are needed for assembly.

Hardware and tool included:allen screws, allen wrench, washers, screws, handles. To clean, wipe with soft dry cloth.