


# REVELATION

by UTTERMOST

## Assembly Instruction

STYLE NO.: R24902

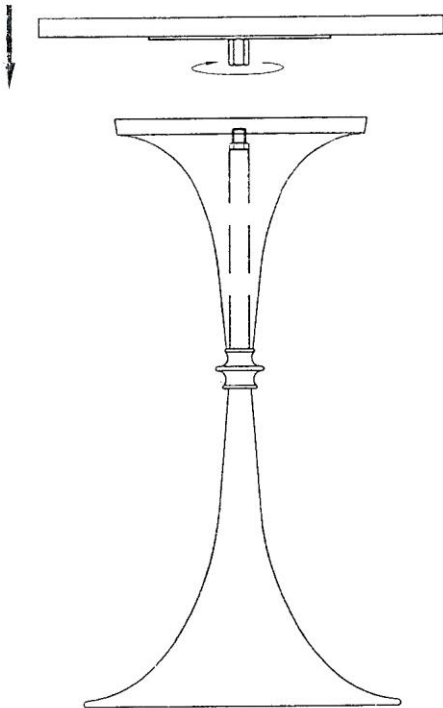

1. Take the parts carefully out of the carton, and place them on a flat surface, make sure that the parts will not be damaged.

2. Put the marble desktop on the metal base, and the nut is aligned to threaded pipe; screwing marble desktop to metal base until tightly.

**To clean, wipe with soft dry cloth.**