

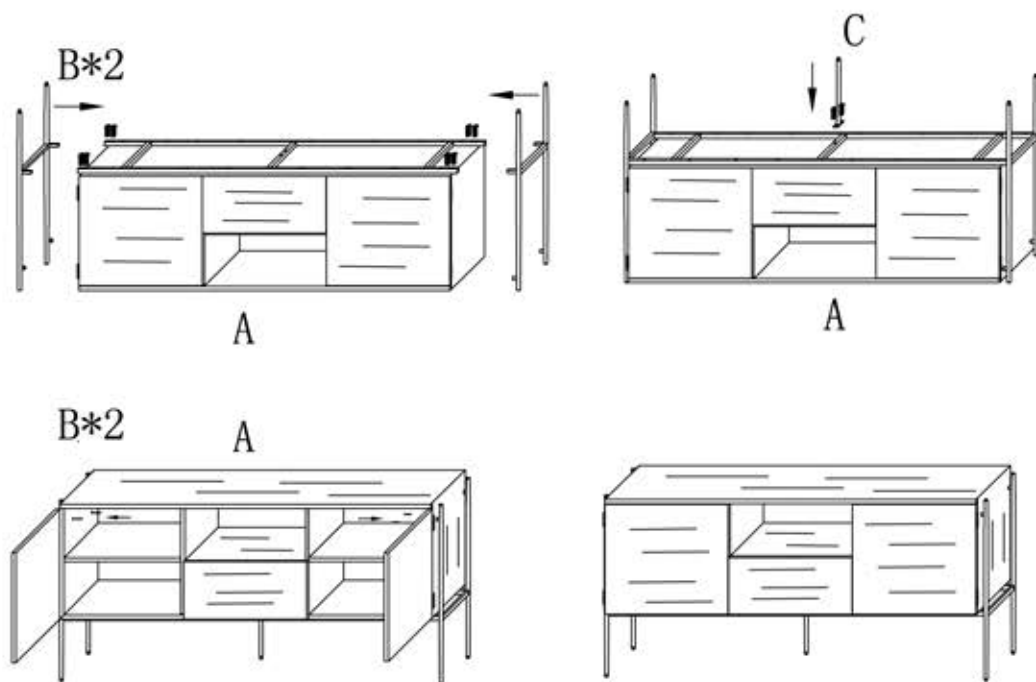
# REVELATION





by UTTERMOST

## ASSEMBLY INSTRUCTIONS

### Assembly Instruction

R24930



			
16mmX1018mmX14		25mmX4	4mmX1

1. Take the parts carefully out of the carton, and place it on a flat surface, make sure that the parts will not be damaged.
2. Place Part A on flat ground conversely.
3. Lock bottom of Part B to the side of Part A by 16mm allen screws.
4. Fix the Part C to the Part A by 16mm allen screws.
5. Fix the iron pole of Part B to the cabinet body of Part A by 25mm allen screws.

Multiple people needed because the Part A is very heavy.

Hardware and tool included: allen screws, allen wrench, washers.

To clean, wipe with soft dry cloth.