

REVELATION


by UTTERMOST

ASSEMBLY INSTRUCTIONS

Assembly Instruction

STYLE NO.: R25246

1. Take the parts carefully out of the carton, and place them on a flat surface, make sure that the parts will not be damaged.

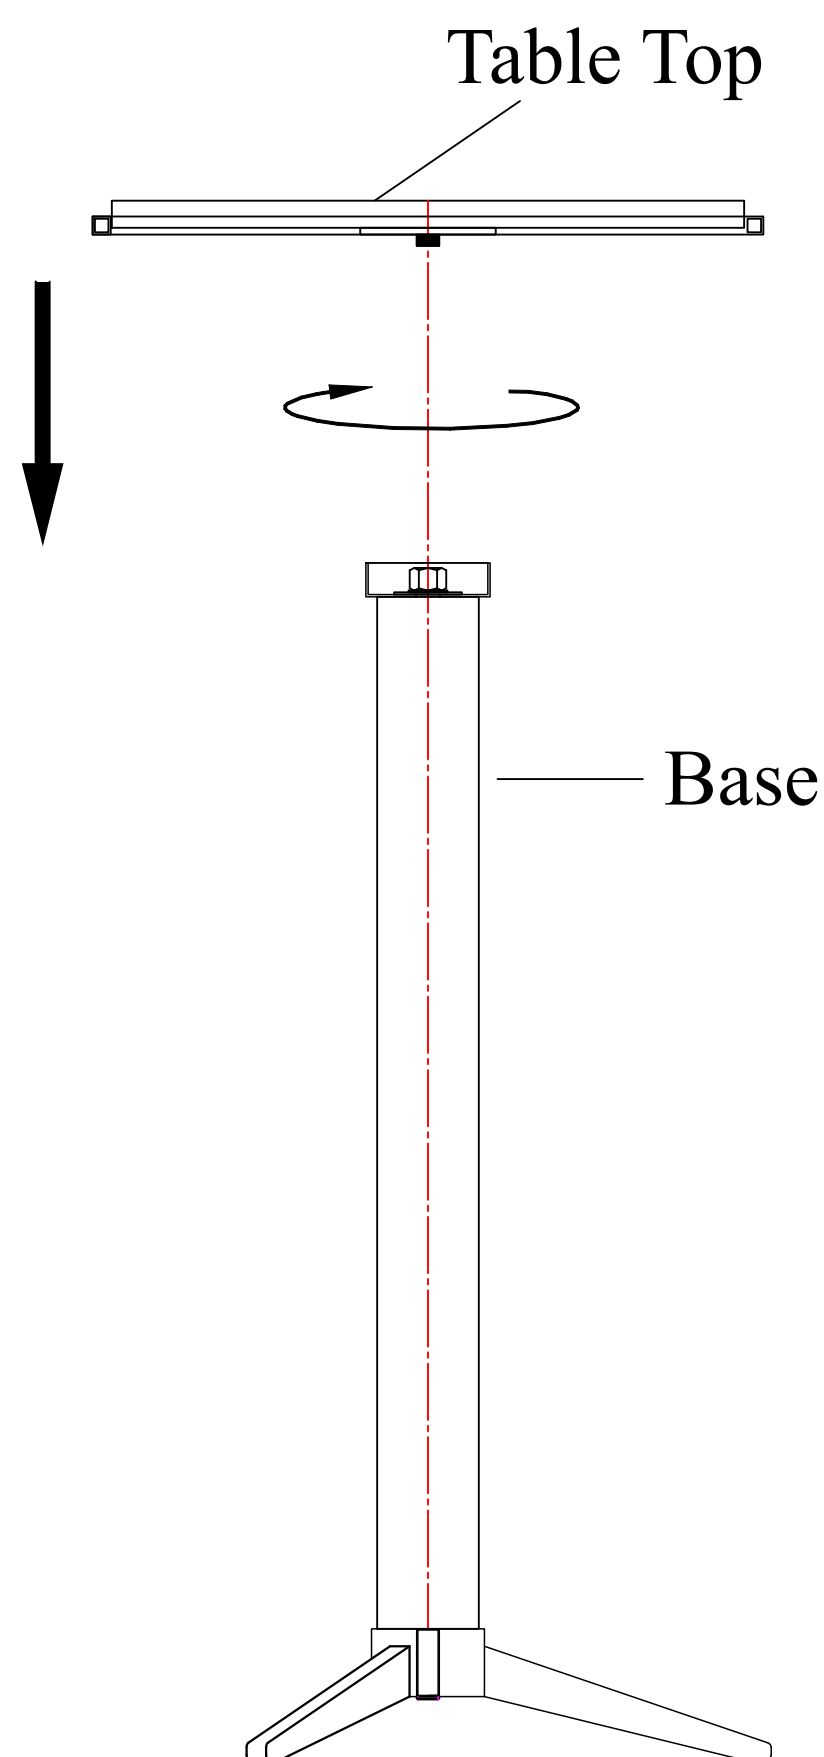

2. Put the table top on the base, aligning the nut with the threaded pipe. Then screw the top until tight .

To clean, wipe with soft dry cloth.

NOTE: THE DRAWING OF THE TABLE IS FOR REFERENCE ONLY.