

# REVELATION


by UTTERMOST

## ASSEMBLY INSTRUCTIONS

STYLE# R28109-1

*Careful unpack all lamp parts from the carton.*

1. Place the Base in an upright position on the floor
2. Thread **Part A** into the **Base** by turning Part A clockwise to tighten until snug.
3. Thread **Part B** into **Part A** by turning Part B clockwise to tighten until snug.
4. Position the **Socket** through the hole on the top of the **Metal Shade**. Thread the **Socket Collar** onto the **Socket** to secure them. Hand tighten until snug.
4. Install correct Bulbs referring to fixture markings and /or labels for maximum wattage.(Not Included)

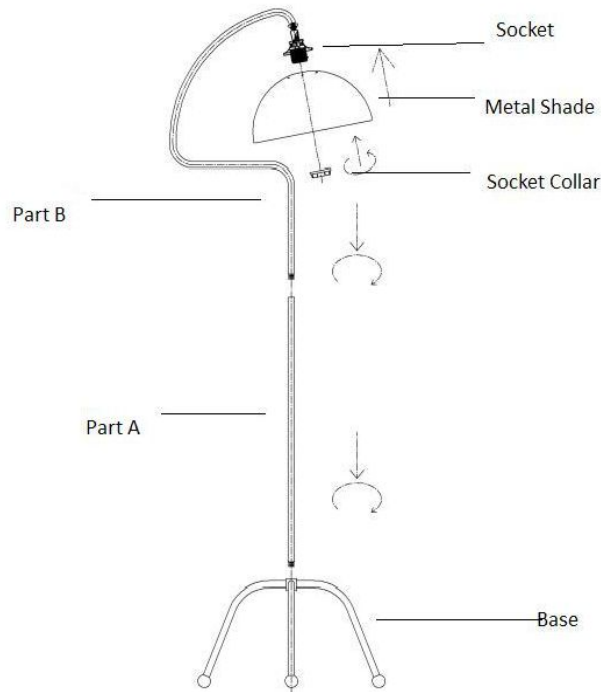

### IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug ( one blade is wider than the other ) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151  
[www.uttermost.com](http://www.uttermost.com)































































































