

REVELATION


by UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE#: R28142-1

Careful unpack all lamp parts from the carton

1. Place the Base in an upright position on the floor
2. Insert the **Part A** into the top of the **Base** while pulling excess cord where it exits the **Base**. attach **Flat washer** and **Hex nut** to the threaded rod of **Part A**. The **Flat Washer** and **Hex Nut** are pre-positioned on the cord. Tighten the **Hex Nut** by using **Wrench** enclosed in the parts bag.
3. Thread **Part A** into the **Base** by turning **Part A** clockwise to tighten until snug.
4. Thread **Part B** into **Part A** by turning **Part B** clockwise to tighten until snug.
5. Position the round plate on the top of the **Shade** through the **Socket**. Thread the **Metal Sleeve** onto the **socket**. Then use **Plastic Wrench** to lock the **Socket Collar** to secure the **Shade**. Hand tighten until snug.
6. Install correct Bulbs referring to fixture markings and /or labels for maximum wattage.(Not Included)

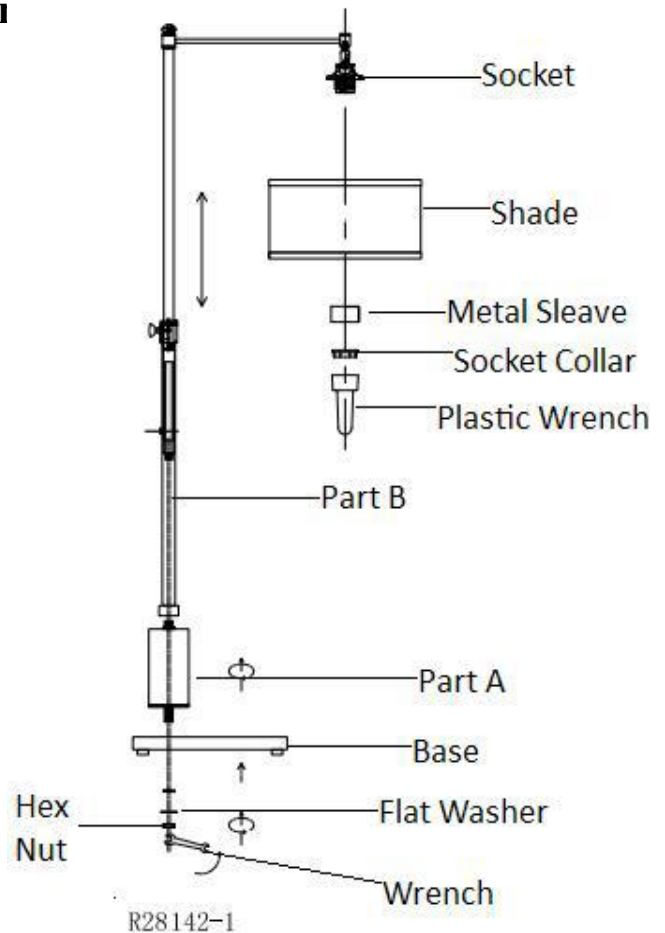

IMPORTANT SAFETY INSTRUCTIONS

This Floor lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.