


# REVELATION

by UTTERMOST

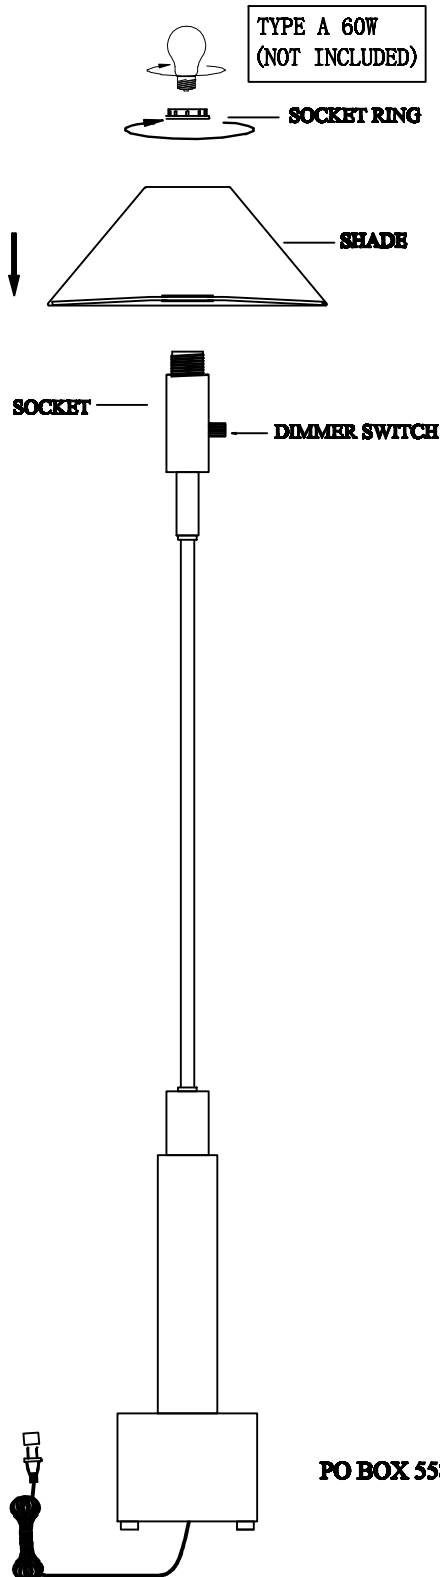

## Assembly Instruction

STYLE NO.: R28357-1

1. Take the parts carefully out of the carton, and place them on a flat surface, make sure that the parts will not be damaged.
2. Place the shade on the socket and secure by socket ring.
3. Install 60 Watt, Type A bulb (INCLUDED) into the socket of the lamp.

To clean, wipe with soft dry cloth.

**NOTE: THE DRAWING OF THE LAMP BODY IS FOR REFERENCE ONLY.**

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151  
[www.revelationbyuttermost.com](http://www.revelationbyuttermost.com)