


REVELATION

by UTTERMOST

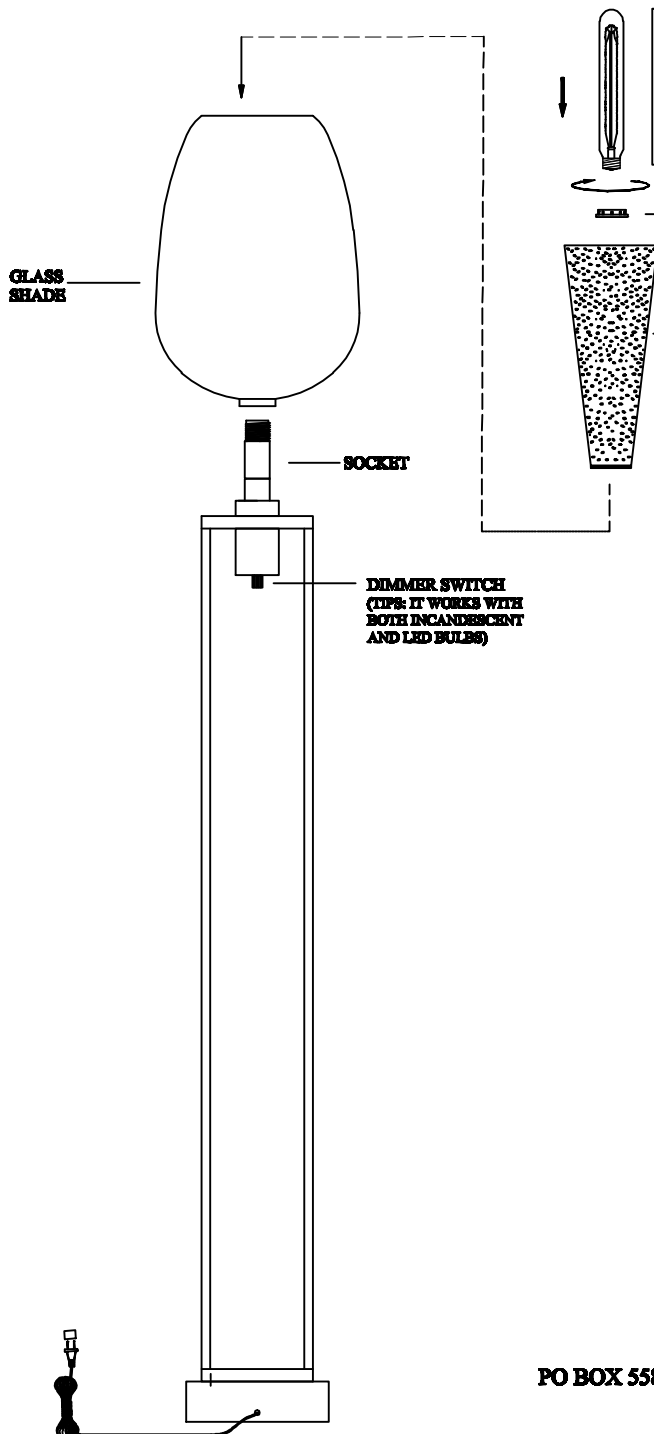

Assembly Instruction

STYLE NO.: R28363-1

1. Take the parts carefully out of the carton, and place them on a flat surface, make sure that the parts will not be damaged.

2. Place the glass shade on the socket and attach the metal diffuser secured by the socket ring carefully.

3. Install 60 Watt, Type A bulb to the socket of the lamp (BULB NOT INCLUDED).

NOTE: THE DRAWING OF THE LAMP BODY IS FOR REFERENCE ONLY.

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151
www.revelationbyuttermost.com