

REVELATION


by UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE# **R29264-1**

Careful unpack all lamp parts from the carton.

1. Place the **Lamp Base** in an upright position on the floor.
2. Be sure the power to the installation point is power off.
3. Install the correct **Edison Bulb**(Included) onto the lamp before connecting the plug to the electricity outlet Box.
4. Position the Socket through the hole on the top of the **Glass Shade**.
Turn **Knobs** to make the shade fixed.

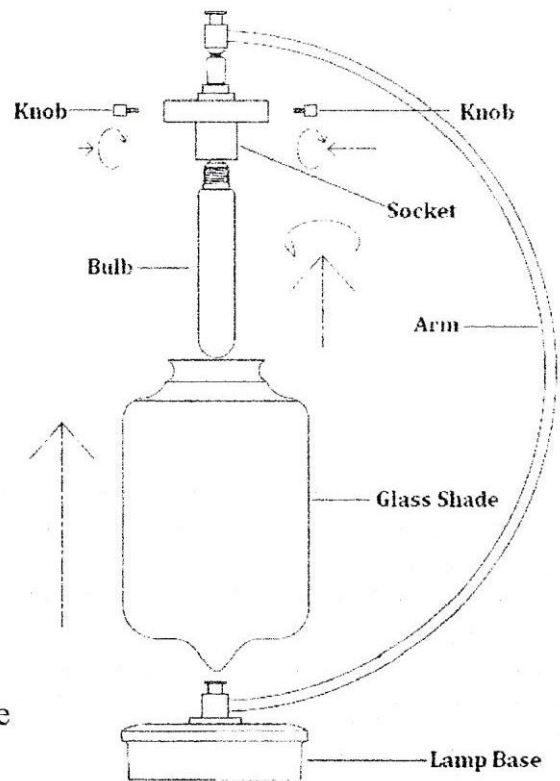

IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.

R29264-1

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24157
www.revelationbyuttermost.com