


# REVELATION

by UTTERMOST

## STYLE# R29663-1

### Careful unpack all lamp parts from the carton.

1. Place the Base in an upright position on the floor, be sure the power to the installation point is power off.
2. Position the Glass Shade on the Socket, located the Metal Collar and Socket Collar with the Plastic Wrench to the Socket. Hand tighten until snug.
3. Install correct Bulbs referring to fixture markings and /or labels for maximum wattage.(Included)
4. Install Metal Mesh onto Socket and connecting the plug to the electricity outlet Box.

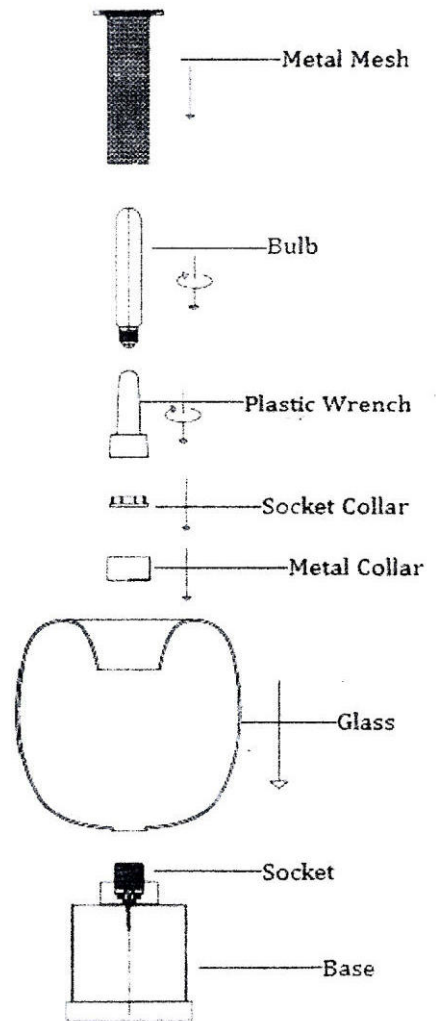

R29663-1

This portable lamp has a polarized plug ( one blade is wider than the other ) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151

[www.revelationbyuttermost.com](http://www.revelationbyuttermost.com)