


REVELATION

by UTTERMOST

Assembly Instruction

STYLE NO:R29744-1

1. Take the parts carefully out of the carton, and place it on a flat surface.
2. Unscrew socket ring(C) out of lampholder(B), then place metal trim and glass shade on top of the base(A).
3. Screw the socket ring(C) back to lampholder(B) to secure the glass shade.
4. Install Edison bulb(F) into socket then place metal trim(G) on the top of glass shade.

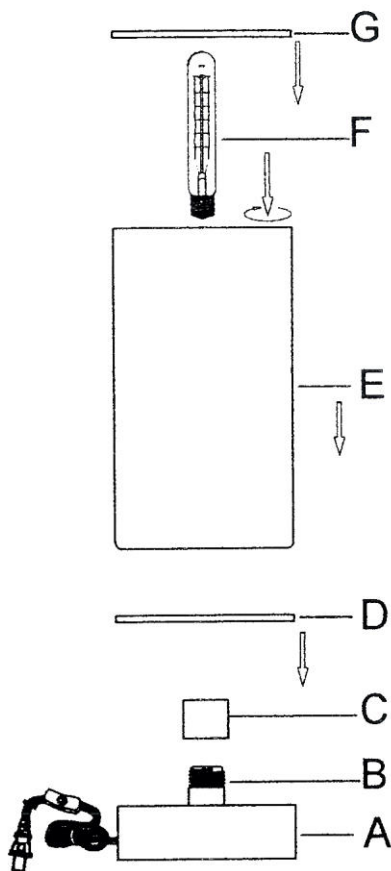

IMPORTANT SAFETY INSTRUCTION:

THIS PORTABLE LAMP HAS A POLARIZED PLUG(ONE BLADE IS WIDER THAN THE OTHER). AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.