
REVELATION

ASSEMBLY INSTRUCTIONS

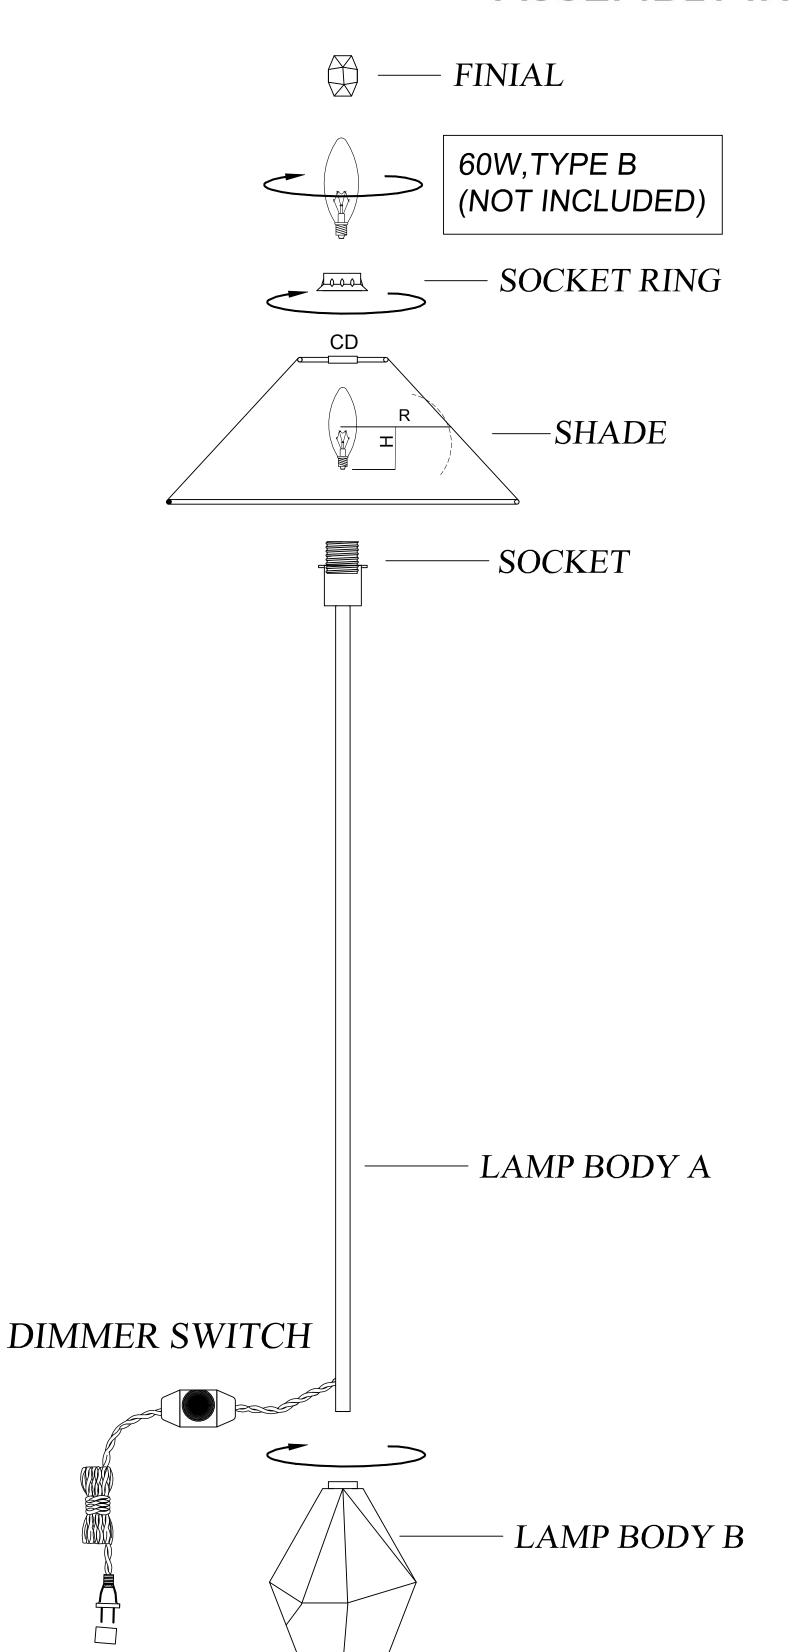

Assembly Instruction

STYLE NO.: R30210-1

- 1. Take the parts carefully out of the carton, and place them on a flat surface, make sure that the parts will not be damaged.
- 2. Screw the lamp body A to lamp body B until tight.
- 3. Place the shade onto the socket, then screw the socket ring clockwise onto the socket until the shade is secured.
- 4. Tighten the finial clockwise until it is secure.

CAUTION: IN ACCORDANCE WITH THE UL REGULATION, THE SHADE SHOULD BE OPEN TOP & OPEN BOTTOM AND "CD" IS BIGGER THAN OR EQUALS TO 3", "R" IS NOT SMALLER THAN $2\frac{1}{2}$ " OR MAY CAUSE FIRE. "H" IS 2".

To clean, wipe with soft dry cloth.

NOTE: THE DRAWING OF THE LAMP BODY IS FOR REFERENCE ONLY.

P.O. Box 558 | 3325 Grassy Hill Road | Rocky Mount, VA | 24151 www.uttermost.com/Revelation