
REVELATION by UTTERMOST ASSEMBLY INSTRUCTIONS

Assembly Instruction

STYLE NO.: R50034

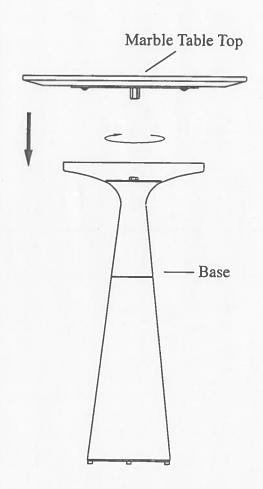

- 1. Take the parts carefully out of the carton, and place them on a flat surface, make sure that the parts will not be damaged.
- 2. Put marble table top to base, aligning the nut with the threaded pipe. Then screw the top on until tight.

To clean, wipe with soft dry cloth.

NOTE: THE DRAWING OF THE TABLE IS FOR REFERENCE ONLY.