


ITEM CODE - R50134

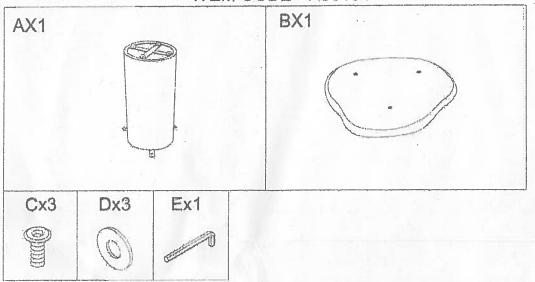

Assembly Notes: Two people recommended for assembly. Do not fully tighten bolts until Step 3.

- 1. Lay the Top (B) upside down on a soft, flat surface and align the wings on Base (A) with the corresponding number on the Top.
- 2. Attach using Bolts (C), Washer (D) and snug up by hand using the provided Allen Wrench (E).
- 3. Once all bolts are attached, fully tighten with the Allen Wrench. Assembly is complete.

