


UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE#: 29259-1

Careful unpack all lamp parts from the carton.

1. Carefully remove all parts from the carton.
2. Place the **Lamp body** in an upright position on the floor.
3. Install **glass shade** onto fitters by fastening counter rings onto threaded **socket**.
4. Located the **Metal Sleeve** and **Socket Collar** with the **Plastic Wrench** to the **Socket** and hang it tighten.
5. Install the correct **Edison Bulb**(Not Included) onto the lamp before connecting the plug to the electricity outlet Box.

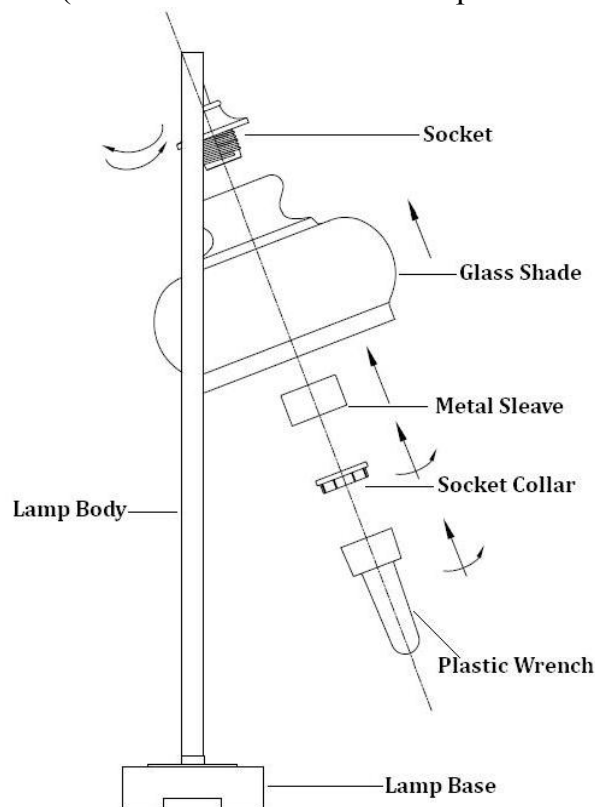

29259-1

IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.