

REVELATION


by UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE# R29641-1

Careful unpack all lamp parts from the carton.

1. Take the lamp carefully out of the Carton, and place it on a flat surface.
2. Place the **Glass** put on the **Base**, and make sure the **Glass hole** match **Base hole**
3. Place **Turn-knob C** through the hole of **Plastic washer C** and Glass. Hand tighten until snug.
Place **Turn-knob B** through the hole of **Plastic washer B** and Glass. Hand tighten until snug.
4. Place **Turn-knob A** through **Stem** of **Plastic washer A** and Glass. Hand tighten until snug.
5. Install correct **Edison Bulbs** (Not Included) referring to fixture markings and /or labels for maximum wattage.

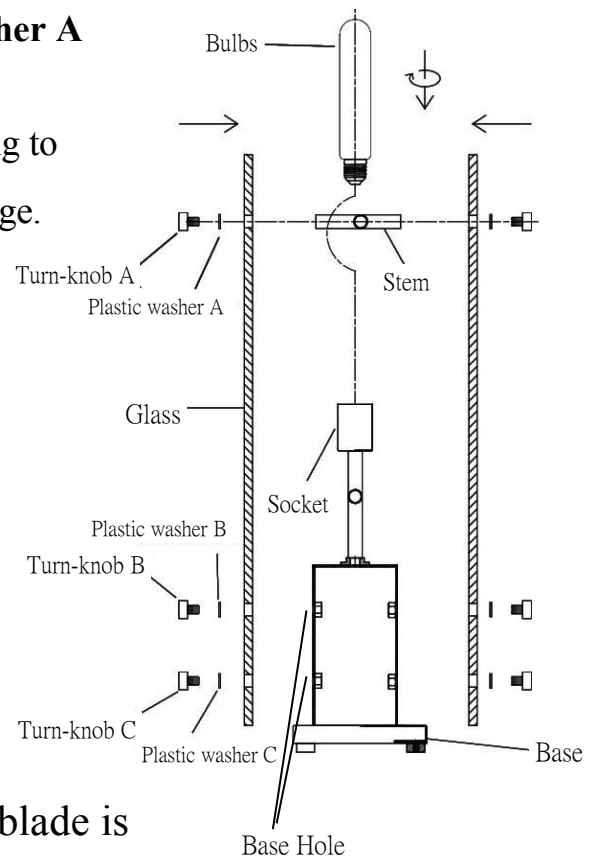

IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.