





# REVELATION

by UTTERMOST

## ASSEMBLY INSTRUCTIONS

# Illustration

STYLE NO. : R21384

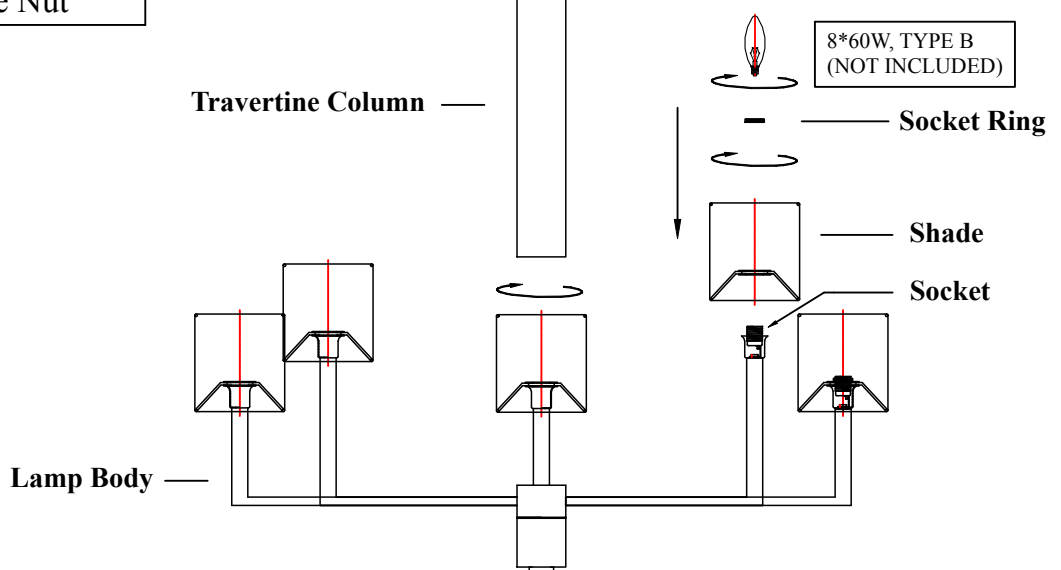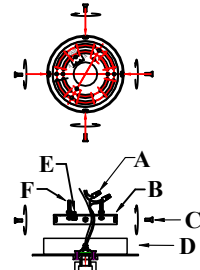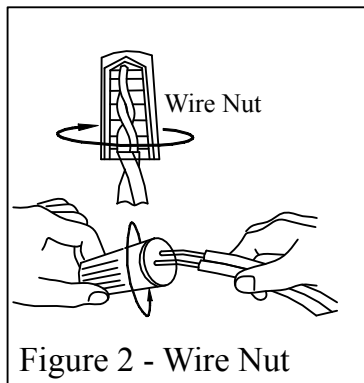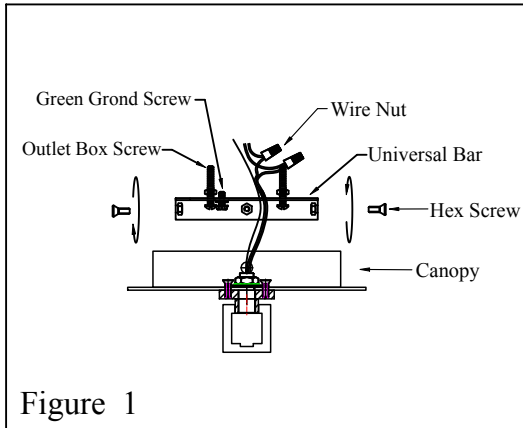

# REVELATION

by UTTERMOST

## ASSEMBLY INSTRUCTIONS

STYLE NO. : R21384

### Parts and Hardware List

<b>A.</b>	<b>Wire Nut</b>	<b>3PCS</b>
<b>B.</b>	<b>Universal Bar</b>	<b>1PC</b>
<b>C.</b>	<b>Hex Screw</b>	<b>4PCS</b>
<b>D.</b>	<b>Canopy</b>	<b>1PC</b>
<b>E.</b>	<b>Green Ground Screw</b>	<b>1PC</b>
<b>F.</b>	<b>Outlet Box Screw</b>	<b>2PCS</b>
<b>G.</b>	<b>Quick Link</b>	<b>2PCS</b>
<b>H.</b>	<b>Chain</b>	<b>1PC</b>

**WARNING: BEFORE INSTALLING**, make sure the electricity supply is shut off to avoid a possible electric shock. We suggest a licensed electrician for all lighting fixture installations.

Please make sure that you have all the parts indicated before you begin assembling this item.

Please read Wiring Instructions before you begin assembling and installing your Ceiling Lamp.

### Assembly Instruction

1. Carefully remove the parts and hardware from the carton.
2. Place the wire through Travertine Column. Then attach the Travertine Column onto the Lamp Body and secure by turning in a clockwise direction.
3. Fasten the Universal Bar (B) onto the Outlet Box by using the Outlet Box Screws (F).
4. Attach one Quick Link (G) on one end of the Chain (H) to the Loop on top of the Travertine Column.
5. **Adjust chain length as needed for your installation, remove excess.** Attach another Quick Link (G) on the other end of the Chain (H) to the Loop on bottom of Canopy (D).
6. Place the wire through every link of the Chain (H) through the Loop and up through the Canopy (D). (See illustration). Adjust cord length as needed for your installation, remove excess.
7. Install both ground wires in the Universal Bar (B) with the Green Ground Screw (E) supplied.
8. Place the white wire, ribbed or tinted wire evenly against the white wire from the outlet box and place the black, smooth or un-tinted wire evenly against the black wire from the outlet box. (Connecting the Wires - See Figure 2)
9. After the wires are connected, tuck them carefully inside the outlet box. Place the Canopy (D) over the outlet box and secure with Hex Screws (C).
10. Place the 8 Shades on the Socket and secure by the Socket Ring. (See Illustration)
11. Install 60 Watt, Type B bulbs (NOT INCLUDED) into the sockets of the fixture.