
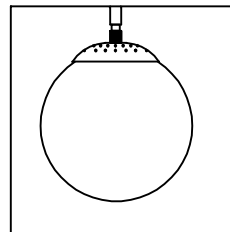
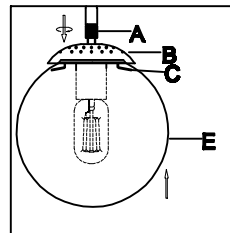
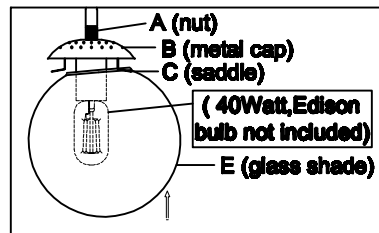


REVELATION

by UTTERMOST

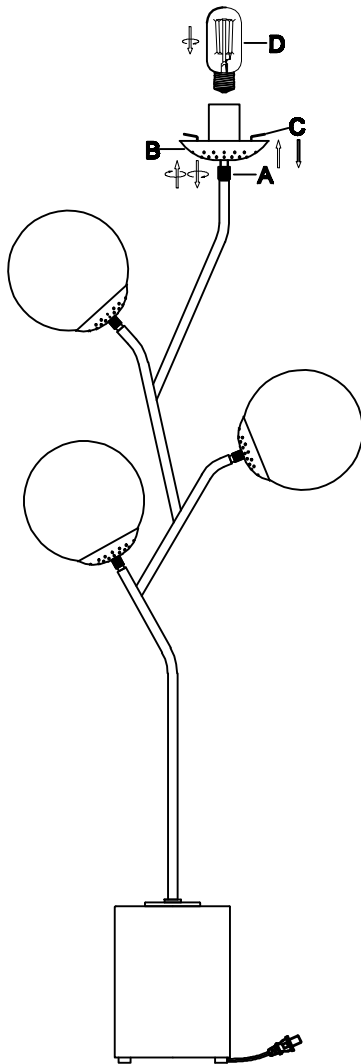

Assembly Instruction

STYLE NO:R28164-1

1. Take the parts carefully out of the carton, and place it on a flat surface, make sure that the parts will not be damaged.
2. Install 40 Watt, Edison bulb (NOT INCLUDED) into the socket of the lamp.
3. Unscrew the nut (A) clockwise to the end.
4. Push the metal cap (B) close to nut (A) by hand, and place the glass shade onto the saddle (C) as illustrated.
5. Screw the nut (A) anticlockwise to tighten the metal cap (B) until the glass shade is secure (E).
6. Repeat the process on the others.
7. During handling and assembly the finish can be marked very easy, use soft damp cloth to remove marks.

IMPORTANT SAFETY INSTRUCTION:

THIS PORTABLE LAMP HAS A POLARIZED PLUG(ONE BLADE IS WIDER THAN THE OTHER). AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.