


Assembly Instruction

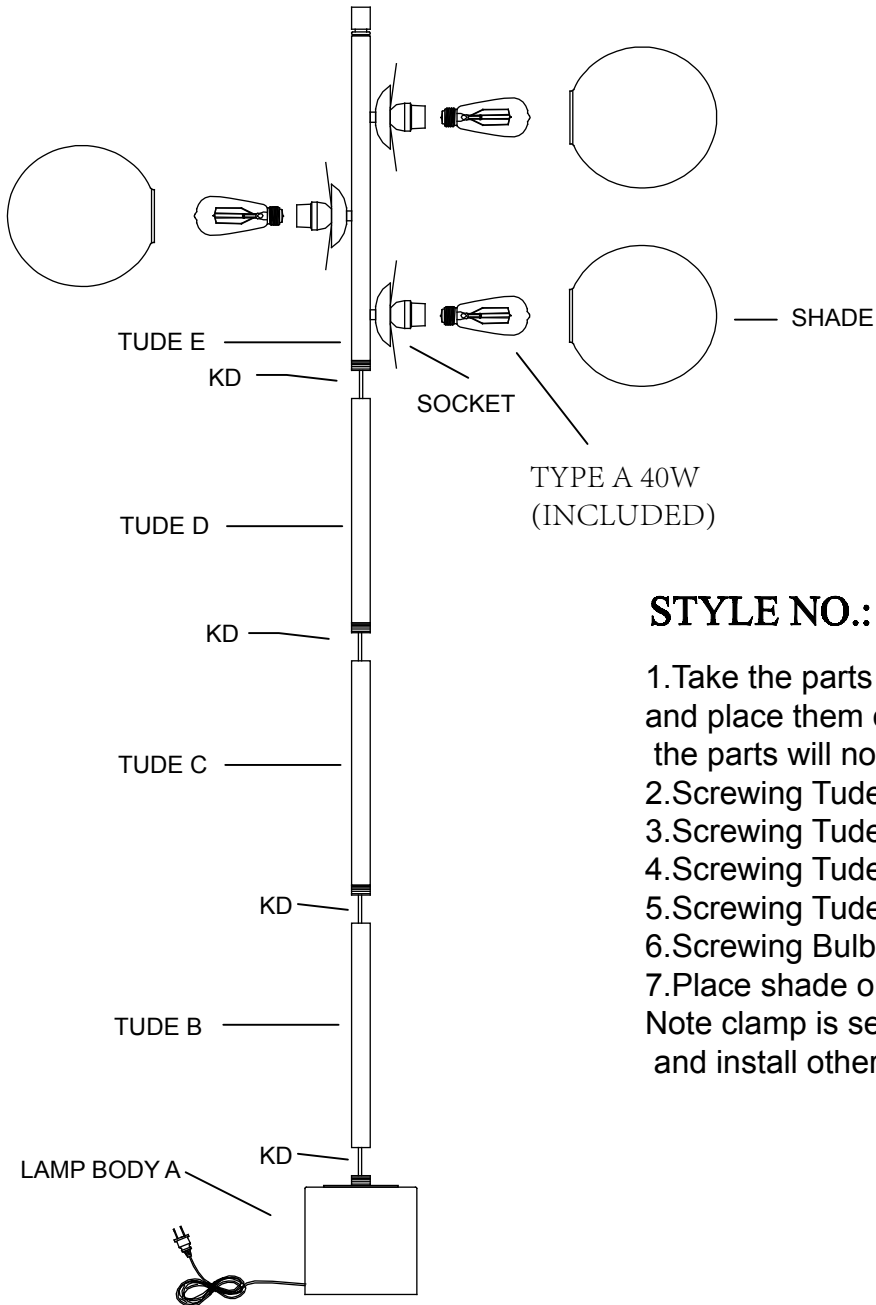

STYLE NO.: W26052-1

1. Take the parts carefully out of carton, and place them on a flat surface, make sure that the parts will not be damaged.
2. Screwing Tude B to Lamp Body A until tight,
3. Screwing Tude C to Tude B until tight,
4. Screwing Tude D to Tude C until tight,
5. Screwing Tude E to Tude C until tight,
6. Screwing Bulb to socket until tight,
7. Place shade onto the top of the socket, Note clamp is set into two in the lampshade first, and install other clips into the lamp shade

To clean, wipe with soft dry cloth.

NOTE: THE DRAWING OF THE LAMP BODY IS FOR REFERENCE ONLY.