
Assembly Instruction

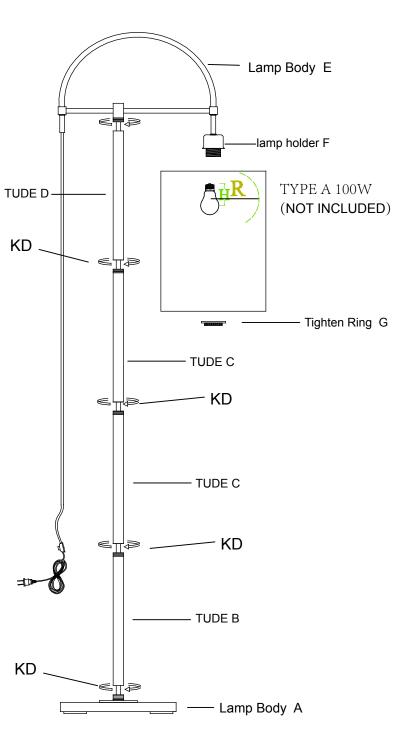

STYLE NO.: W26070-1

- 1. Take the parts carefully out of carton, and place them on a flat surface, make sure that the parts will not be damaged.
- 2. Screwing Tude B to Lamp Body A until tight,
- 3. Screwing Tude C to Tude B until tight,
- 4. Screwing Tude D to Tude C until tight,
- 4. Screwing Lamp Body E to Tude D until tight,
- 5. Remove socket ring (G) from lamp holder (F).
- 6.Place shade onto lamp holder (F)
- 7. Tighten socket ring (G) onto lamp holder (F).

CAUTION; IN ACCORDANCE WITH THE UL REGULATION, THE SHADE SHOULD BE OPEN TOP&OPEN BOTTOM AND "CD"IS BIGGER THAN OR EQUALS TO 4,"R" IS NOT SMALLER THAN 3-1/2"OR MAY CAUSE FIRE "H"IS 3-1/4"

To clean, wipe with soft dry cloth.

NOTE: THE DRAWING OF THE LAMP BODY IS FOR REFERENCE ONLY.