


Assembly Instruction

STYLE NO.: W26082-1

1. Take the parts carefully out of carton, and place them on a flat surface, make sure that the parts will not be damaged.
2. Screwing Tude B to Lamp Body A until tight.
3. Screwing Tude C to Tude B until tight.
4. Screwing Tray D to Tude C until tight.
5. Screwing Tude E to Tray D until tight.
6. Screwing Tude F to Tude E until tight.
5. Screwing Socket G to Tude F until tight.
6. Screwing Threaded Rod H to Socket G until tight.
7. Place the shade onto the top of threaded rod (H) and tighten the finial securing the shade.

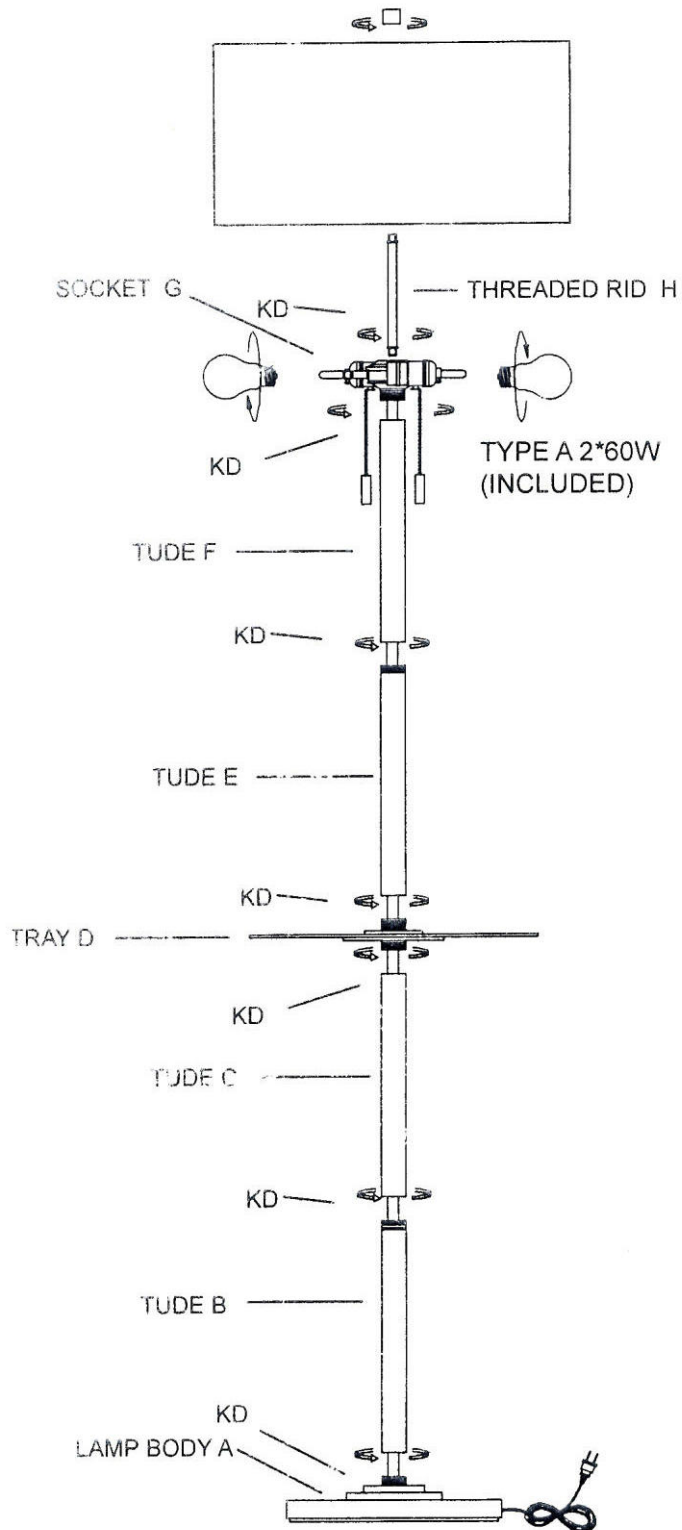

To clean, wipe with soft dry cloth.

NOTE: THE DRAWING OF THE LAMP BODY IS FOR REFERENCE ONLY.