




UTTERMOST

Assembly Instruction

STYLE NO:17500

1. Take the parts carefully out of the carton, and place it on a flat surface, make sure that the parts will not be damaged.
2. Place the glass piece (C) into the saddle (A) as illustrated.
3. Screw 4 pieces nuts (B) with Allen wrench until tight to secure the glass.

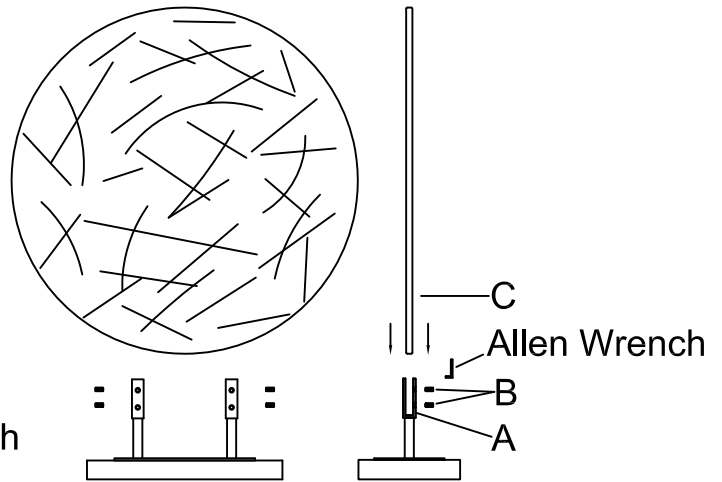

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151

WWW.UTTERMOST.COM