UTTERMOST

ASSEMBLY INSTRUCTIONS

ITEM NO.: 21674

Parts and Hardware List

A.	Wire Nut	5pcs
B.	Green Ground Screw	1pc
C.	Hook	1pc
D.	Hex Nut	1pc
E.	Interior gear washer	1pc
F.	Universal Bar	1pc
G.	Outlet Box Screw	2pcs

H.	Mounting Screw	3pcs
I.	Canopy	1pc
J.	LED driver	1pc
K.	Swivel	1pc
L.	L6" Metal tube	1pc
M.	L12" Metal tube	3pcs
N.	Lamp body	1pc

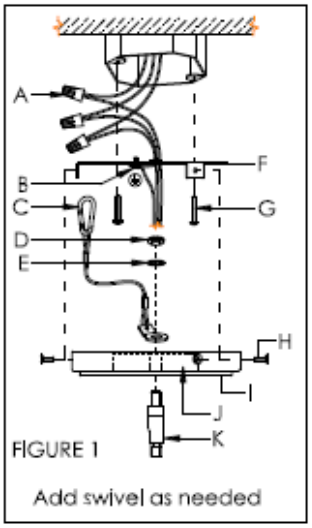


FIGURE 1

Add swivel as needed

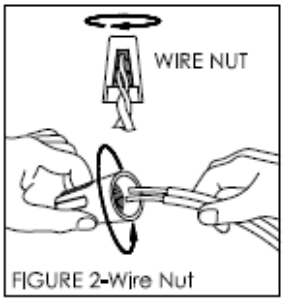
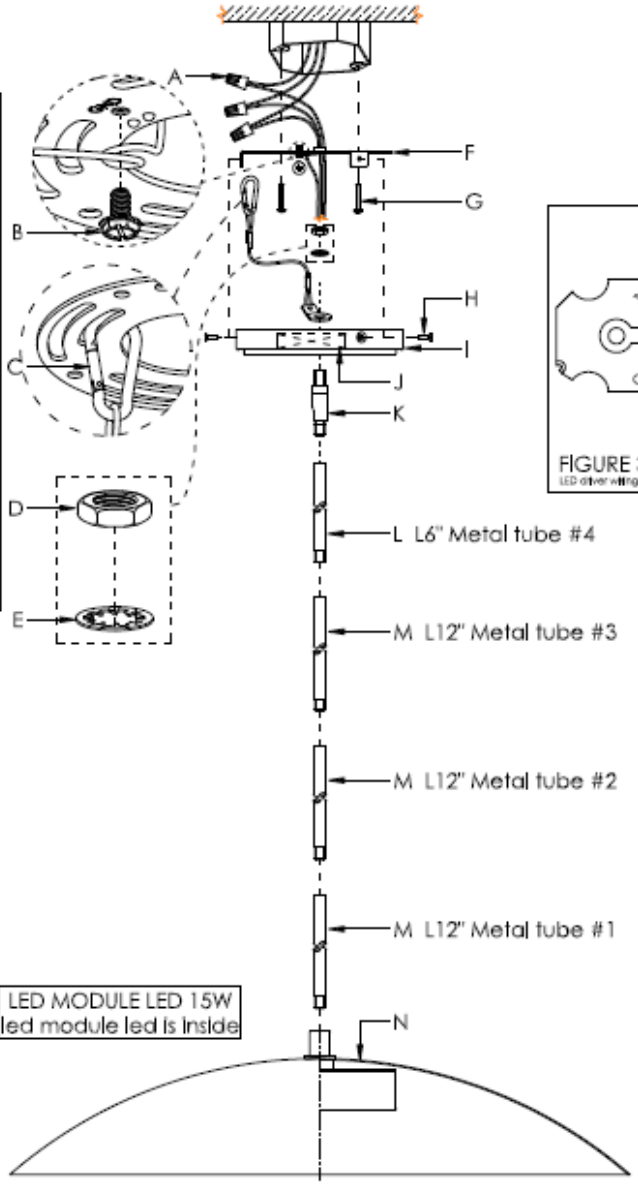


FIGURE 2-Wire Nut



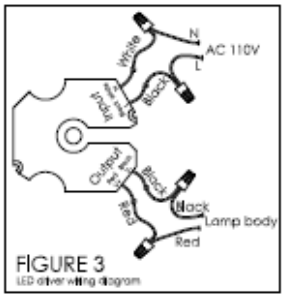


FIGURE 3

LED driver wiring diagram

P.O. Box 558 | 3325 Grassy Hill Road | Rocky Mount, VA | 24151
www.uttermost.com

UTTERMOST

ASSEMBLY INSTRUCTIONS

1. Take the parts carefully out of the carton and place them on a flat surface to prevent any damaged or missing parts.

2. Remove Universal Bar (F) from the Canopy (I) by loosening the Mounting Screw (H). then lock The Universal Bar (F) to the junction box by two Outlet Box Screws (G). (See Figure 1)
3. Adjust the length of the wire needed for your installation, remove excess, determine the number of Rods to be assembled to the Fixture Body as needed for your hanging height, then the metal tube #1 passes through the wire and screw the Metal Tube #1 onto the Lamp body(N) until tight.
4. Repeat Step 3 with the Metal Tube #2, #3 and #4 as needed for your installation height. Then using Hex Nut (D) and Interior gear washer(E) to secure Swivel(J) and Hook (C) tightly. In same direction. If you don't need swivels, you can screw the metal tube#4 on canopy(H) directly.
5. Lock the Hook (C) onto Universal Bar (F). (11.5.2 An access opening or separate means of luminaire support shall be provided if branch circuit connections or internal wiring can be subjected to a force of more than 4.5 kg (10 lbs.) during installation or field inspection.)

6. Connect the red pre-wire of lamp body to the red output wire of LED driver (J), and connect the black pre-wire of lamp body to the black output wire of LED driver (J). (See Figure 3)

7. Connect the neutral wire (white) of LED driver (J) to the ribbed neutral wire from outlet box, and connect the hot wire (black) of LED driver (J) to the smooth hot wire from outlet box. (See Figure 2 & Figure 3)

8. Using the included Green Ground screw (B) to secure the ground wire to the Universal Bar (F).

9. After completed the wiring, carefully tuck the wires into the junction box. Securing the Canopy (I) and the Universal Bar (F) by using three Mounting Screws (H). (See Figure 1)

10. Total wattage 18W LED light source (Built in).

Dimming control compatibility: DIMMABLE WHEN USED WITH A LUTRON DVCL-153P DIMMER